

Removal


1 Remove shield above exhaust pipes.

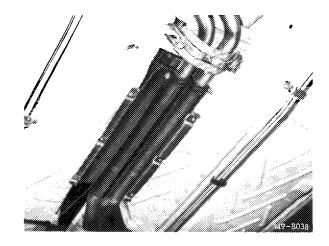


2 Disengage return spring (12) at spring holder (30).

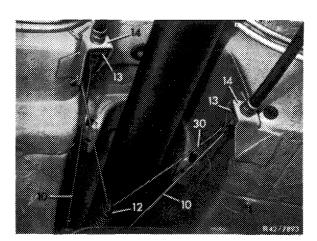


3 Loosen adjusting screw (3) on adjustment bracket (1).

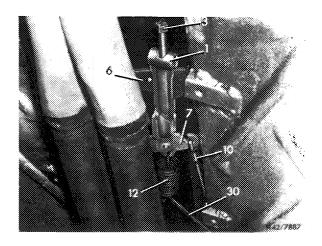


4 Turn steering all the way to left lock and unscrew hexagon nuts (19) in left wheel well.

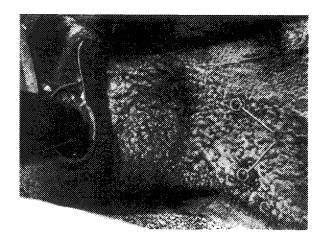


- 5 Take off cover underneath instrument panel in footwell.
- 6 Remove air duct (1).

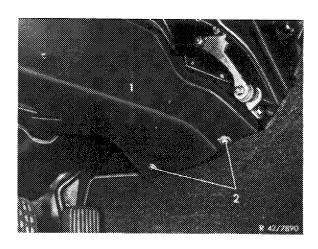


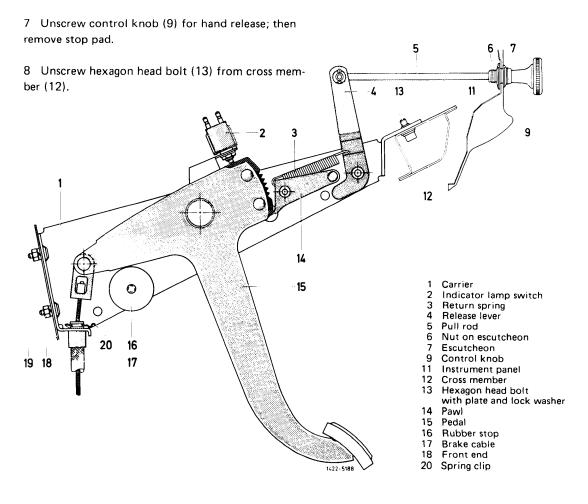

9 Remove bottom left cover in footwell.

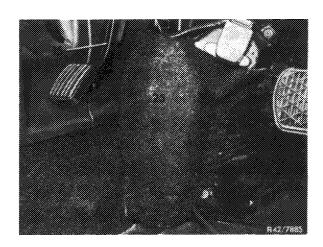


- 10 Detach brake cable (17) at pull bar of pedal. Remove spring clip (20) and take off brake cable.
- 11 Remove pedal assembly.
- 12 Remove plug connection (21) from carrier of pedal system.
- 13 Loosen plug on switch for parking brake indicator lamp.

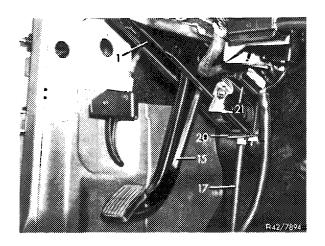


Installation


14 Attach pedal assembly to lefthand wheelhouse, to front end and to cross member under instrument panel, while introducing linkage for manual release into bore of instrument panel.

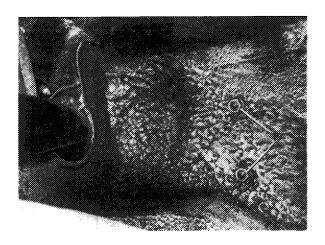


- 15 Attach brake cable (17) to pull bar on pedal and insert spring clip (20) into cable guide.
- 16 Install plug on switch for indicator lamp. Check function of indicator lamp.
- 17 Install plug (21) on carrier.

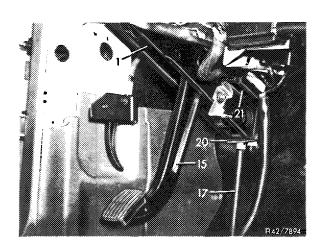

- 18 Install stop pad in pull rod groove and screw control knob for hand release on linkage.
- 19 Install lower cover in footwell.

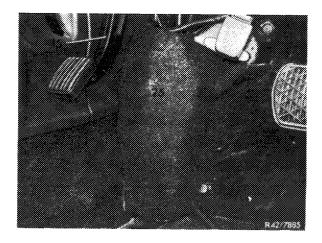

- 20 Install air duct.
- 21 Tighten cover underneath instrument panel in footwell.

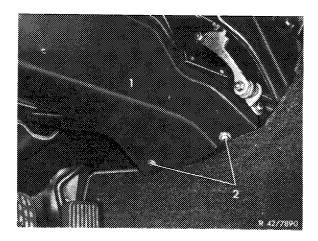

- 22 Attach return spring (12) to spring holder (30).
- 23 Install shield above exhaust pipes.
- 24 Adjust parking brake (42-540).

