



For lowering temperature on battery, the battery is positively vented. The air for venting battery enters through slots in cover under righthand headlamp and flows through a hose from below into battery mount.

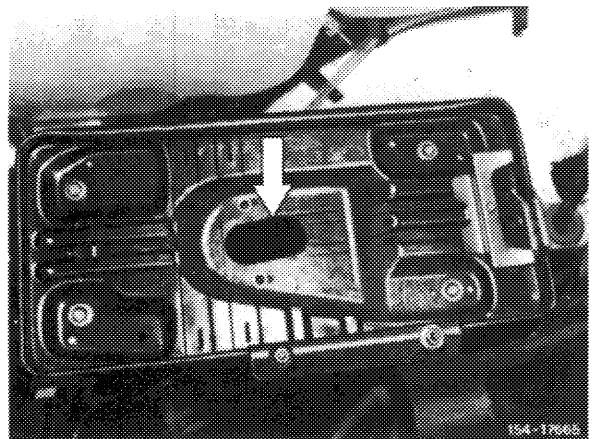

The battery is inclosed in a case which is closed at top by the engine hood.

The air can flow around battery and escape at the front through grommet.

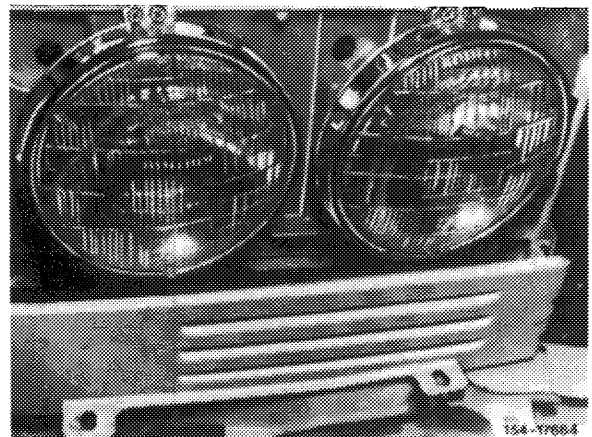