
B. Model 116

Removal

- 1 Remove instrument cluster (54-250).
- 2 Unscrew fastening screws for tachometer. Pull out potentiometer (9) and plug-in clamps (4) for electric line. Remove tachometer.

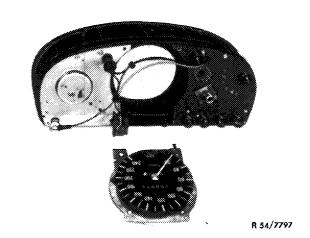


Instrument cluster with time clock and revolution counter

- Electric connection revolution counter
- Fastening screws Instrument lights
- Plug-in clamp

- Electrical connection
 Connection for oil pressure line
 Indicator lamp turnsignal right
 Electric connection for time clock
- Potentiometer

- 10 Indicator lamp brake
 11 Indicator lamp high beam
 12 Indicator lamp battery charge
- Indicator lamp turnsignal left

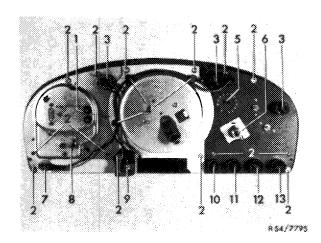

Installation

3 For installation proceed vice versa.