


1 Separate blue plug connection from control unit to sensor (3) by removing lefthand cover under instrument panel.



2 Connect Ohmmeter to blue plug of sensor (3) line-up 1 (green/white) and line-up 2 (black), resistance should be 400 Ohms.

3 If this value is not attained or exceeded, replace sensor (3).

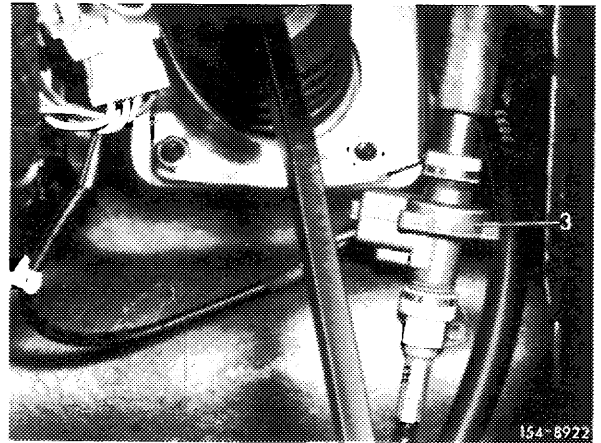