


Removal

1 On model 107, remove covers under instrument panel, glove box and righthand air duct.

2 Disconnect cable control at control end and then at actuator which requires removal of cable clip (12) at insulating mat (5) on model 107.

3 Disconnect line harness at white plug connection of line harness.

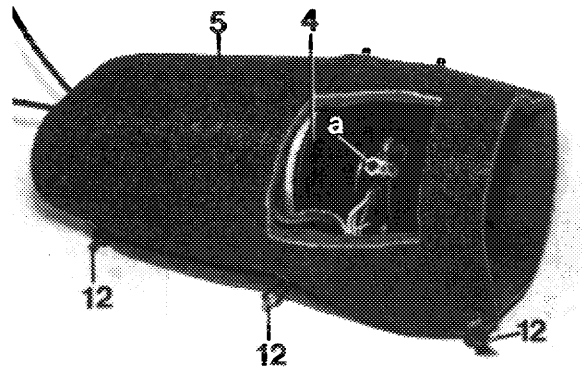


Model 107

154-10033


4 Pull red hose from venting line (5), not required on model 107, also pull off vacuum line (6).

5 Remove spring clip and flange bushing on holder and remove actuator (4).

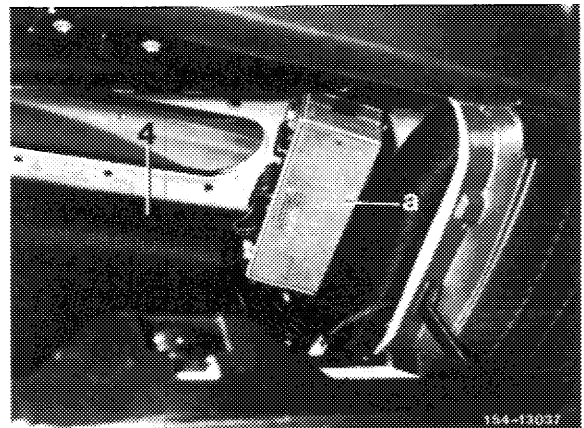


Model 107

154-10037

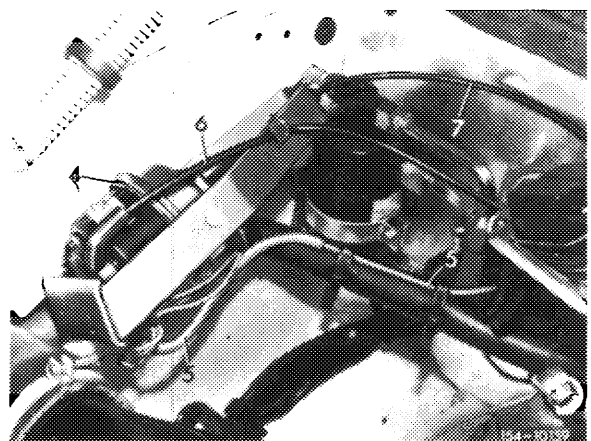


Model 114

154-10037

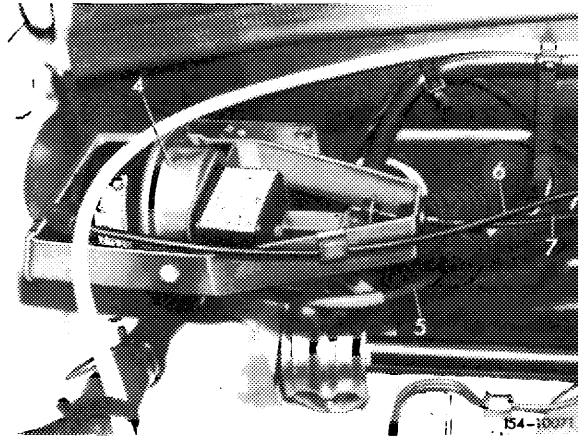

Model 116.020

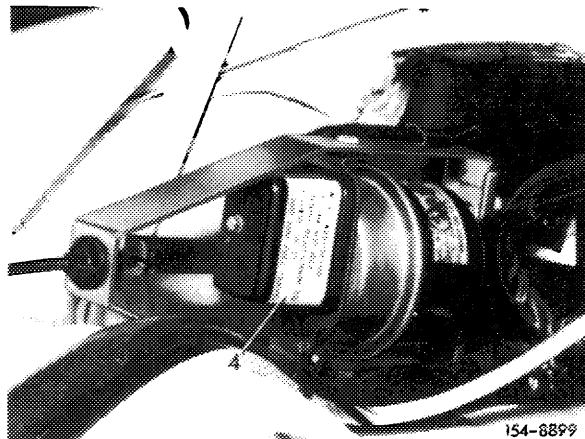

Models 116.032/033

Installation

- 6 For installation proceed vice versa.
- 7 Adjust cable control (54–560).
- 8 Perform function test on road.