

## 54–540 Removal and installation of actuator

### Removal

---


1 Disconnect cable control at control end and then at actuator (1) (54–555).

2 Remove line harness (2), vacuum line (3) and venting line (4) from actuator (1).

3 On models 107.023/024/026/043/044 unscrew actuator (1) with bracket (5) from side member.


4 Loosen nut at rear on bracket of actuator (1) and remove actuator (1).

Models 107.022/042

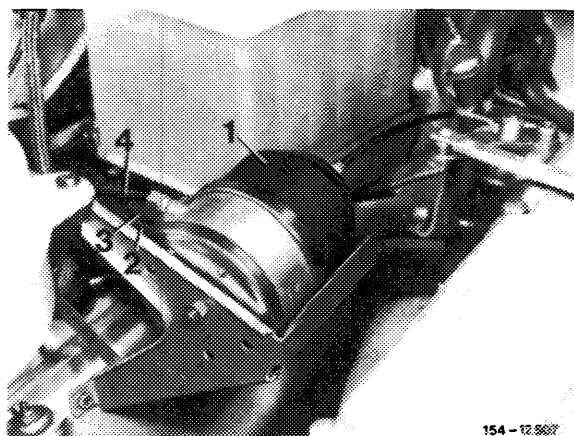


154–12.967

Models 107.023/024/026/043/044

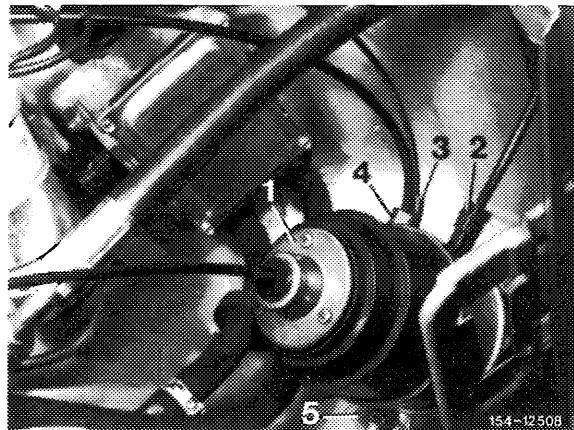


154–12.908

Models 114, 115

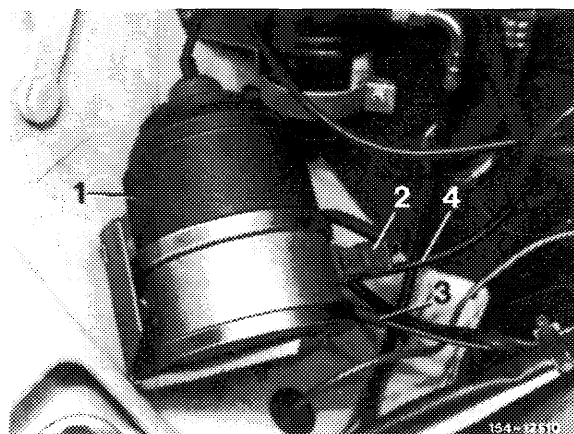


154–12.910


Model 116.020/028/029/03 and 116.024/025 up to  
USA model year 1977, lefthand steering

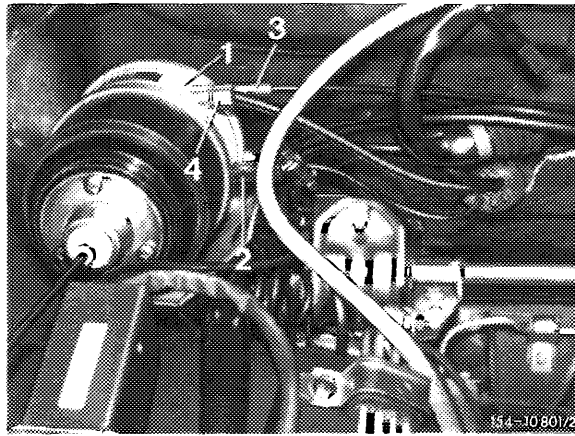


Model 116.024/025 starting USA model year 1978,  
lefthand steering

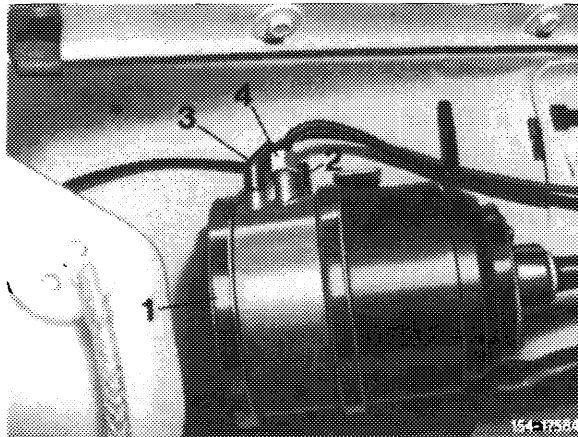


Model 116.120, lefthand steering

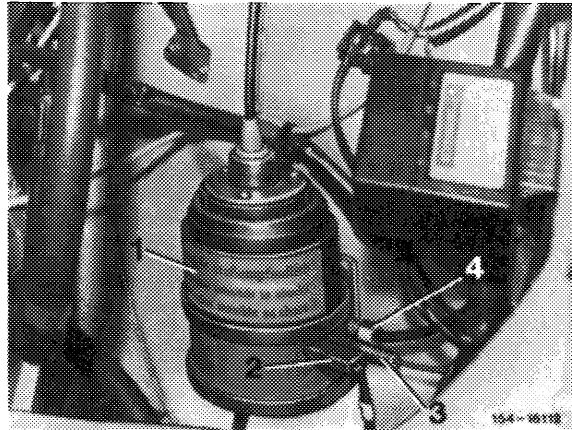


Model 116, righthand steering

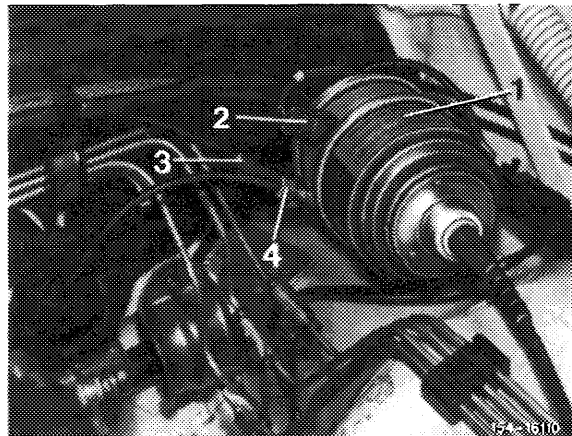

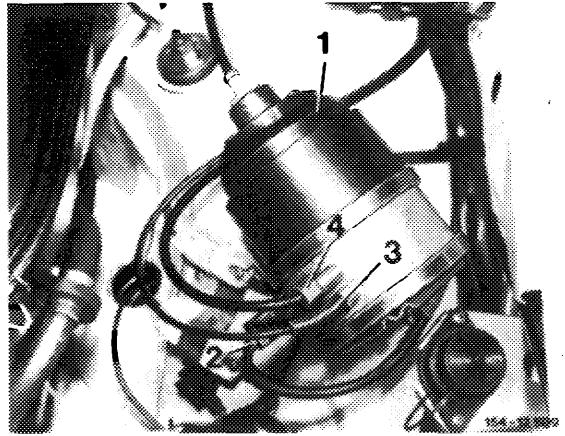

Model 123, lefthand steering

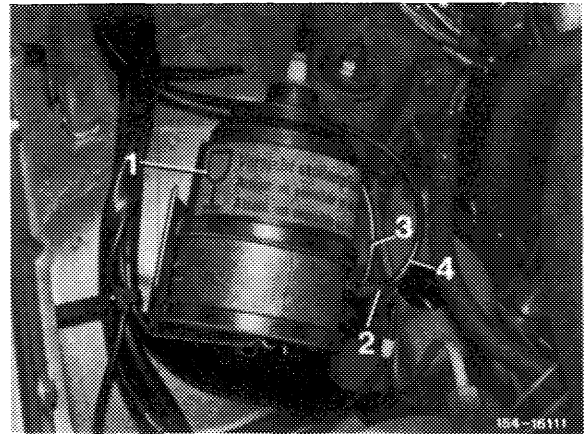

Model 123.033/053/093, righthand steering

### Installation

---

- 5 For installation proceed vice versa.
- 6 Adjust cable control (54–560).
- 7 Perform function test on road.


## 54–545 Removal and installation of switch

---

### Removal

---

- 1 Remove combination switch.
- 2 Remove switch (1) from combination switch (2).

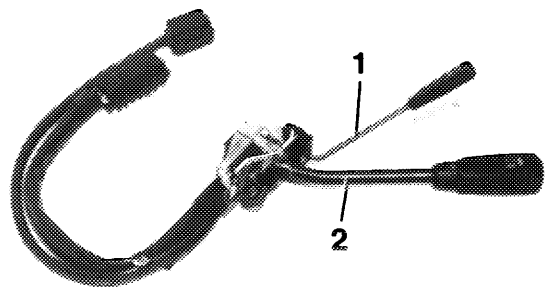

154 - 11976/1

### Installation

---

- 3 For installation proceed vice versa.
- 4 Perform function test on road.