


Removal

1 Remove air filter.

2 Push control lever (13) forward and disconnect clips of wire strand.


3 Compress clips of cable control envelope (14) and remove cable control from bracket (12).

4 Loosen cable control from fastening members on engine and body.

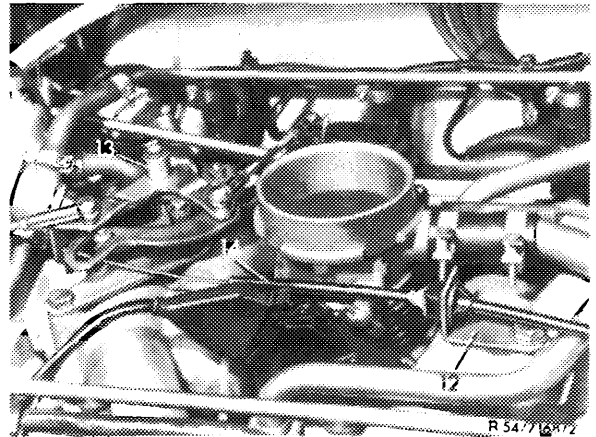

5 Disconnect clips of wire strand on adjusting lever of actuator (4).

6 Compress clips of cable control envelope on mounting bracket of actuator and remove cable control.

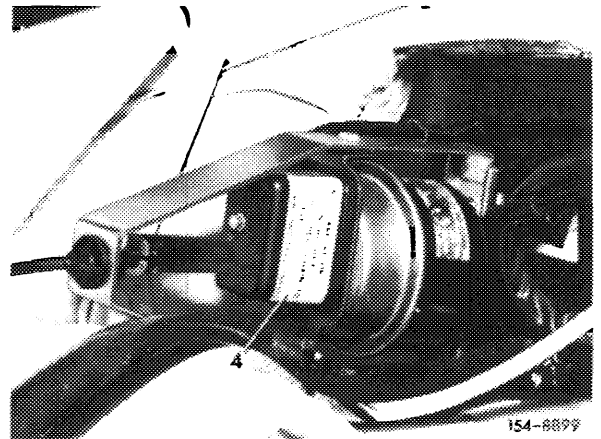

Installation

7 For installation proceed vice versa.

8 Adjust cable control (54–560).

9 Perform function test on road.