

54-555 Removal and installation of cable control


Removal

1 Remove air filter (not required for engines 110.98, 616 and 617).


2 Push control lever (7) forward and disconnect clip (8) of wire strand.

3 Remove lock (10) on clips (9) of cable control envelope.


4 Compress clips (9) of cable control envelope and take control out of bracket.

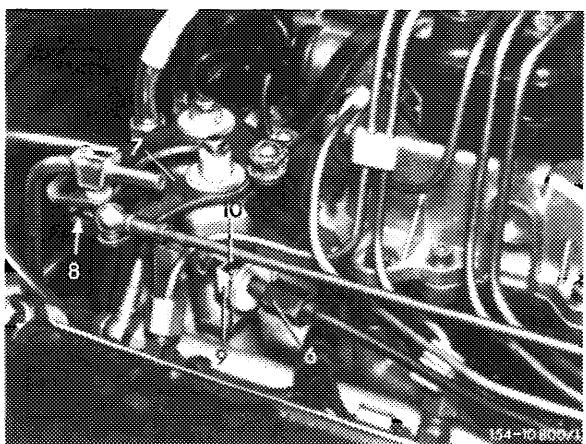


5 Loosen cable control from fastening members of engine and body and remove.

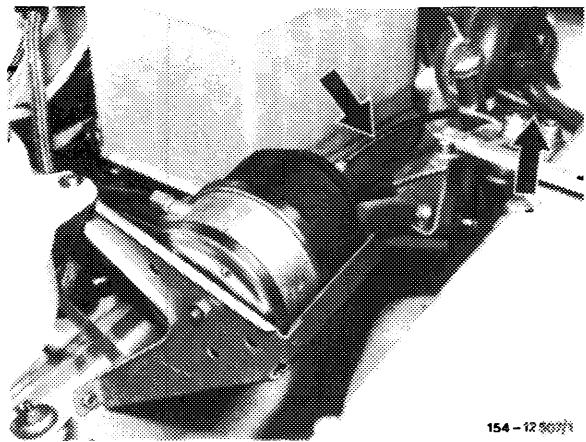

Install cable control model 107.022/042 with electronic injection system from throttle servo unit to front wall.

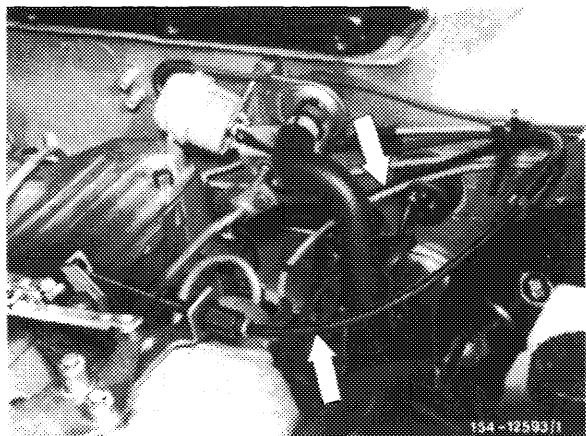


Install cable control model 107.022/042 with electronic injection system from front wall to control

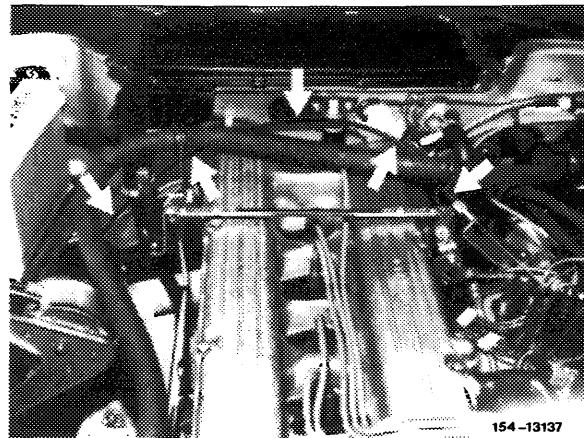


154-13137

Install cable control model 107.022/043 with CIS injection system from front wall to control.

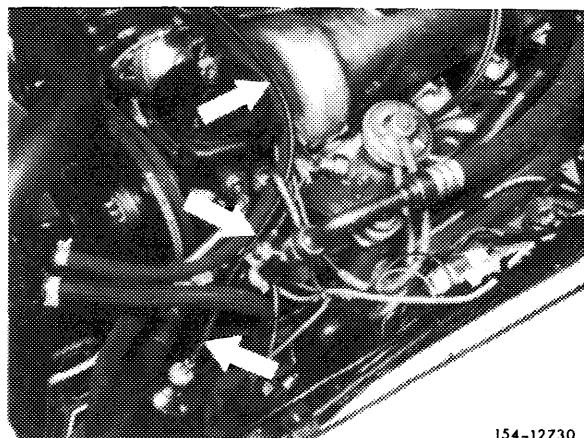


154-12730

Install cable control model 107.023/024/043/044 from actuator to engine.

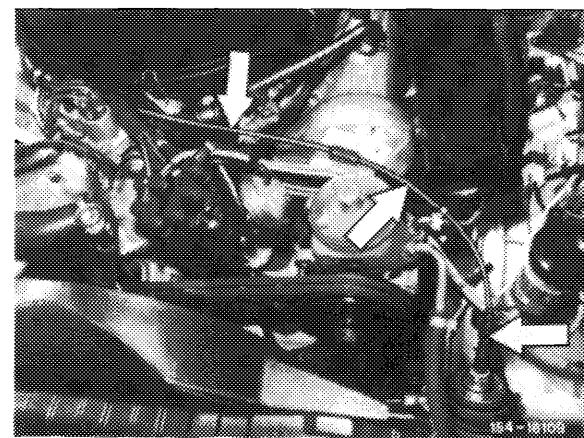


Install cable control model 107.026 from actuator to engine.

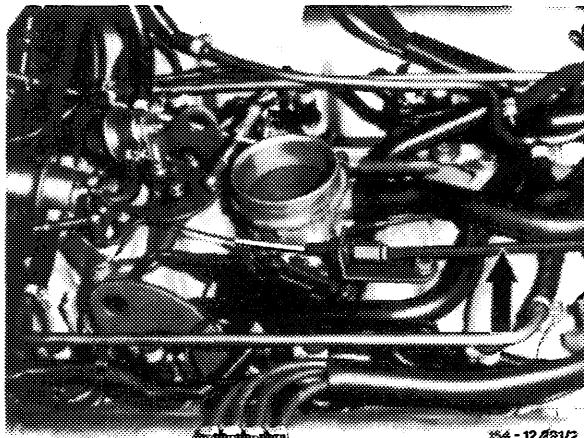


154-12731/2

Install cable control model 107.023/024/043/044 with electronic injection system on engine.


Install cable control model 107.023/024/026/043/044 with CIS injection system on engine.

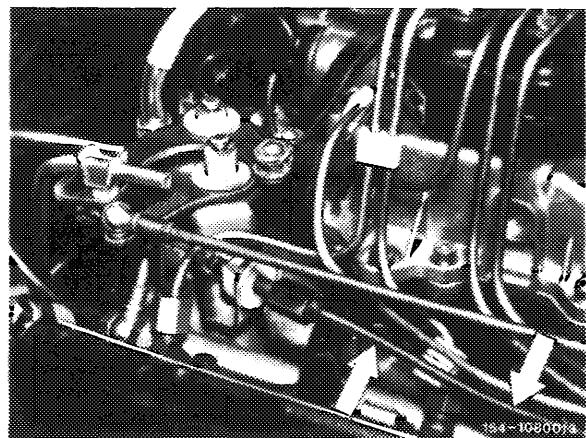


Install cable control models 114.060/073 on front wall

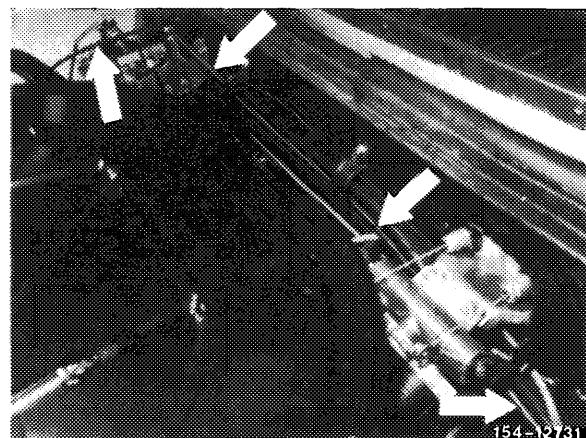


Install cable control model 115.114

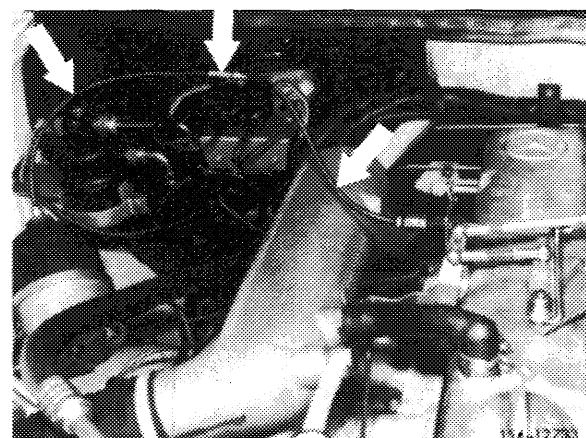


Install cable control model 116.020

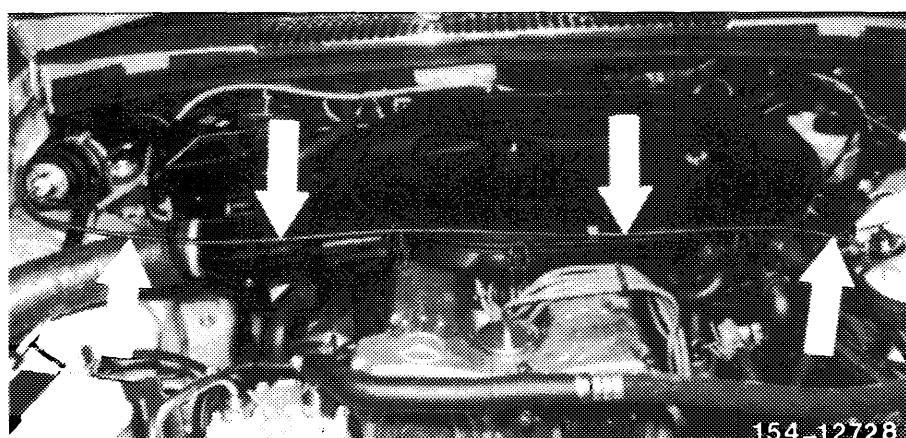


Install cable control models
116.024/025 with electronic
injection system

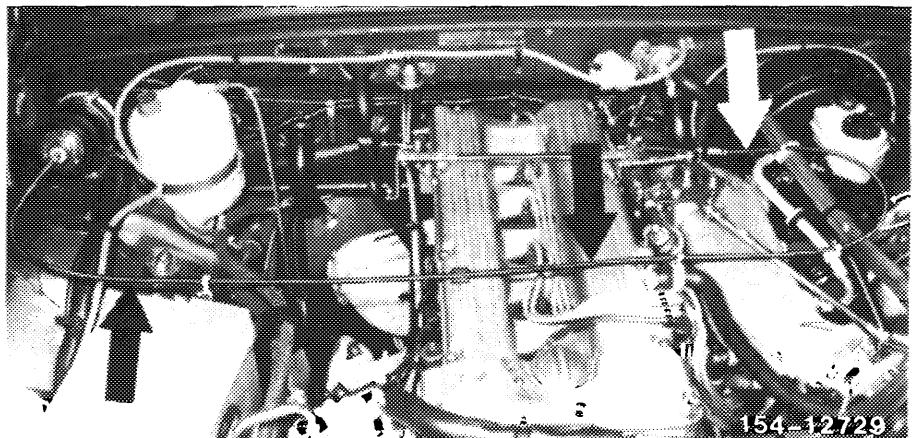


Install cable control models
116.024/025 with CIS in-
jection system up to USA
model year 1979, lefthand
steering

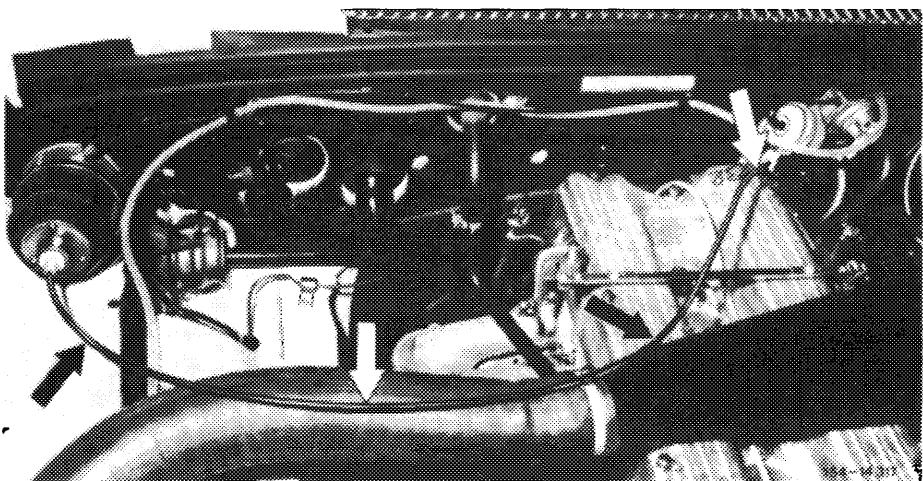


Install cable control models
116.024/025 with CIS injec-
tion system and air condi-
tioning installed up to USA
model year 1979, lefthand
steering

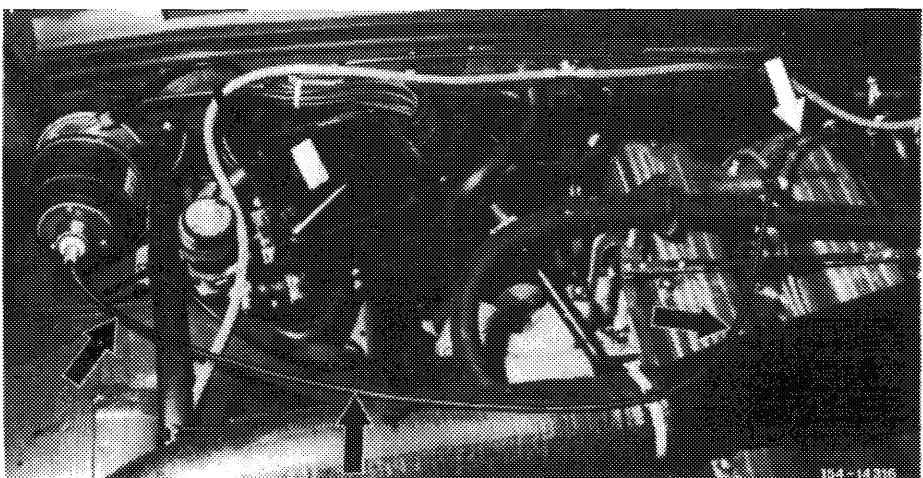


Install cable control models
116.024/025 with CIS injec-
tion system starting USA
model year 1980, lefthand
steering

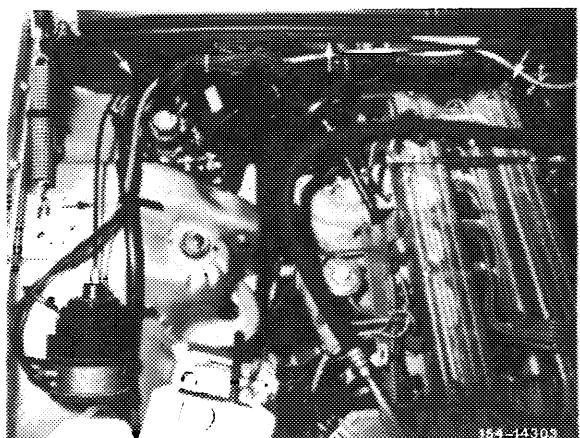


Install cable control models 116.024/025 with CIS
injection system, righthand steering

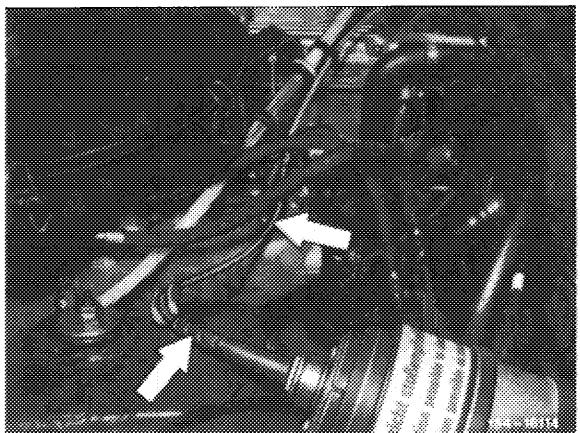


Install cable control models 116.028/029/032/033
on wheel house, lefthand steering

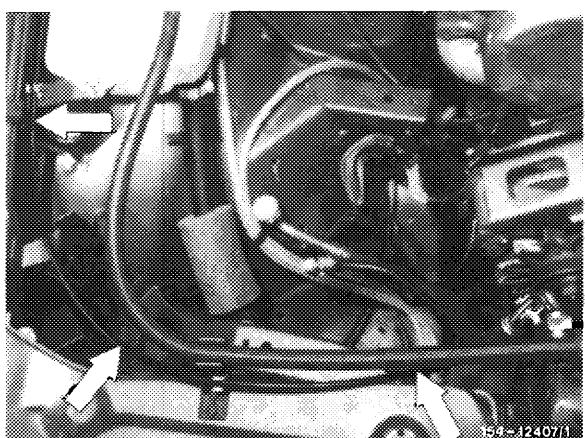


Install cable control models 116.028/029/032/033 with
electronic injection system on engine, lefthand steering

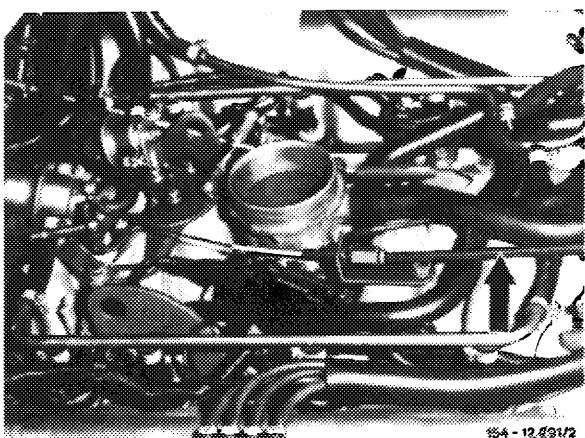


Install cable control models 116.028/029/032/033
with CIS injection system lefthand steering

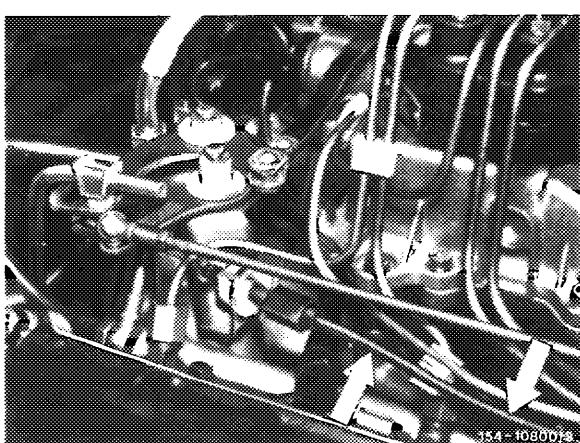


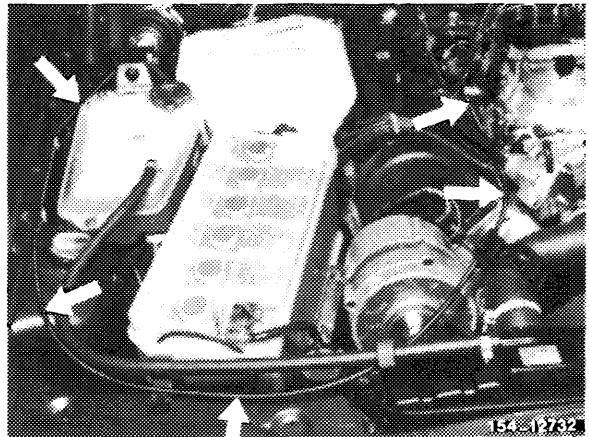

Install cable control model 116.036
(version 1) lefthand steering

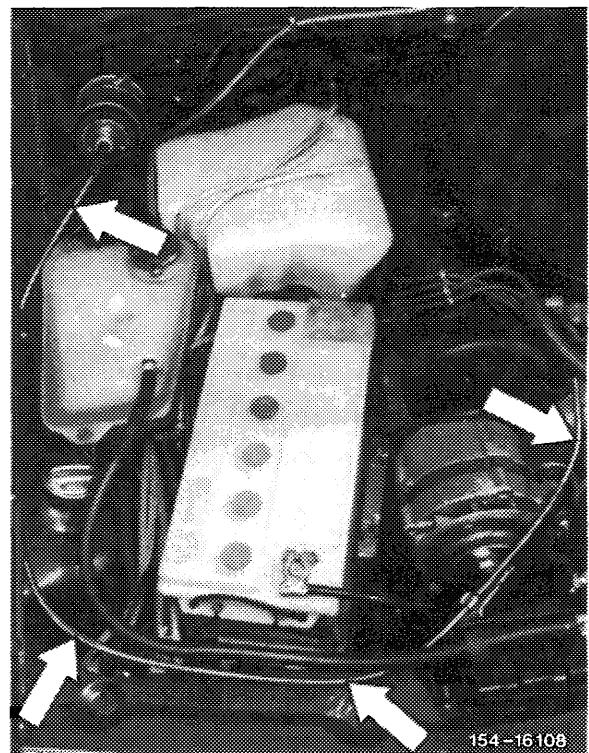


Install cable control model 116.036
(version 2) lefthand steering

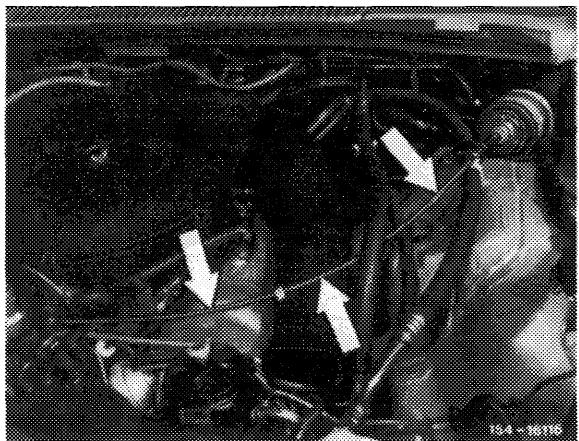


Install cable control model 116.028/029/03
with CIS injection system, righthand steering


Install cable control models 116.028/029/03
with CIS injection system, righthand steering

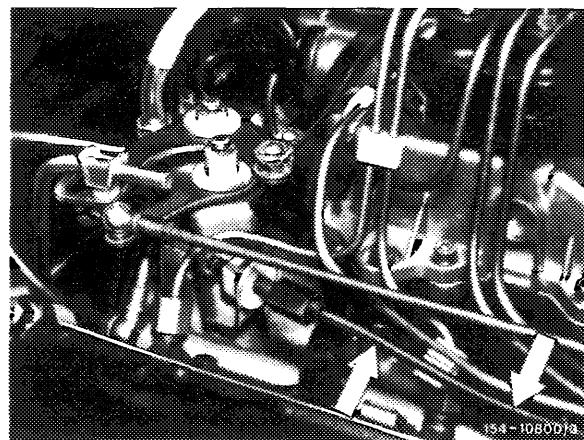


Install cable control model 116.120
up to USA model year 1979

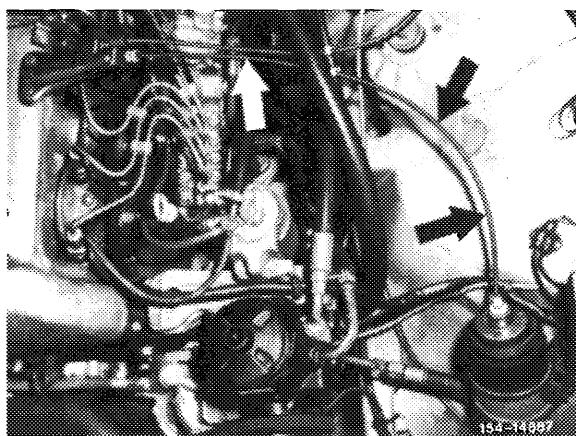


Install cable control model 116.120
starting USA model year 1980

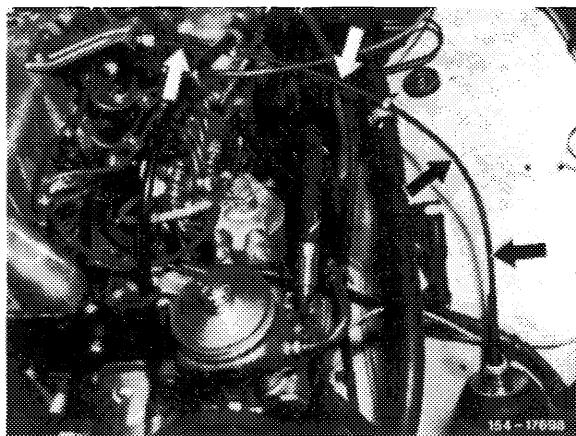


Install cable control models 123.023/083

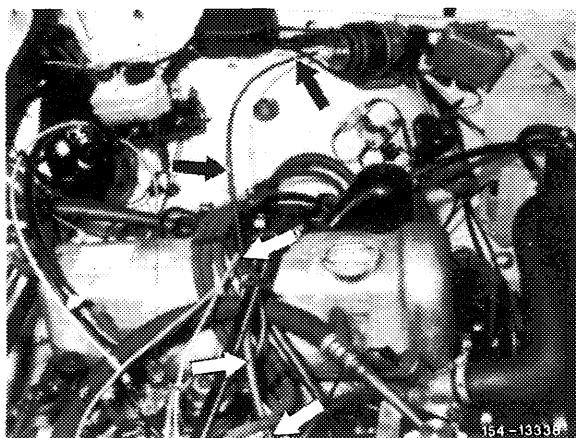


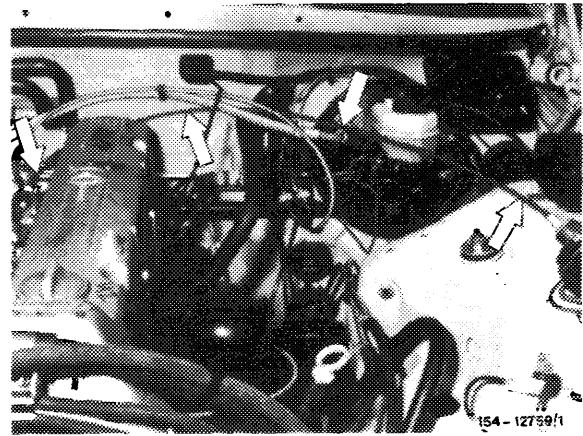


Install cable control models 123.026/086
without longitudinal regulating shaft

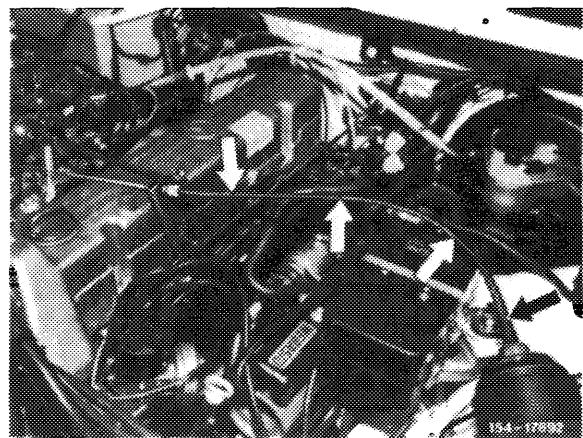


Install cable control models 123.026/086
with longitudinal regulating shaft

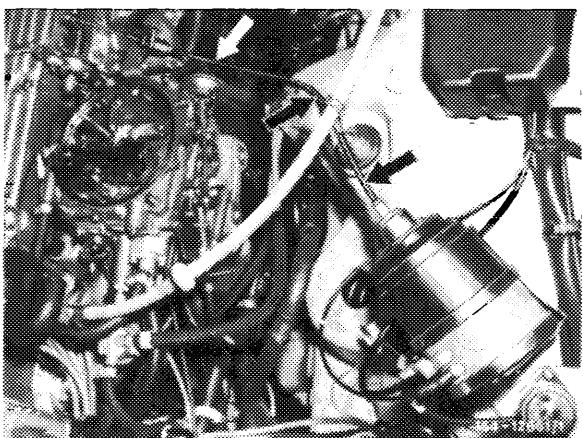


Install cable control model 123.030/050

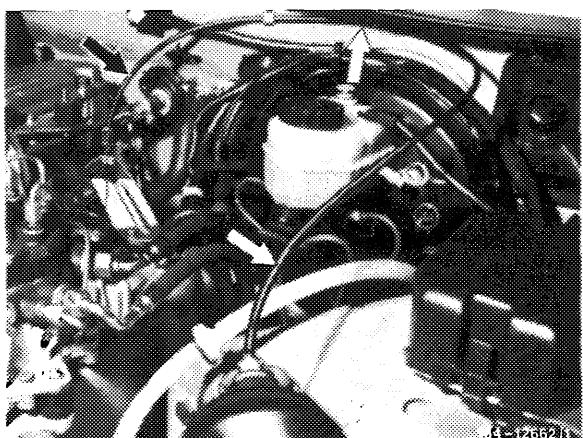


Install cable control models 123.033/053/093,
lefthand steering

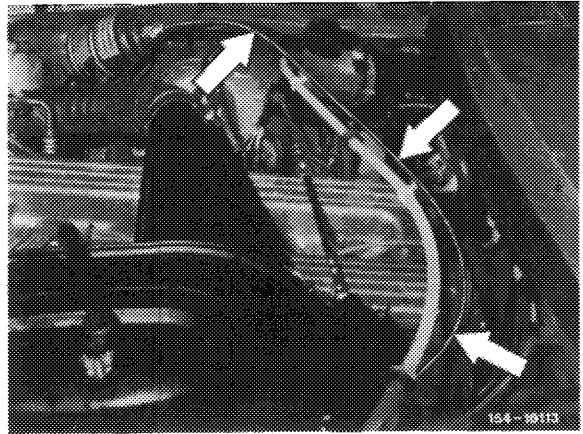

Cable control layout model 123.033/053/093,
righthand steering vehicle

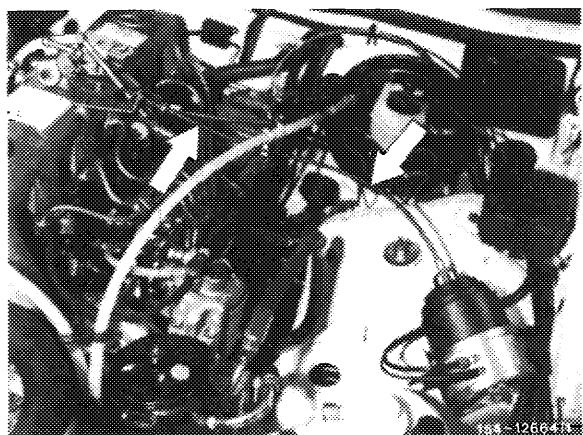


Cable control layout model 123.123/130/150/183/190
lefthand steering vehicle without longitudinal regulating
shaft

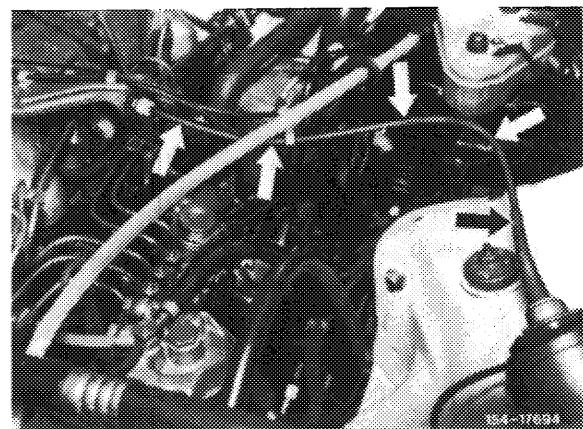

Cable control layout model 123.123/130/150/183/190
lefthand steering vehicle with longitudinal regulating shaft

Installation

-
- 6 For installation proceed vice versa.
 - 7 Adjust cable control (54–560).
 - 8 Operational checkup on road.

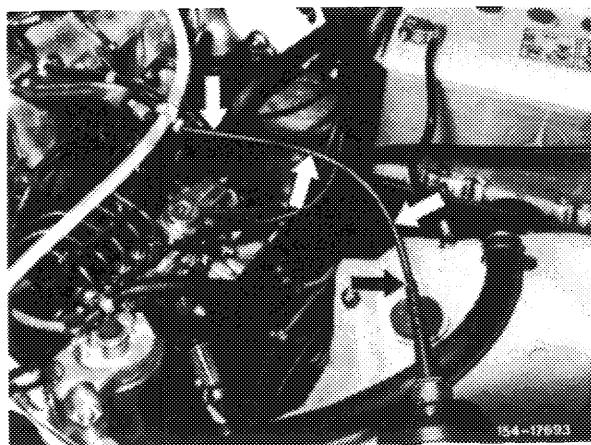

Cable control layout model 123.123/130
righthand steering vehicle