



**Version 1 (except model 116.036 and 123)**

- 1 Switch
  - SP = Resume
  - V = Decel
  - A = Off
  - B = Accel
- 2 Control unit
- 3 Sensor
- 4 Regulating unit
- 5 Stop lamp switch
- 6 Stop lamp
- a Terminal 15

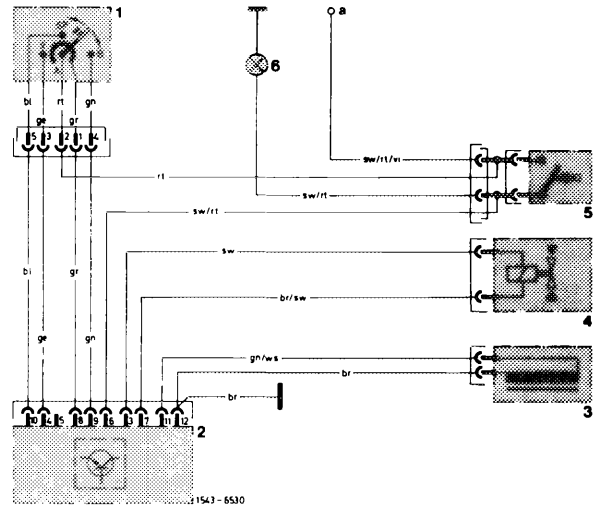


**Version 1 (model 116.036 up to chassis end No. 000 689)**

- 1 Switch
  - SP = Resume
  - V = Decel
  - A = Off
  - B = Accel
- 2 Control unit
- 3 Sensor
- 4 Regulating unit
- 5 Stop lamp switch
- 6 Stop lamp
- a Terminal 15
- b Fuse 4 in main fuse box

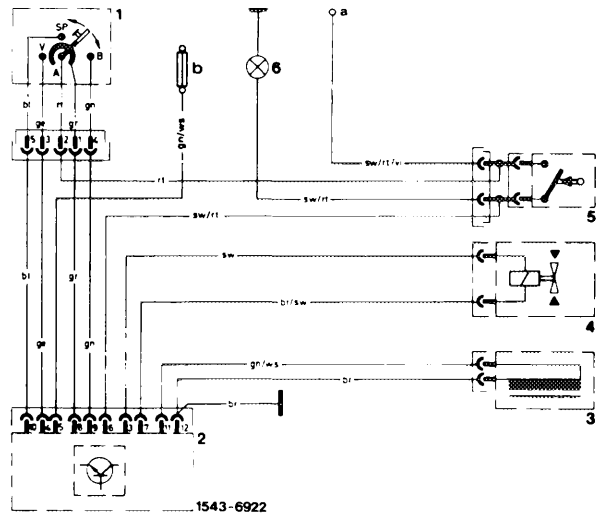

**Version 2 all models (model 123 with automatic transmission from start of production)**

- 1 Switch
  - SP = Resume
  - V = Decel
  - A = Off
  - B = Accel
- 2 Control unit
- 3 Sensor
- 4 Regulating unit
- 5 Stop lamp switch
- 6 Stop lamp
- a Terminal 15

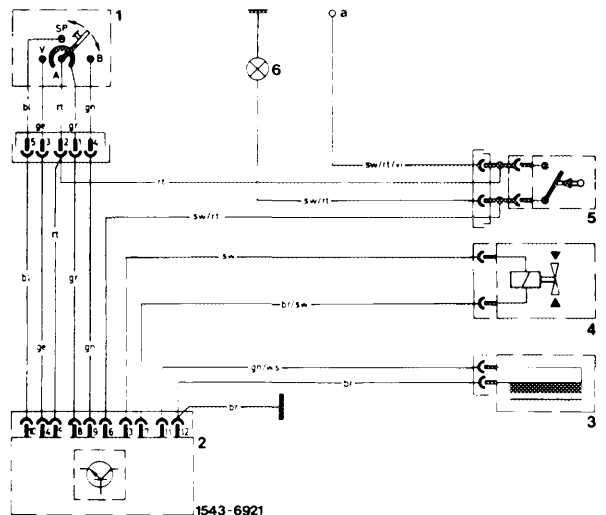

**Model 123 with manual transmission**

- 1 Switch
  - SP = Resume
  - V = Decel
  - A = Off
  - B = Accel
- 2 Control unit
- 3 Sensor
- 4 Actuator
- 5 Clutch switch
- 6 Stop light switch
- 7 Stop light
- a Terminal 15
- b Plug connection
- c Plug connection

