



Removal


- 1 Remove both floor mats in driver's compartment.
- 2 Remove covering on shift lever (68-230).
- 3 Pull handles on operating levers for heater control.
- 4 Push cover strip (1) on operating levers out of housing by means of a plastic wedge.
- 5 Pull-off operating knob for fan and unscrew nut (SW 24) behind.
- 6 Unscrew both screws (2) on covering (3).
- 7 Remove covering (3) with switches.

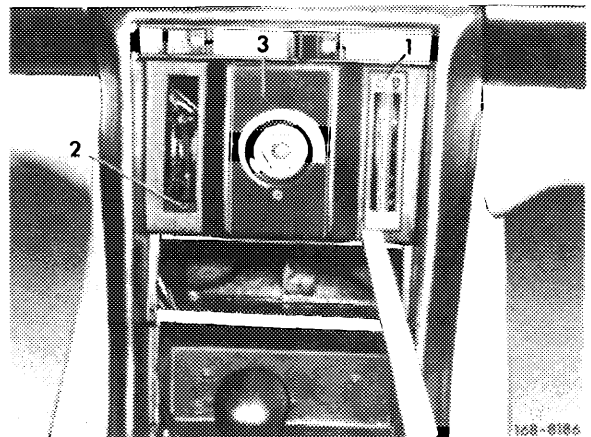

- 8 Pull-off plug and light cable.
- 9 Remove radio.
- 10 Unscrew screws (4) on center console top.

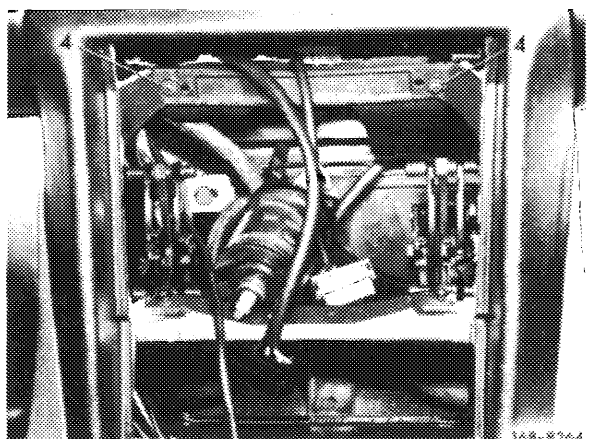

11 Unscrew screws (5) on both sides of front wall and screws (6) on tunnel.

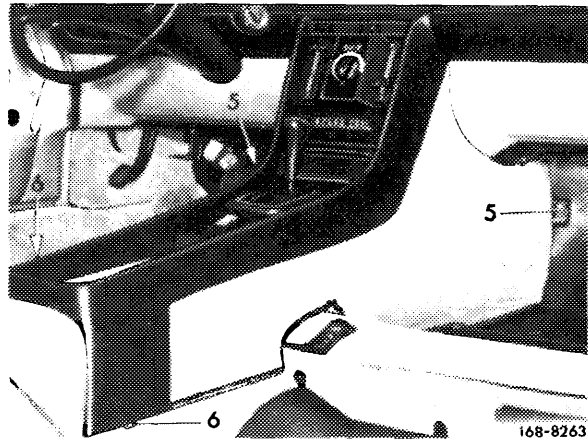

Installation

12 For installation proceed vice versa.