


### Removal

---

- 1 Remove rear backrest (91—170).
- 2 Remove sheet metal angle piece at top on edge protection.
- 3 Pull edge protection (1) at top sideways.
- 4 Unscrew screw (2).
- 5 Pull-off panelling on rear pillar (3) in forward direction.

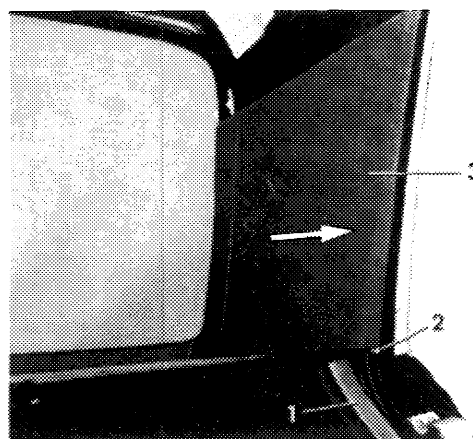

68-8195

### Installation

---

- 6 For installation proceed vice versa.