

68–458 Removal and installation of hat rack

Removal

- 1 Remove rear seat back rest (91–170).
- 2 Unscrew four nuts on stiffening of hat rack from direction of trunk.
- 3 Push out stiffening of hat rack in upward direction.
- 4 Pull out hat rack in forward direction.

Installation

- 5 For installation proceed vice versa.