


## 68-470 Removal and installation of cover on box-type pillar

---

### Removal

---

- 1 Unscrew screws (1) on cover (2) bottom.
- 2 Pull cover (2) out of box-type pillar in downward direction.

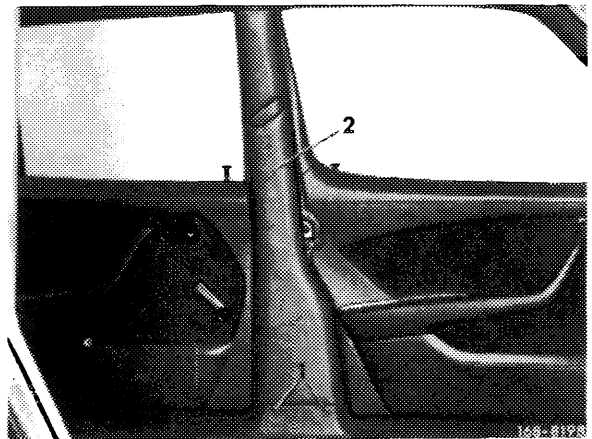

### Installation

---

- 3 For installation proceed vice versa.