


68–515 Removal and installation of trim strip left or right on snap lock of trunk lid

Removal

- 1 Remove tail light.
- 2 Unscrew two fastening nuts on trim strip from direction of trunk.
- 3 Unscrew both sheet–metal screws (1) laterally on trim strip.
- 4 Unscrew connecting screw (2) and pull off trim strip in rear direction.

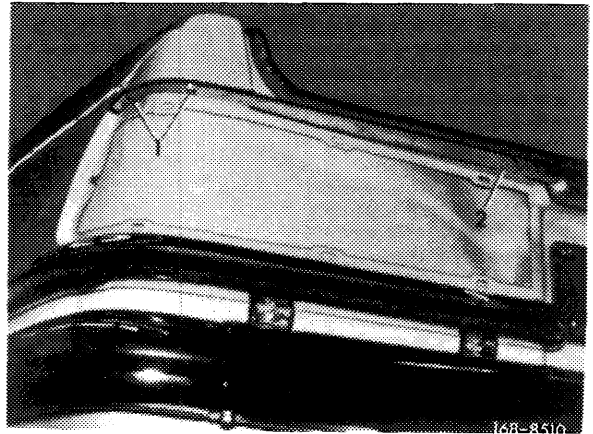

Installation

- 5 For installation proceed vice versa.

Note: Watch out for defect water sealing when assembling components.