


68–516 Removal and installation of trim strip at center of trunk lid snap lock

Removal

- 1 Remove trim strip left and right on snap lock of trunk lid (68–515).
- 2 Unscrew screws (1) and remove cover (2).
- 3 Unscrew screws (3) and remove lock bottom (4).
- 4 Remove both covers on rear center piece inside.
- 5 Pull off plug coupler for license plate lights at rear tail light.
- 6 Unscrew four fastening nuts on trim strip from direction of trunk and pull out trim strip toward the rear.

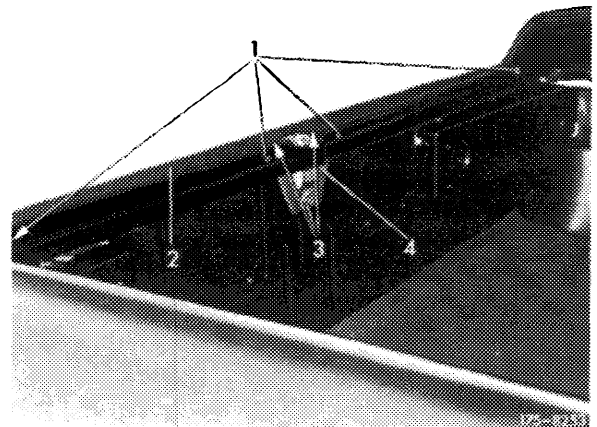

Installation

- 7 For installation proceed vice versa.

Note: Watch out for defect water sealing when assembling components.