


Removal


Model 116.020 up to chassis end No. 000 636
Model 116.024 up to chassis end No. 000 680
Model 116.028 up to chassis end No. 001 484

1a Remove cover (1) on ornamental trim (2) with plastic wedge.

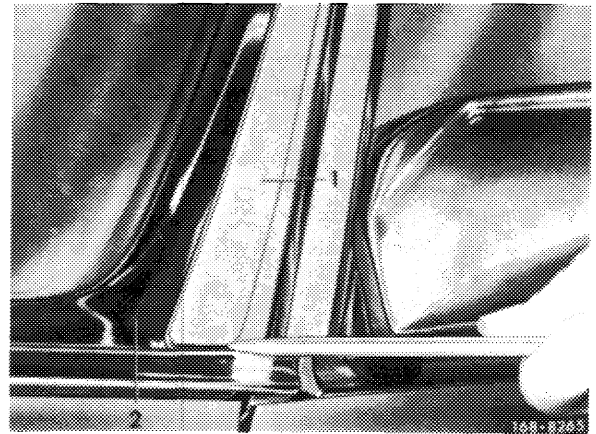

Model 116.020 as from chassis end No. 000 637
Model 116.024 as from chassis end No. 000 681
Model 116.028 as from chassis end No. 001 485


1b Remove cover (1) at top at ornamental trim (2) by means of plastic wedge from both **upper** holders (4) as shown in Fig. 2.

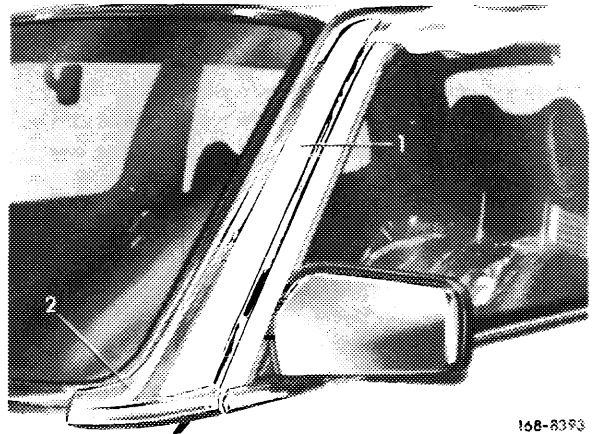


Pull cover (1) out of trimstrip clip (11) in upward direction.

2 Unscrew four screws (3) on ornamental trim (2).

3 Remove both holders (4) and trimstrip clip (11).

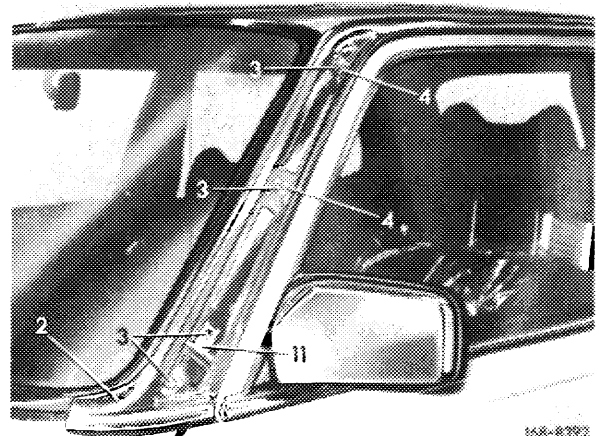

4 Unscrew lateral sheet metal screws (5) and remove ornamental trim (2) in upward direction.

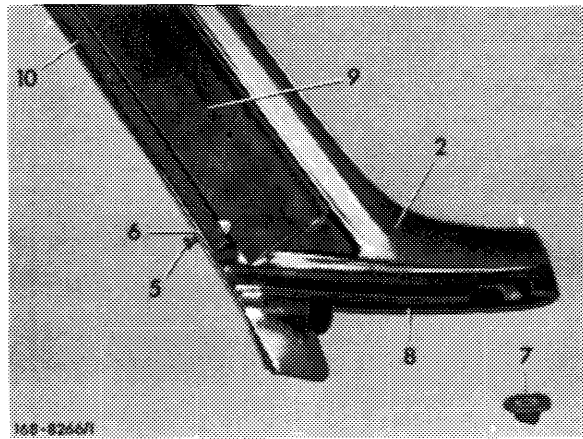


Installation

5 Force dowel (6) into front wall pillar.

6 Force dowel (7) into center piece under wind-shield.

7 Glue shim (9) and seals (8 and 10) to ornamental trim.

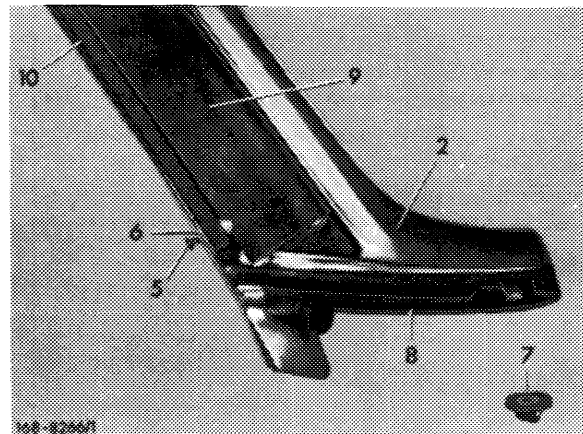

8 For further installation proceed vice versa.

Note: On vehicles, on which cover (1) is attached with plastic holders (4) only, the lower holder can be replaced against a trimstrip clip (11), Part No. 003 988 54 78.