


## 72-180 Removal and installation of window opener

---

### Removal

---

- 1 Remove door lining (72-100).
- 2 Remove plastic sheeting.
- 3 Remove safety lock on window opener arm.
- 4 Crank window up and clamp with wedge.
- 5 Push window opener out of window raising rail and crank window opener down again.
- 6 Unscrew screws (1).
- 7 Remove window opener

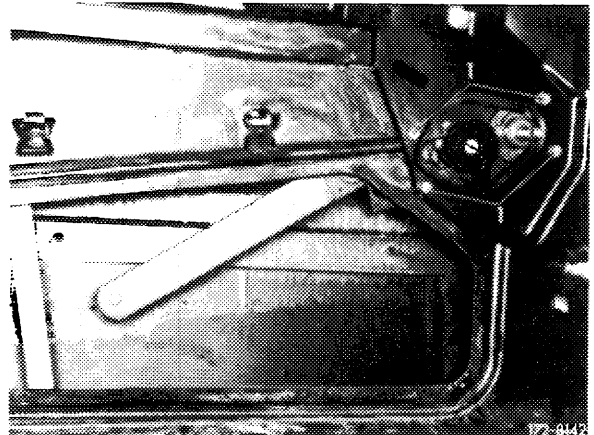

### Installation

---

- 8 For installation proceed vice versa.