
Removal

- 1 Let crank window run down.
- 2 Force rocker switch (1) out of door lining and remove.

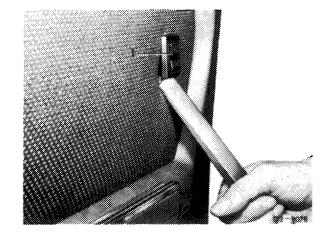

- 3 Remove door lining (72-100).
- 4 Remove plastic sheeting.
- 5 Remove lock on window opener arm and push window opener arm out of window opener rail.
- 6 Push glass upwards and clamp with wedge.

- 7 Loosen electric connections on cable connector.
- 8 Turn out three fastening screws on window opener.
- $9\,\,$ Remove window opener with motor in downward direction.

Installation

10 For installation proceed vice versa.

Note: Adjust bottom stop by means of screw (3).

