


Removal

- 1 Remove crank window (72–190).
- 2 Pull flexible window running rail (1) out of folded sheet metal on door frame and remove.

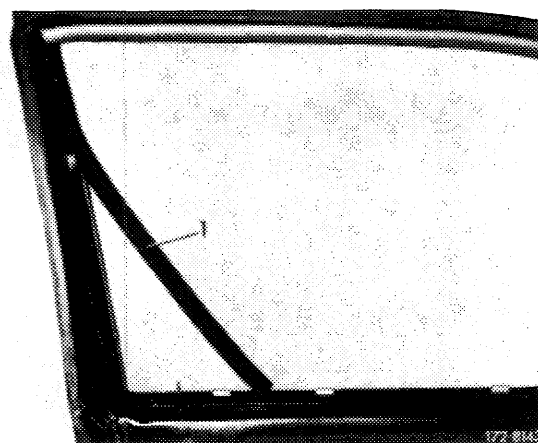

Installation

- 3 For installation proceed vice versa.