


72–200 Removal and installation of window guide rail on driver's door

Removal

- 1 Remove crank window (72–190).
- 2 Remove flexible window running rail in range of window guide rail (1) (72–198).
- 3 Unscrew screws (2) and (3).
- 4 Remove window guide rail (1) in upward direction.

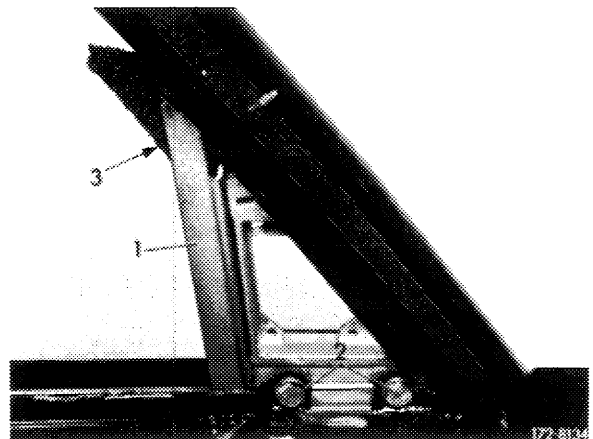

Installation

- 5 For installation proceed vice versa.

Note: Make sure that the plastic sleeve at bottom on window guide rail is correctly inserted.