


72–210 Removal and installation of door holder

Removal

- 1 Remove door lining (72–100) and pull off plastic sheeting in front range.
- 2 Pull off seal for door holder opening.
- 3 Pull off safety lock on bolt (1) and remove bolt. Watch out for both spacing washers (2).
- 4 Unscrew screws (3) and nut (4).
- 5 Remove door holder.

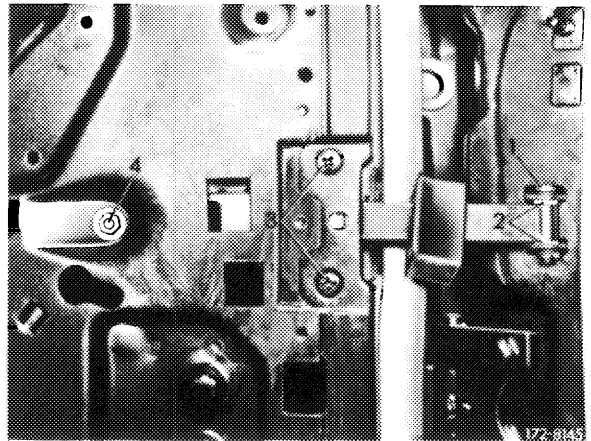

Installation

- 6 For installation proceed vice versa.

Note: Grease new door holders prior to installation with SHELL RETINAX G.