

72–260 Removal and installation of striker eye

Removal

1 Unscrew fastening screws and remove striker eye together with compensating shims.

Installation

2 Insert striker eye and slightly tighten screws.

3 Close door so that striker eye can align itself in relation to striker pin.

Note: If required, correct position of striker eye with compensating shims. Compensating shims are available 0.5 and 1.5 mm thick.

4 Adjust closed door in such a manner that door is in alignment with outer skin or projects by max. 1 mm.

5 Open door and tighten striker eye to 17–20 Nm (1.7–2 kpm).

Note: Grease newly installed striker eyes with SHELL RETINAXY G.