

72-270 Removal and installation of outside rear view mirror


Note

If outside mirror changes its position by itself, remove mirror, lift rubber cover and tighten clamping screw on adjusting mechanism as required.

Removal


Mirror Glass

1 Remove glass from ball socket by means of a plastic wedge and pull out laterally.

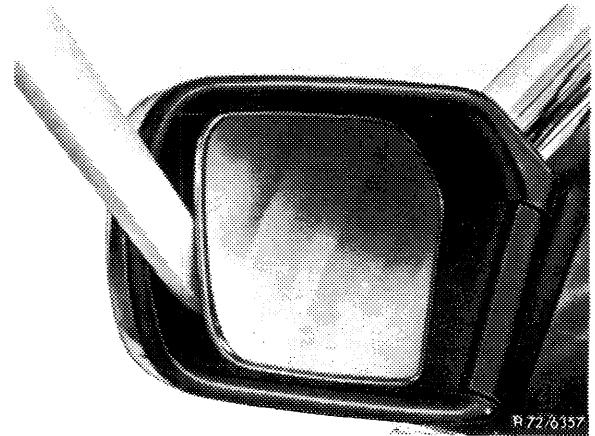

Complete Outside Mirror

- 2 Push plastic lock (3) out of handle (4) by means of a small screw driver.
- 3 Pull off cover disc.
- 4 Unscrew the three screws behind.
- 5 Remove mirror.

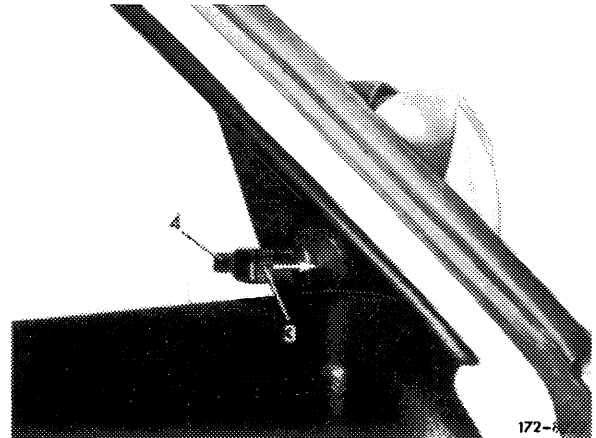

Installation

- 6 For installation proceed vice versa.