

75–100 Removal and installation of trunk lid


Note

When renewing trunk lid, close the two paint flow holes at front next to hinges with rubber plug Part No. 116 997 08 86.

In first version, these holes were closed with sealing putty which tends to produce noises when touching rear fender. In such a case, remove sealing putty and replace by above plug.

Removal

- 1 Pull plug for trunk light from light.
- 2 Remove cable with plugs from frame of trunk lid.
- 3 Place one rag each between both ends on trunk lid and rear window as a protection against damage.
- 4 When re-using trunk lid, mark position of hinge lever in relation to trunk lid.
- 5 Unscrew screws (1) on both trunk lid hinges and remove trunk lid.

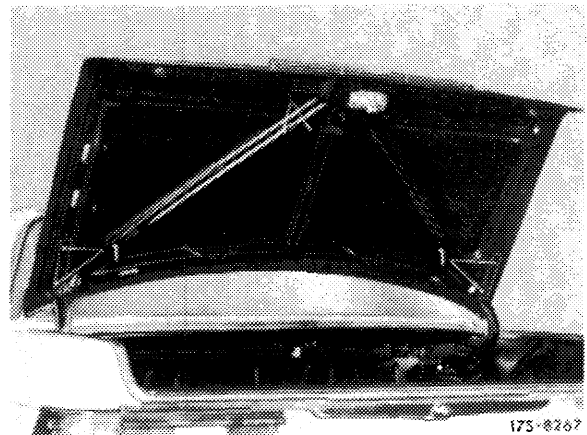

Installation

- 6 For installation proceed vice versa.