


## 75-300 Removal and installation of tank flap

---

### Removal

---

- 1 Cover outer skin of fender under tank recess with tape as a protection against damage.
- 2 Unscrew screws (1) on both sides.
- 3 Remove filler lock, observe safety regulations.
- 4 Remove tank flap (2) with holding clip beginning at front end in upward direction.

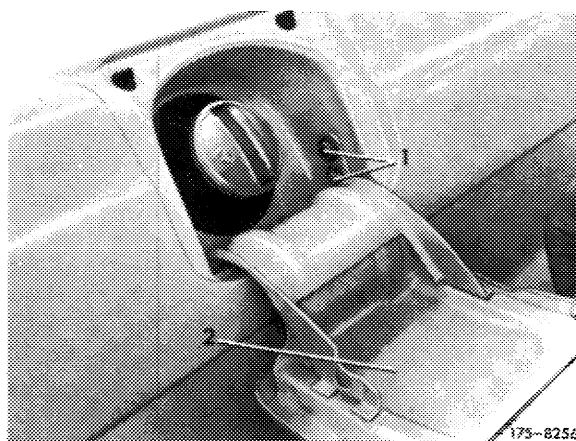

### Installation

---

- 5 For installation proceed vice versa.

#### **Attention!**

Seal square head welding nuts for screws (1). As from December 1972, hexagon welding nuts are sealed by welding.