


Removal

- 1 Remove coupe top and place on pertinent work bench in inverted condition.
- 2 Push closing cap (1) down with plastic wedge.
- 3 Remove closing cap and closing top (2).
- 4 Unscrew closing hook (3) manually.
- 5 Loosen nut (4) and remove bearing (5) with hole plate (6).

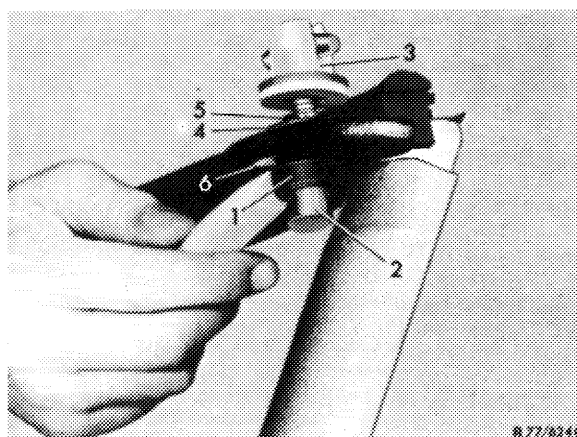

Installation

- 6 For installation proceed vice versa.

Prior to assembly of closing cap (1) adjust closing hook (3) to $a = 32$ mm.

