


80–901 Functional diagram central interlock and air-conditioning system

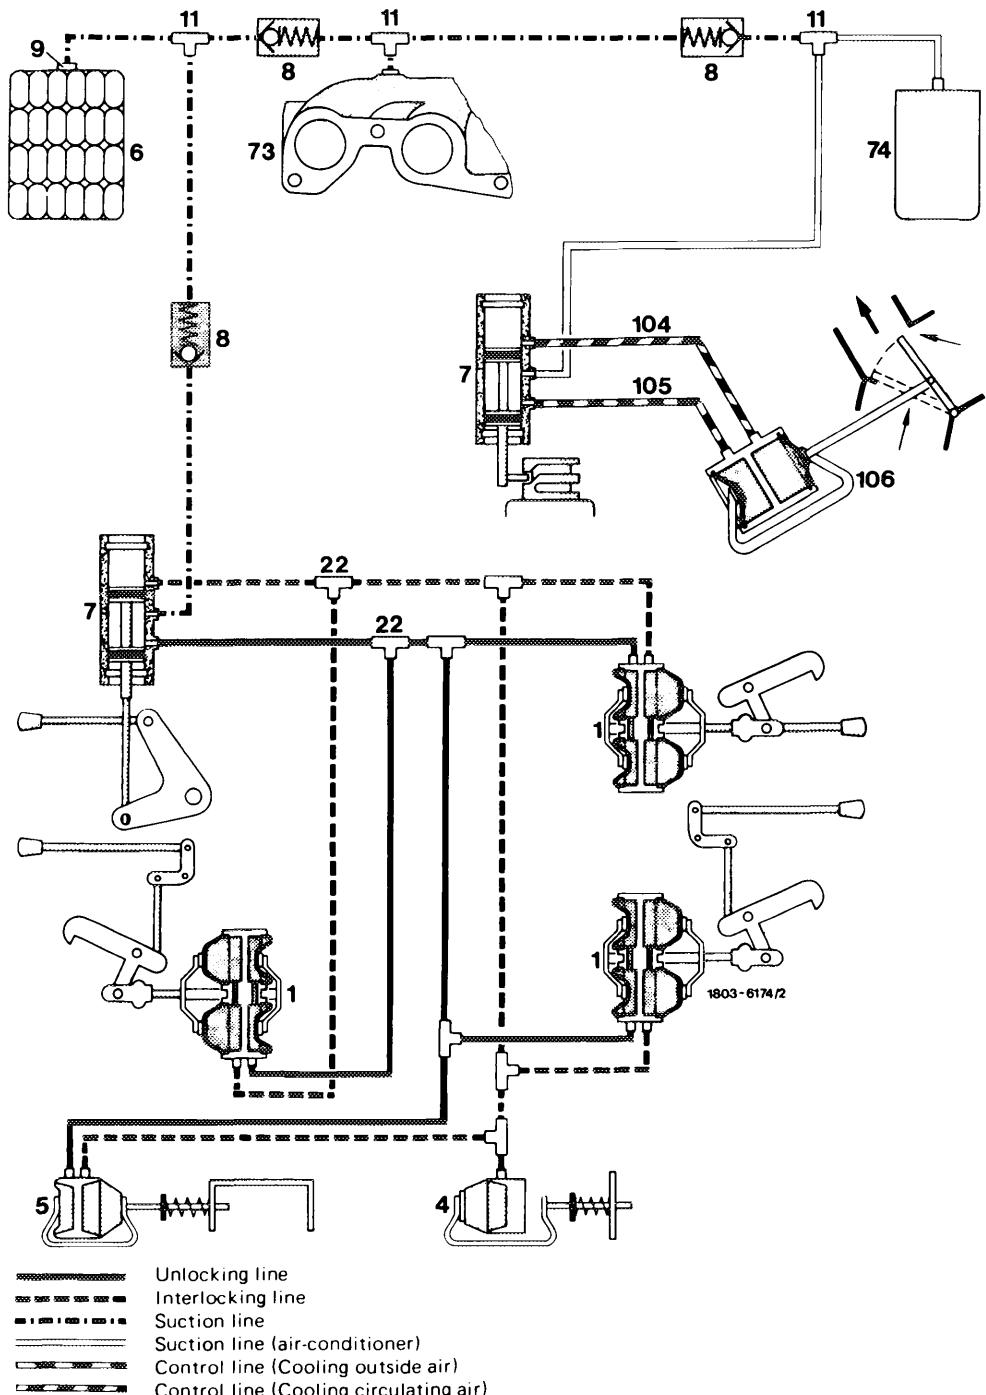

- 1 Vacuum element (driver's and rear doors)
- 4 Vacuum element (flap for tank filler neck)
- 5 Vacuum element (trunk lid)
- 6 Vacuum supply tank
- 7 Vacuum switch
- 8 Check valve
- 9 Seal

- 11 Distributor
- 22 Distributor
- 73 Intake pipe
- 74 Vacuum supply tank (air-conditioner)
- 104 Control line (cooling circulating air)
- 105 Control line (cooling outside air)
- 106 Vacuum element (air-conditioner)