


B. Model 116

Removal

- 1 Remove lamp carrier of righthand or lefthand tail lamp unit (82-252).
- 2 Unscrew fastening screws (1) on both licence plate lamps. Remove glass with seal and pull lamp carrier downwards at lefthand side.
- 3 Remove cover at inside on rear center piece.

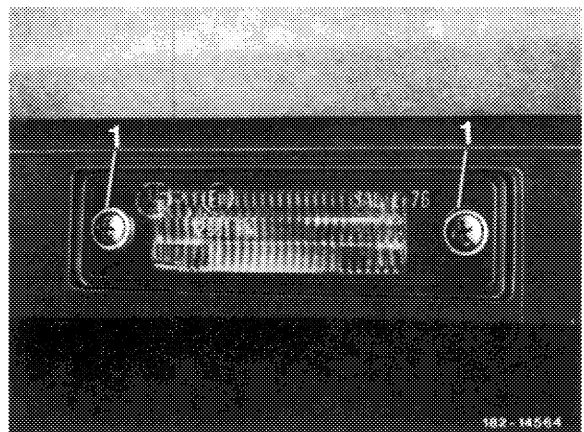

- 4 Pull cable with coupler inwards after removing rubber grommet (1). Remove righthand and lefthand licence plate lamp from inside.

Installation

- 5 For installation proceed vice versa.

