


### Removal

---

- 1 Slightly bend back cover in trunk and unscrew screw (1) underneath.
- 2 Unscrew both screws on rear center piece.
- 3 Remove bumper top.

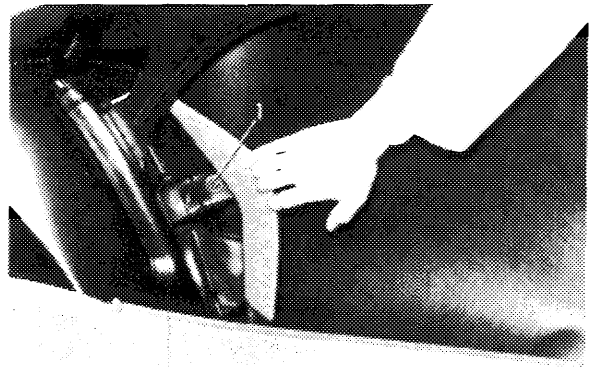

198-8515

### Installation

---

- 4 Position screw (1) and the two sheet–metal screws against rear center piece and tighten, while aligning bumper top in such a manner that the distance from center toward bumper is on both sides the same.
- 5 Seal the two screws on rear center piece so that no water can enter trunk.