

88–300 Removal and installation of engine hood

Removal

- 1 Place one rag each under windshield between the two ends on engine hood and outer center piece as a protection against damage.
- 2 Loosen both hood supports from engine hood.
- 3 Unscrew both screws on hinge lever on both sides.
- 4 Lift-off engine hood.

Note: Removal of hinge lever requires removal of front fender.

Installation

- 5 For installation proceed vice versa.
- 6 Adjust engine hood with outer rubber buffers in such a manner that hood is in alignment with fender edge.
- 7 Adjust inner rubber buffers in such a manner, that they are just touching the stiffening at front to prevent destroying the headlight lenses when closing engine hood.