

88–310 Removal and installation of cable control for engine hood

Removal

- 1 Remove cover under instrument panel (68–150).
- 2 Unscrew handle for hood cable control.
- 3 Disconnect hood cable control on handle.
- 4 Disconnect cable control from clips on wheel housing.
- 5 Remove switch gear of transistorized ignition, if installed.

Note: Remove fan of cooling system in front of radiator, if installed.

- 6 Loosen hood cable control on lock bottom and disconnect.
- 7 Pull out hood cable control with rubber sleeve in engine compartment.

Installation

- 8 For installation proceed vice versa, while adjusting hood cable control on lock bottom free of play.