


91–110 Removal and installation of front passenger seat

Removal

- 1 Slide seat completely forward.
- 2 Unscrew lower screws (1) and lateral screw (2)
- 3 Remove spacer sleeve (3).
- 4 Slide seat completely toward the rear.
- 5 Unscrew screws on both sides of front seat guide rails.
- 6 Remove seat.

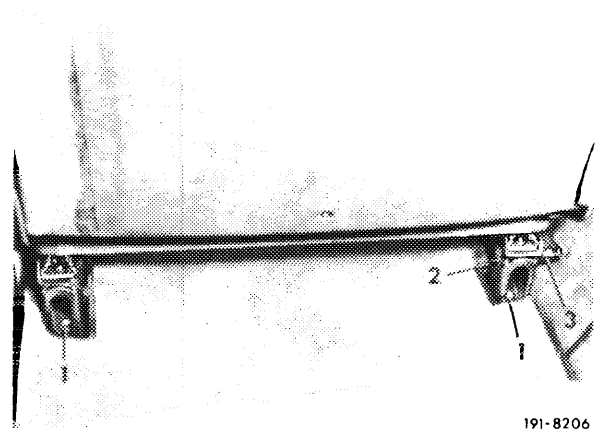

191-8206

Installation

- 7 For installation proceed vice versa.