


Removal


1 Push locking hook (1) toward rear against stop and lift rear seat at front.

2 Lift out front seat cushion in upward direction.

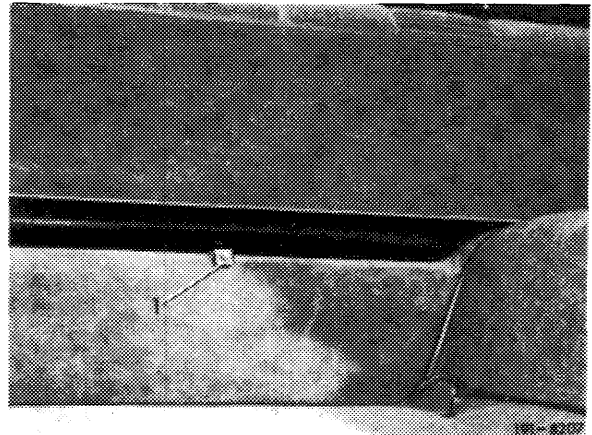

3 Unscrew screws (2) on rear backrest left and right and in center.

4 Push rear seat backrest in upward direction and remove.

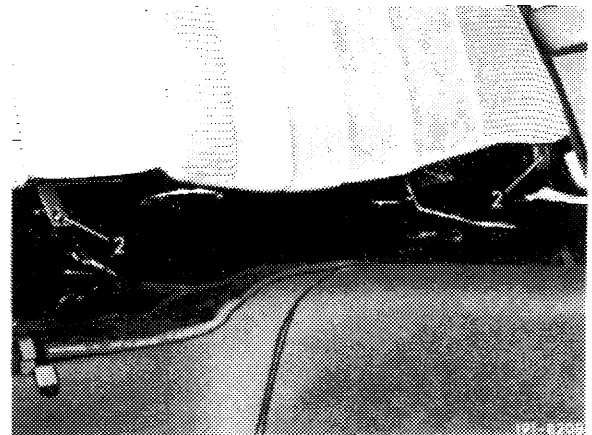

Installation

5 For installation proceed vice versa.