


Removal

1 Remove ornamental grille for air inlet (83-140).

2 Loosen hose clamp (1) with an extended Phillips head screwdriver.

3 Pull-off vacuum line.

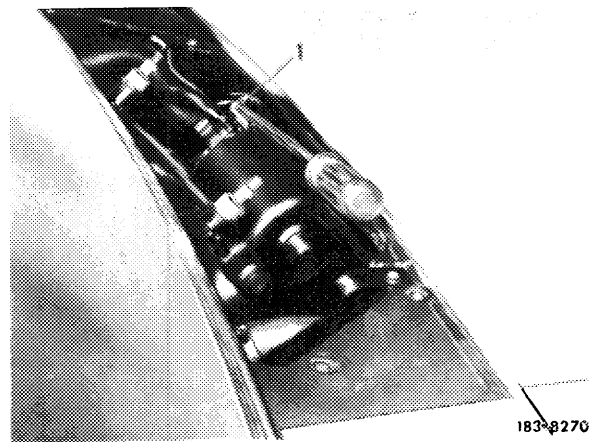


4 Loosen hose clamp (2) and pull-off hose (3).

5 Remove both screws (4) on front wall.

6 Pull out heater valve together with vacuum element (5).

7 Unscrew vacuum element (5) and disconnect connecting linkage.

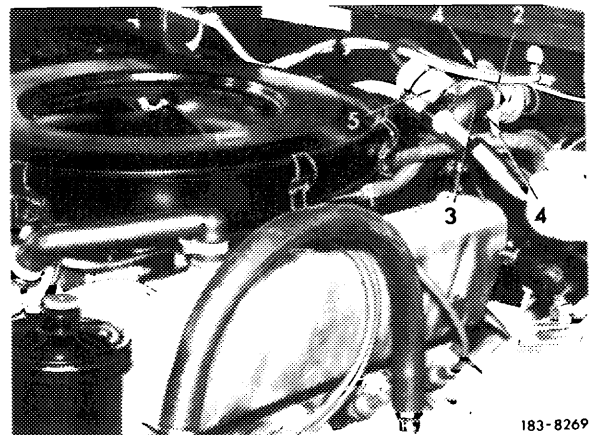

Installation

8 For installation proceed vice versa.