


Removal

- 1 Pull plug (1) for series resistance from front wall.
- 2 Unscrew both screws (2) on series resistance.

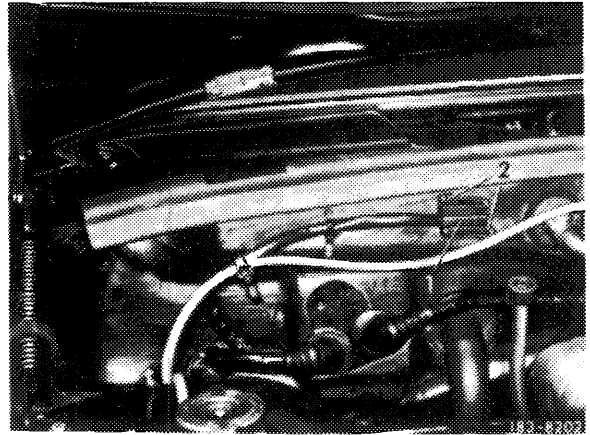


- 3 Remove air inlet grille (83–140).
- 4 Remove glove box (68–140).
- 5 Remove cover under instrument panel right (68–150).
- 6 Remove air hose between center air duct and right-hand ring nozzle.

7 Remove clamp (3) on cable control and disconnect cable control on lever (4).

8 Unscrew both nuts (5) on blower by means of an articulated wrench SW 10.

9 Remove blower.

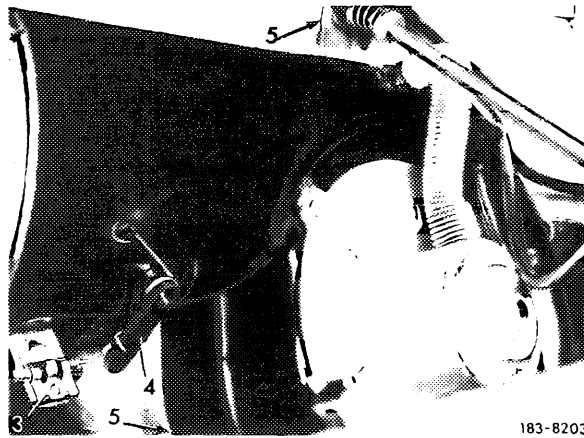

Installation

Note: Make sure that the sealing frame between blower and front wall is not damaged and that the rubber grommet for connecting cable is correctly seated.

10 Guide connecting cable through air duct on front wall and into water box.

11 Attach blower.

12 Position both nuts (5) and push blower as far as possible to the left when screwing down.

13 Reach from outside through water box and install series resistance.

14 For further installation proceed vice versa.