

Removal

- 1 Remove both windshield wiper arms.
- 2 Remove both caps.
- 3 Unscrew nuts (1) and remove seals underneath.

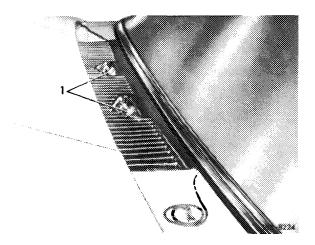


4 Push down bolt on spreader clamps and remove clamps.

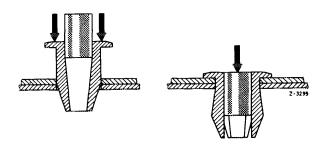


5 Remove ornamental grille and strainer for air inlet.

6 Insert cord under rubber frame for windshield.

7 Mount ornamental grille and screen for air inlet and tighten with nuts (1) on windshield wiper shafts.

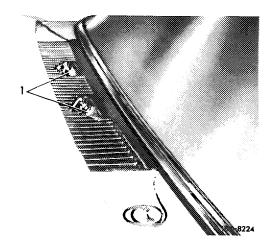

8 Pull out cord while paying attention to perfect seat of rubber lip above ornamental grille.

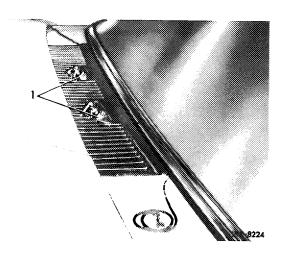

9 For further installation proceed vice versa.