

83-645 Removal and installation of ambient temperature sensor

Data


Resistance at 20 °C (68 °F)
ambient temperature

nominal 363 Ohms
max. 388 Ohms
min. 337 Ohms

Removal


- 1 Pull off electrical plug (62) while paying attention to safety hooks.
- 2 Unscrew 2 screws (63) and pull ambient temperature sensor (8) out of front wall.

8 Ambient temperature sensor
62 Electrical plug
63 Screw

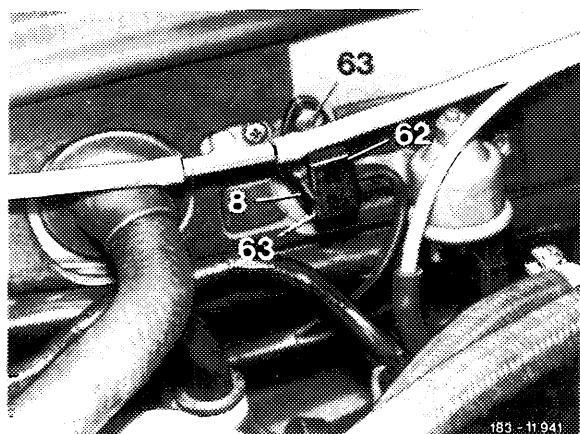

Installation

- 3 Test ambient temperature sensor (8) with ohmmeter (83-609).
- 4 Attach ambient temperature sensor (8) with screws (63) to front wall and plug-on electrical plug (62).

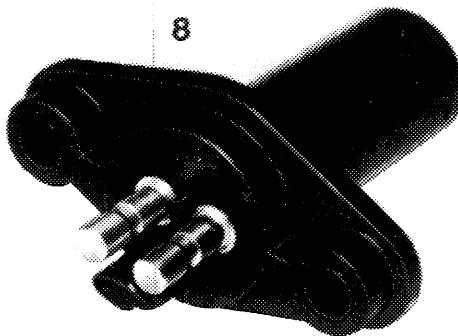

8 Ambient temperature sensor