

83-650 Removal and installation of ETR switch

Data


Shut-off point of refrigerant compressor

2 °C (36 °F)

Removal

- 1 Remove instrument panel (68-100).
- 2 Pull-off electrical flat plug.
- 3 Unscrew 2 screws at right and left from ETR switch (24).

24 ETR switch

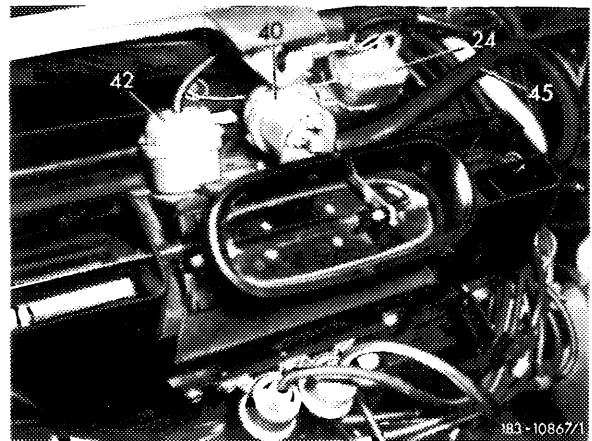

- 4 Carefully pull ETR switch (24) to the rear and then pull capillary of ETR switch out of guide tube in air conditioner cabinet, making sure to apply counterhold at guide tube.

Installation

- 5 Slip capillary of ETR switch up to yellow mark or up to stop into guide tube in air conditioner cabinet.
- 6 Screw ETR switch (24) with two screws to air conditioner cabinet, then mount insulating housing on ETR switch and attach with insulating tape.
- 7 Mount electrical flat plug.
- 8 Install instrument panel (68-100).
- 9 Check operation of automatic climate control (83-601).