

83–655 Removal and installation of vacuum switch for refrigerant compressor (at “BI-LEVEL” only)

Data


Switch closes with vacuum above

78.5 mbar vacuum (0.08 atu)

Removal

- 1 Remove control unit (83–635).
- 2 Lift lock from vacuum switch (23 or 81) by means of a screwdriver.
- 3 Pull off vacuum line and electrical plug.

23 Vacuum switch (for refrigerant compressor)
81 Vacuum switch (for legroom flaps)

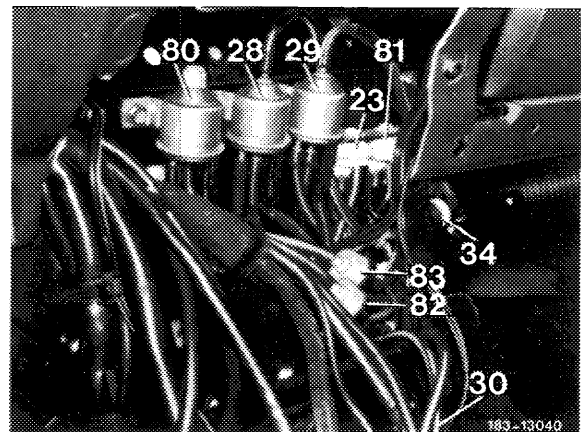

Installation

- 4 Check vacuum switch (23 or 81) (83–628).
- 5 Attach vacuum line and electrical plug to vacuum switch.
- 6 Attach vacuum switch (23 or 81) with rubber disc and lock to holder.
- 7 Install control unit (83–635).