

## 83–670 Removal and installation of vacuum switch for refrigerant compressor or vacuum switch (main switch)

---

### Data

---


Vacuum switch (20) for refrigerant compressor closes with vacuum above	78.5 mbar cacuum (0.08 atu)
Vacuum switch (19) main switch closes with vacuum above	175 mbar vacuum (0.18 atu)

---

### Removal

---

- 1 Remove glovebox (68–140).
- 2 Pull off electric plug and vacuum line.
- 3 Lift lock from vacuum switch (19 or 20) by means of a screwdriver.

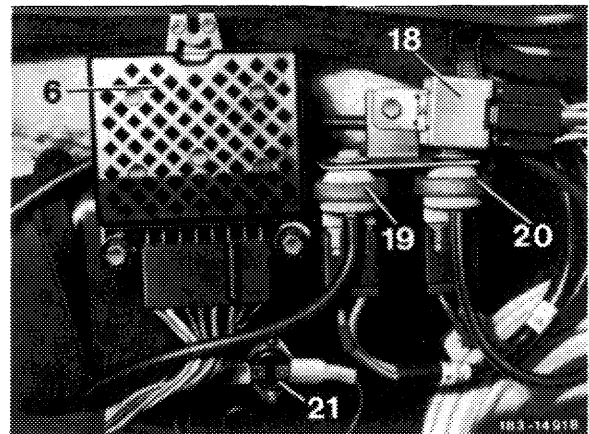

19 Vacuum switch (main switch, green)  
20 Vacuum switch (refrigerant compressor, yellow)

### Installation

---

- 4 Check vacuum switch (19 or 20) (83–628).
- 5 Atach vacuum switch with rubber washer and lock to holder.
- 6 Mount electrical plug and vacuum line and check operation of automatic climate control.
- 7 Install glovebox (68–140).