


83–680 Removal and installation of double contact relay

Removal

- 1 Remove glovebox (68–140)
- 2 Unscrew double contact relay (18) from holder on blower housing and pull off electrical plug.

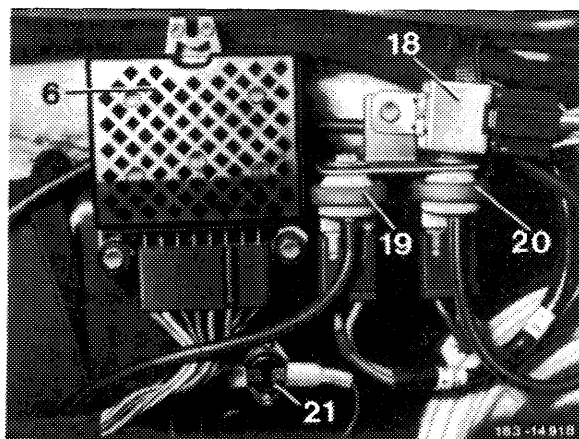

Installation

- 3 Mount electrical plug on double contact relay (18) and screw relay to holder.
- 4 Install glovebox (68–140).