

83–690 Removal and installation of temperature switch for heating water pump


Data

Cut-out point (heating water pump off)	26 °C (79 °F)
Cut-in point (following cut-out)	16 °C (61 °F)

Removal

- 1 Remove glovebox (68–140).
- 2 Pull electrical flat plug from temperature switch (21) and pull temperature switch out of blower housing.
- 3 Unscrew 2 screws on temperature switch (21) and pull temperature switch out of blower housing.

21 Temperature switch for heating water pump

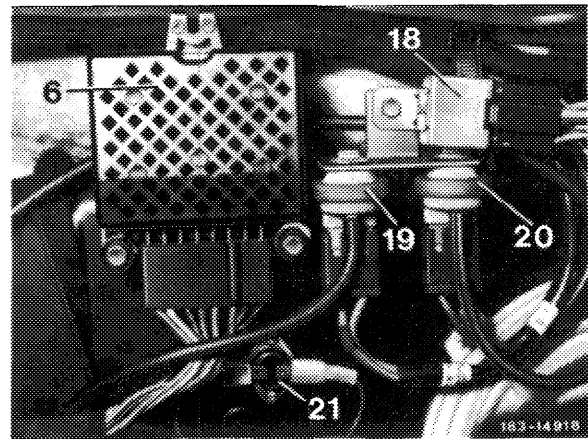

Installation

- 4 Plug temperature switch (21) into blower housing and attach with two screws.
- 5 Mount electrical flat plug and check operation of temperature switch (21) with heating water pump.
- 6 Install glovebox (68–140).