



Removal

- 1 Remove ornamental grille on air intake (83-140).
- 2 Unscrew righthand windshield washer nozzle.
- 3 Pull electrical plug from pre-resistor.

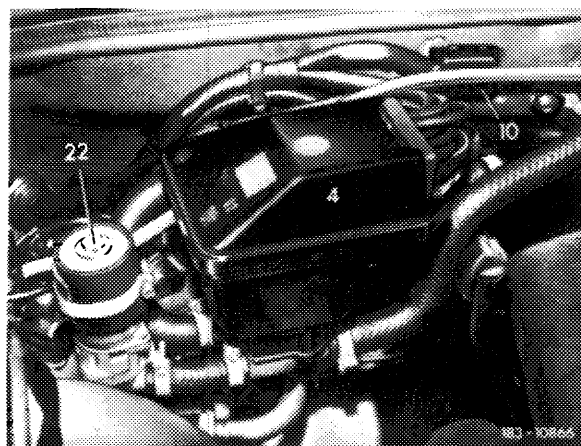

10 Pre-resistor for blower

- 4 Unscrew two screws on pre-resistor and pull pre-resistor out of front wall.

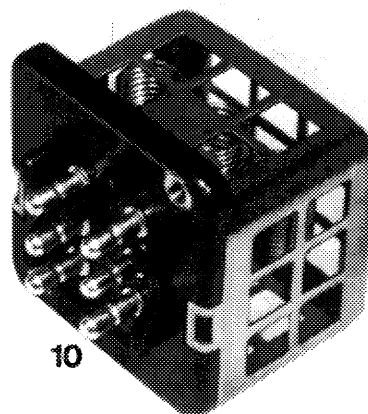

10 Pre-resistor for blower

183-11985

Installation

- 5 Insert pre-resistor into front wall and attach with two screws.
- 6 Plug-on electrical plug.
- 7 Screw-down righthand windshield washer nozzle.
- 8 Install ornamental grille at air intake (83-140).
- 9 Check operation of blower.