

COMPONENT LOCATIONS

AUTOMATIC CLIMATE CONTROL

		Page-Figure
ACC Amplifier	Behind glove box	209-2
ACC Compressor Clutch	Lower LH side of engine	
ACC Control Panel	On upper console	
ACC Double Pole Relay	Behind glove box	201-2
ACC Servo Assembly	To right of LH rear end of valve cover	201-1
A/C In-Line Fuse	Top of LH front wheel well, in relay box	205-2
A/C-Start Relay	Behind LH kick panel	203-2
Ambient Temperature Sensor	Off lower RH corner of chassis number plate	201-1
Auxiliary Water Pump	Behind RH front wheel well	210-4
Bi-Level Compressor		
Vacuum Switch	Behind upper console	
Bi-Level Vacuum Switch	Behind upper console	
Blower Master Vacuum		
Switch	Behind glove box	201-2
Blower Motor	Under RH side of instrument panel	209-2
Blower Resistors	In blower housing	210-6
Compressor Low-Pressure		
Cut-Out Switch	On receiver drier	210-3
Compressor Vacuum Switch ..	Behind center of glove box	201-2
Evaporator Temperature		
Regulator	Above passenger's footwell, next to console	
Fuse Box	LH rear corner of engine compartment	100-1
In-Car Temperature Sensor ..	Top middle of instrument panel	
Switch-Over Valves	Behind upper console	
Water Pump Temperature		
Switch	Behind center of glove box	209-2
C105 (4 terminals)	Below battery	209-4
C125 (6 pins)	Behind ACC servo assembly	201-1
C126 (2 pins)	Behind RH side of glove box	209-2
C127 (2 pins)	Behind RH front wheel well	210-4
C133 (12 pins)	Above RH kick panel	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	205-1

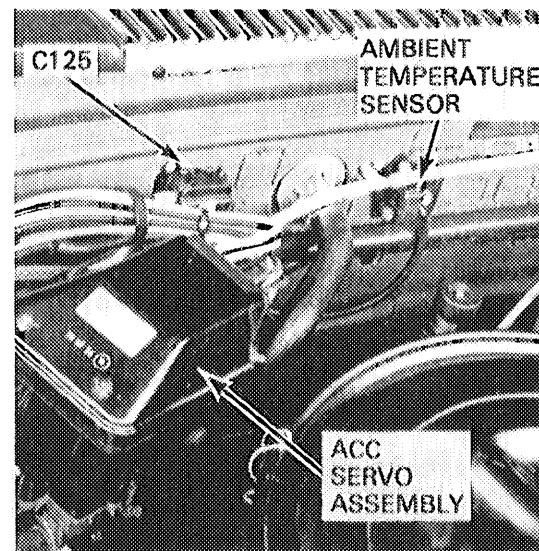


Figure 1 - Behind Engine

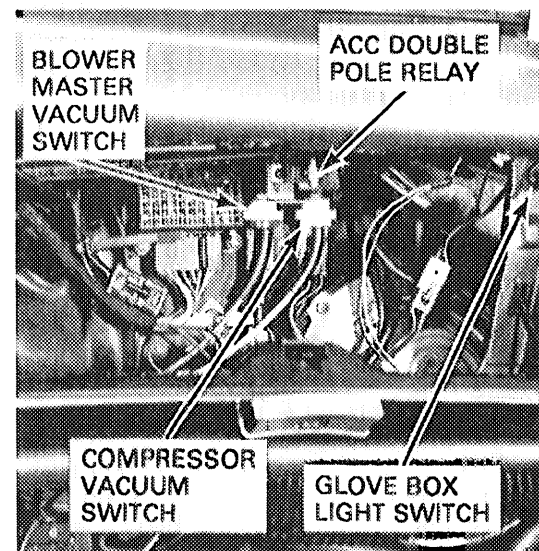


Figure 2 - Behind Glove Box

COMPONENT LOCATIONS

AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Behind LH kick panel	203-2
Coolant Temperature Switch	Front RH side of engine, to left of battery.....	209-4
Fuse Box	LH rear corner of engine compartment	100-1
Receiver Drier Temperature Switch	On front of radiator, above receiver drier	210-3
G107	LH radiator support	205-1

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ENGINE-TRANSMISSION OVERLOAD PROTECTION

Fuse Box	LH rear corner of engine compartment	100-1
Intake Manifold Pressure Switch	Top rear of intake manifold	202-1
Kickdown Solenoid	RH front of transmission	203-1
Kickdown Switch	Under accelerator pedal	
Overload Protection Module	Behind RH kick panel	209-1
Overload Relief Valve	To upper right of power brake booster	210-1
Starter Lockout/Backup Light Switch	LH side of transmission	207-2
Stoplight Switch	Top of brake pedal support	
TDC Amplifier	Front of LH front wheel well	204-1
Top Dead Center (TDC) Sensor	Front of engine, above vibration damper	
Transmission Pressure Switch	RH rear side of transmission	
C104 (14 pins)	To right of parking brake support	203-2
C116 (2 terminals)	On front part of LH front wheel well	204-1
G101	RH front fender, behind headlights	
G103	Behind LH rear seat	
G104	Behind RH rear Seat	
G110	Ahead of LH front wheel well	204-1

CENTER CONSOLE ILLUMINATION

Fuse Box	LH rear corner of engine compartment	100-1
Hazard Switch	On center console	
Light Switch	Instrument panel, left of steering column	
G102	Behind instrument cluster	

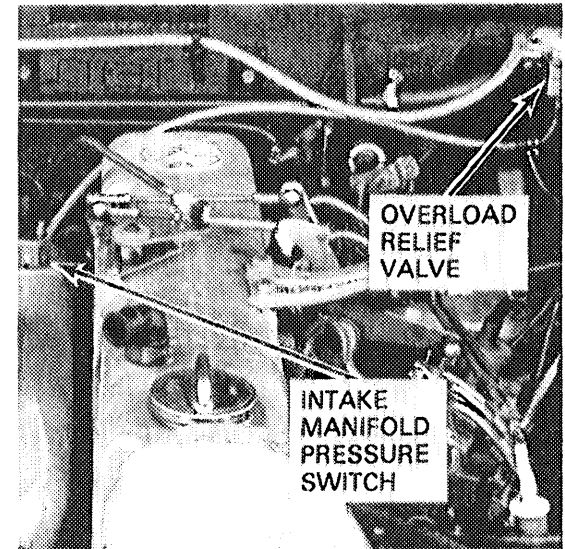


Figure 1 - Top of Engine

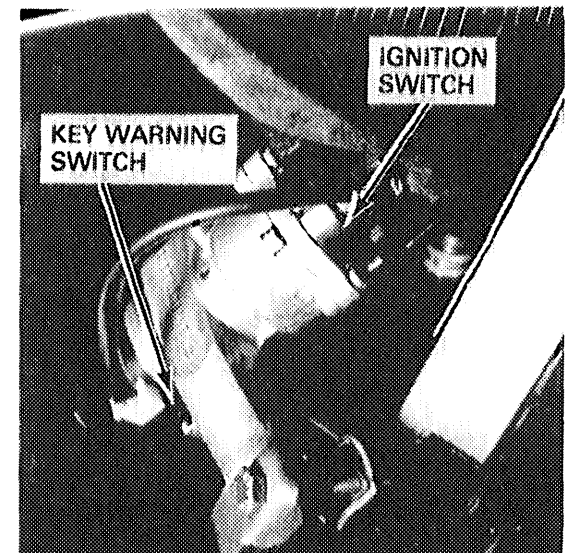


Figure 2 - Ignition Switch (As Seen From Below)

COMPONENT LOCATIONS

CHARGING SYSTEM

Page-Figure

Alternator	Front of engine	
Battery	RH front of engine compartment	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	202-2
Light Switch	Instrument panel, left of steering column	204-2
Starter Assembly	Lower RH rear of engine	
C105 (4 terminal)	Below battery	209-4
G100	Behind RH headlight assembly	209-5

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay	Behind LH rear wheel well	209-3
Antenna Switch	Part of upper console	
In-Line Radio Fuse	In upper console, behind radio	205-2
C104 (14 pins)	To right of parking brake support	203-2
C135 (6 pins)	Behind LH rear wheel well	209-3
G102	Behind instrument cluster	
G103	Behind LH rear seat	

COURTESY LIGHTS

Door Switches	In each door jamb	
Front Dome Light Ground ...	Near front dome light	
Front Dome Light and Switch	Behind rear view mirror assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Dome Light Switch	On upper console	
Warning Module	To right of emergency brake pedal support	203-2
C104 (14 pins)	To right of parking brake support	203-2
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G103	Behind LH rear seat	
G104	Behind RH rear seat	

GLOVE BOX LIGHT

Brake Switch	Brake pedal support	
Fuse Box	LH rear corner of engine compartment	100-1
Glove Box Light Switch	RH side of glove box	201-2
G101	RH front fender, behind headlights	

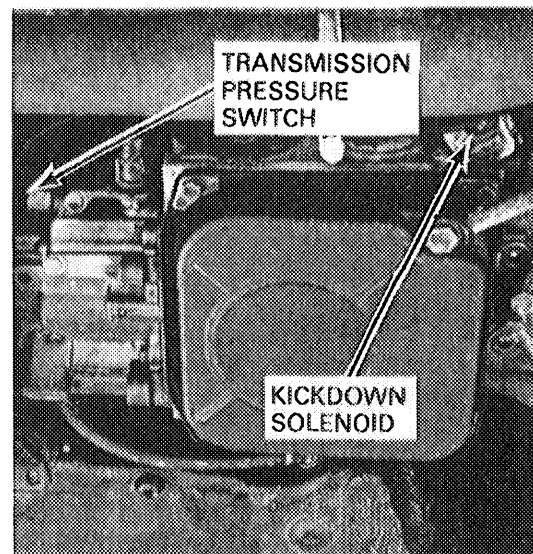


Figure 1 - RH Side of Transmission

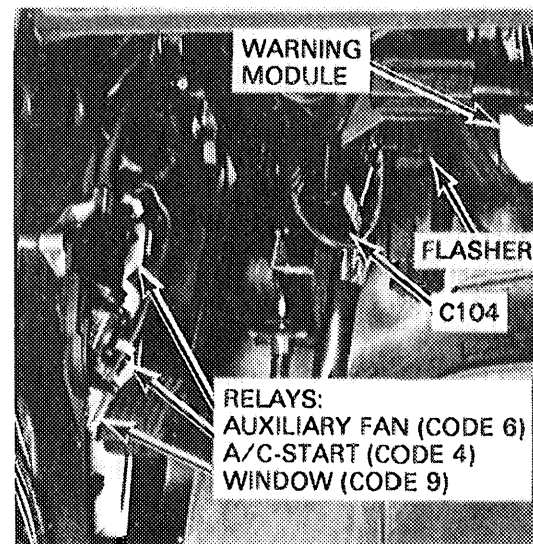


Figure 2 - LH Kick Panel

COMPONENT LOCATIONS

HEADLIGHTS/FOG LIGHTS

		Page-Figure
Combination Switch	Upper LH of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	204-2
C106 (14 pins)	To right of parking brake support	
C141 (4 pins).....	Behind LH headlight assembly	
C142 (4 pins).....	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	205-1

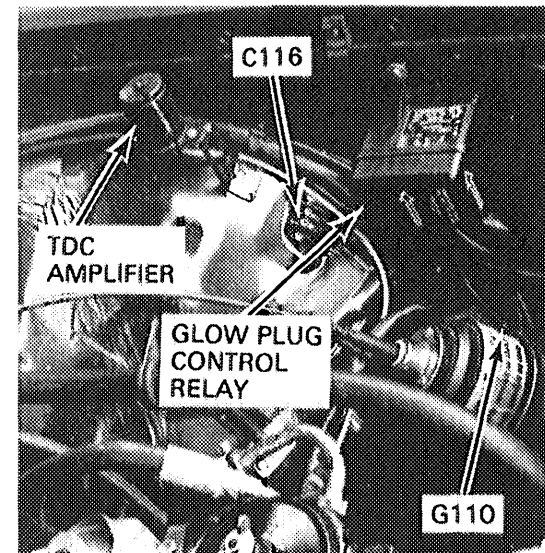


Figure 1 - Front Half of LH Front Wheel Well

204
300
SD

HEATED SEATS

Fuse Box	LH rear corner of engine compartment	100-1
Heated Seat In-Line Fuses....	Above parking brake support	
Seat Heaters	In each seat cushion	
Seat Heater Switches	In center console	
G102	Behind instrument cluster	

HORNS

Fuse Box	LH rear corner of engine compartment	100-1
Horn Switch	Behind center of steering wheel	
Slip Rings	Behind steering wheel	204-2
C106 (14 pins)	To right of parking brake support	
G102	Behind instrument cluster	

LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Antenna Motor/Relay	Behind LH rear wheel well	209-3
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	204-2
C104 (14 pins)	To right of parking brake support	203-2
G101	RH front fender, behind headlights	
G103	Behind LH rear seat	
G104	Behind RH rear seat	
G107	LH radiator support	205-1

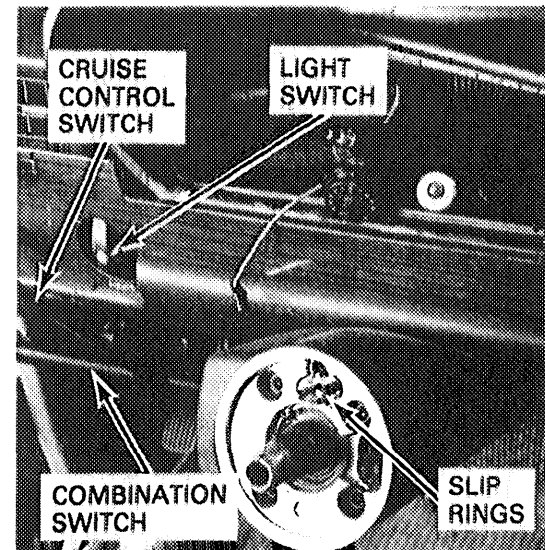


Figure 2 - LH Side of Instrument Panel

COMPONENT LOCATIONS

POWER DISTRIBUTION

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	202-2
In-Line Radio Fuse	Inside fuse box	205-2
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	To right of parking brake support	203-2
C105 (4 terminals)	Below battery	209-4
G100	Behind RH headlight assembly	209-5

POWER WINDOWS

Console Switch Group	On center console	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Window Switches	Below each rear window	
Window Motors	Below each window	
Window Relay	LH kick panel	203-2
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	

PRE-GLOW SYSTEM

A/C-Start Relay	Behind LH kick panel	203-2
Engine Temperature Sensor ..	LH side of engine	209-6
Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Ahead of LH front wheel well	204-1
Ignition Switch	Instrument panel, right of steering column	202-2
Starter Assembly	Lower RH rear side of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	207-2
C105 (4 terminals)	Below battery	209-4
C130 (6 pins).....	Connected to glow plug control relay	
C137 (6 pins).....	Connected to glow plug control relay	
G100	Below RH headlight assembly	209-5
G102	Behind instrument cluster	
G107	LH radiator support	205-1

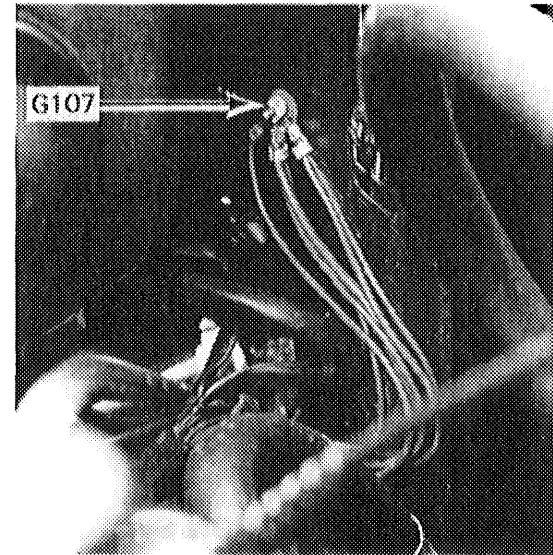


Figure 1 - LH Radiator Support

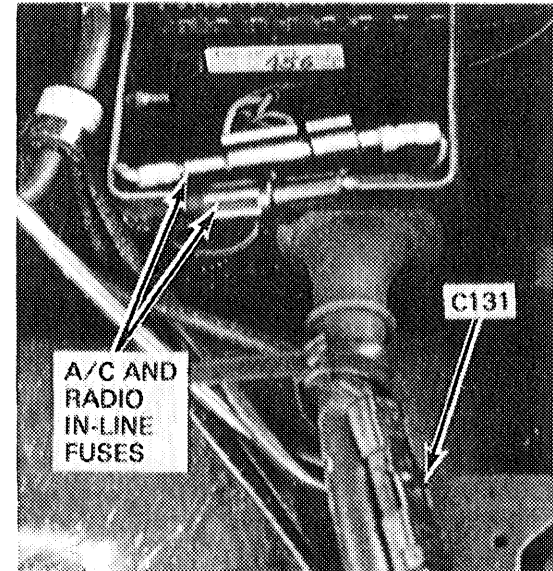


Figure 2 - Behind LH Front Wheel Well

COMPONENT LOCATIONS

REAR DEFOGGER

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay	LH kick panel	206-1
C104 (14 pins)	To right of parking brake support	203-2
G102	Behind instrument cluster	
G104	Behind RH rear seat	

SLIDING ROOF

Fuse Box	LH rear corner of engine compartment	100-1
Sliding Roof Motor	In trunk, above LH rear wheel well	206-2
Sliding Roof Switch	On upper console assembly	
G102	Behind instrument cluster	

START/STOP (IGNITION SWITCH)

Fuel Shutoff Diaphragm	In front of oil filter	207-1
Ignition Switch	Instrument panel, right of steering column	202-2
Light Switch	Instrument panel, left of steering column	204-2
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	207-2
C105 (4 terminals)	Below battery	209-4
G100	Behind RH headlight assembly	209-5

STOPLIGHTS/CRUISE CONTROL

Brake Switch	Brake pedal support	
Cruise Control Actuator	Connected to LH front fender	210-2
Cruise Control Amplifier	To right of parking brake support	
Cruise Control Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Vehicle Speed Sensor	Mounted on speedometer	210-5
C104 (14 pins)	To right of parking brake support	203-2
C140 (6 pins)	Behind LH side of instrument panel, above steering column	
G102	Behind instrument cluster	
G103	Behind LH rear seat	
G104	Behind RH rear seat	

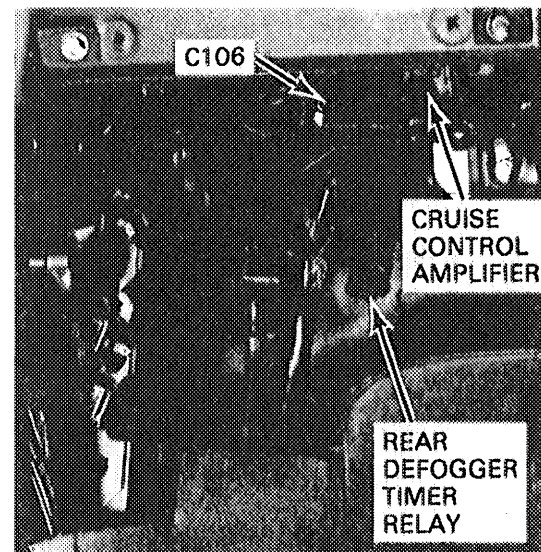


Figure 1 - LH Kick Panel

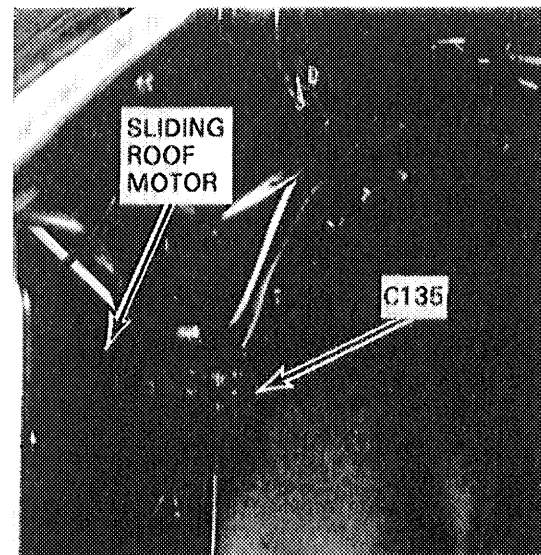


Figure 2 - Behind LH Rear Wheel Well

COMPONENT LOCATIONS

TURN SIGNAL/HAZARD LIGHTS

		Page-Figure
Combination Switch	Upper LH of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Switch	On center console	
C104 (14 pins)	To right of parking brake support	203-2
C106 (14 pins)	To right of parking brake support	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G103	Behind LH rear seat	
G104	Behind RH rear Seat	
G107	LH radiator support	205-1

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	Top side of engine, below glow plugs 2 and 3	207-1
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Ahead of LH front wheel well	204-1
TDC Amplifier	Front of LH front wheel well	204-1
Top Dead Center (TDC) Sensor	Front of engine, above vibration damper	
Light Switch	Instrument panel, left of steering column	204-2
C104 (14 pins)	To right of parking brake support	203-2
C116 (2 terminals)	On front part of LH front wheel well	204-1
C130 (6 pins)	Connected to glow plug control relay	
C131 (2 pins)	On top of LH front wheel well	208-1
C132 (2 pins)	Behind RH front wheel well, at battery	210-4
C137 (6 pins)	Connected to glow plug control relay	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G104	Behind RH rear seat	
G110	Ahead of LH front wheel well	204-1

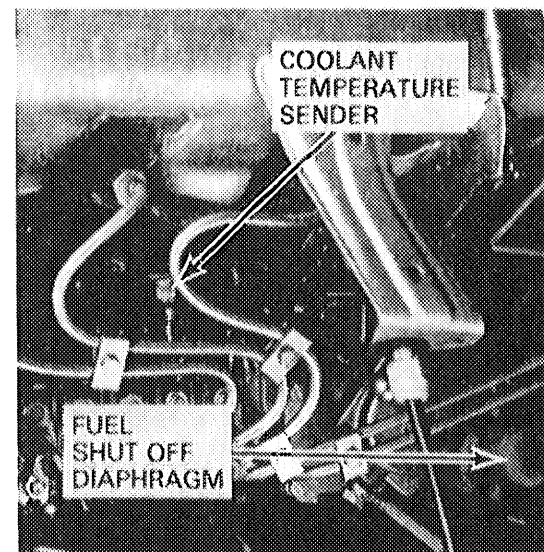


Figure 1 - LH Middle Part of Engine

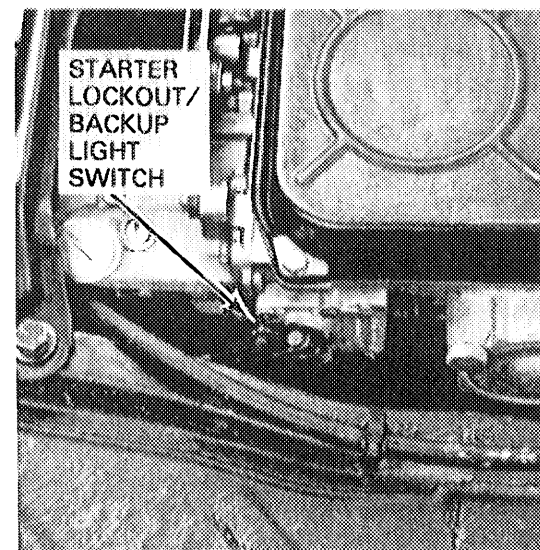


Figure 2 - LH Side of Transmission

COMPONENT LOCATIONS

WARNING SYSTEM

		Page-Figure
Brake Fluid Level		
Switches	Brake fluid reservoir	208-1
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Key Warning Switch	Part of ignition switch	202-2
Parking Brake Switch	On parking brake support	
Warning Module	To right of emergency brake pedal support	203-2
C104 (14 pins)	To right of parking brake support	203-2
C131 (2 pins)	On top of LH front wheel well	208-1
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

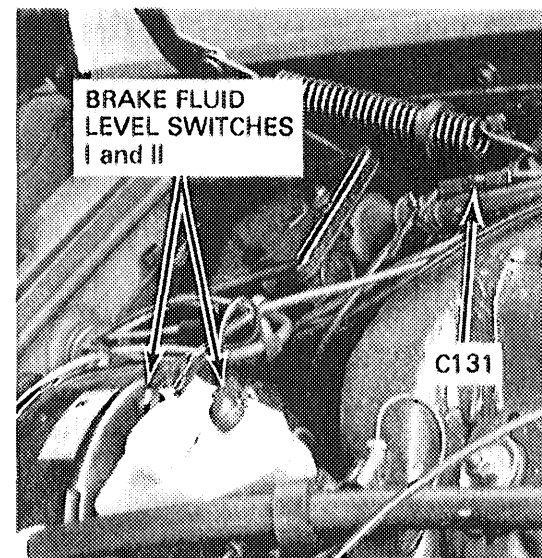


Figure 1 - Behind LH Front Wheel Well

WIPER/WASHER

Combination Switch	Upper LH of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind LH side of instrument cluster	
Washer Motor	Below battery	208-2
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To right of parking brake support	
C112 (6 pins)	Near wiper motor	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

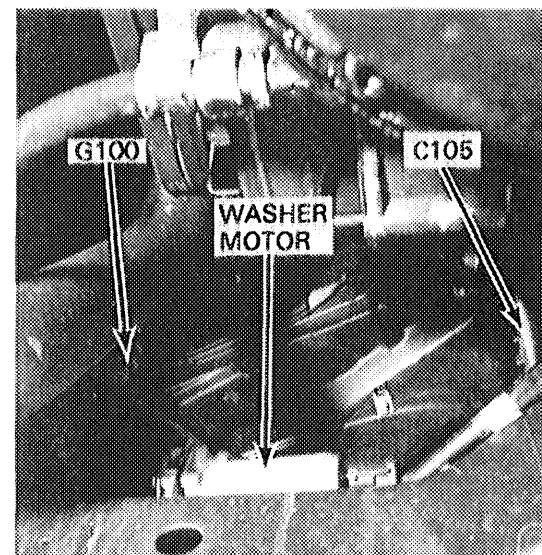


Figure 2 - Below Battery

COMPONENT LOCATIONS

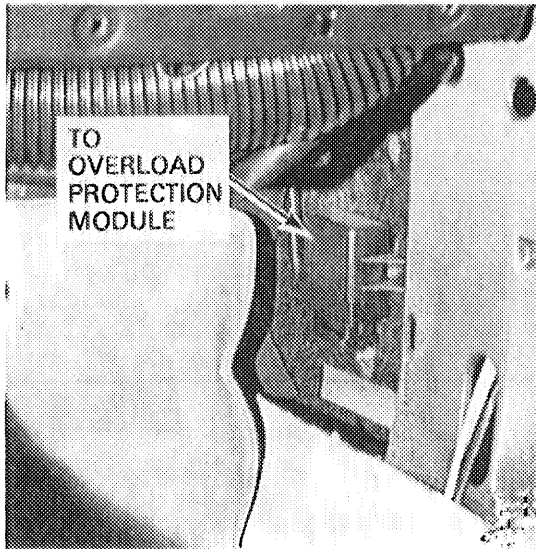


Figure 1 - RH Kick Panel

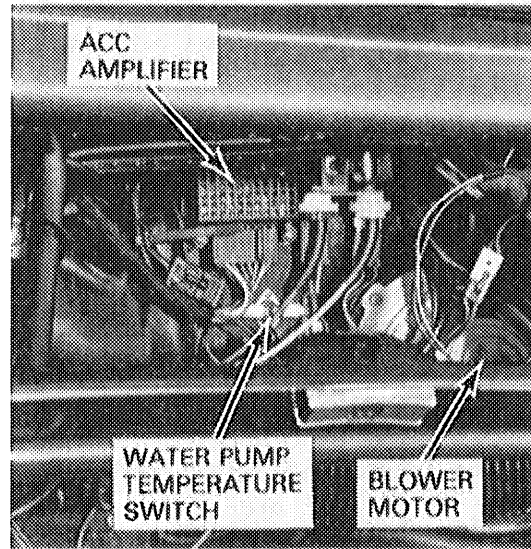


Figure 2 - Behind Glove Box

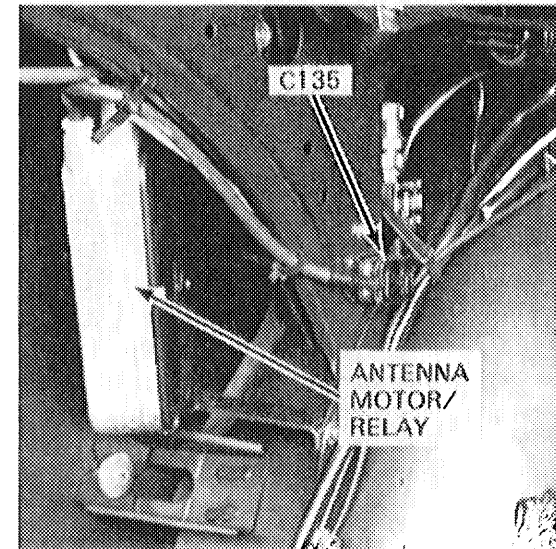


Figure 3 - Behind LH Rear Wheel Well

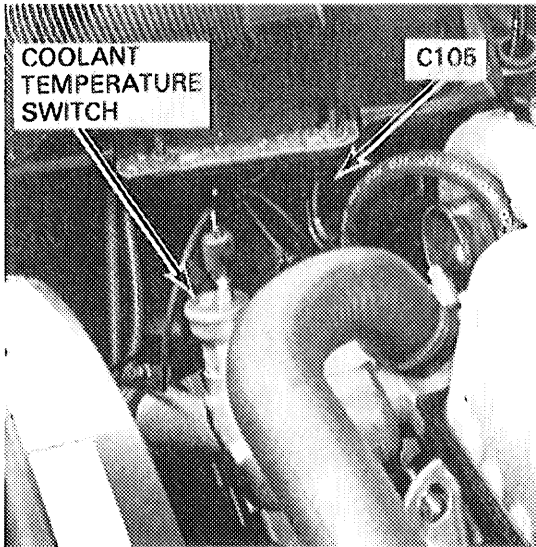


Figure 4 - Below Battery

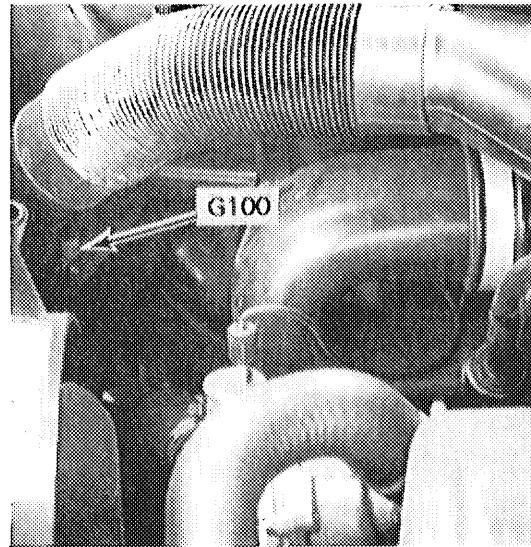


Figure 5 - Behind RH Side of Radiator

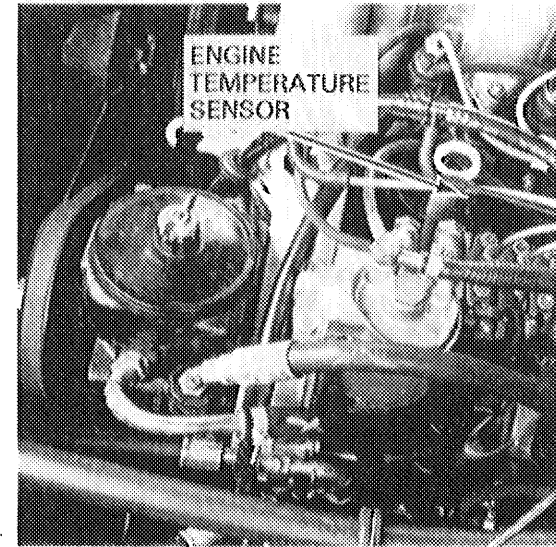


Figure 6 - LH Front Side of Engine

COMPONENT LOCATIONS

210
300
SD

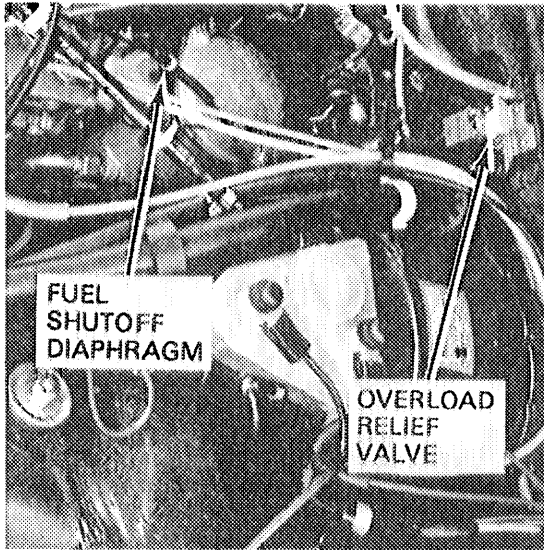


Figure 1 - Behind LH Wheel Well



Figure 2 - Front Of LH Front Wheelwell

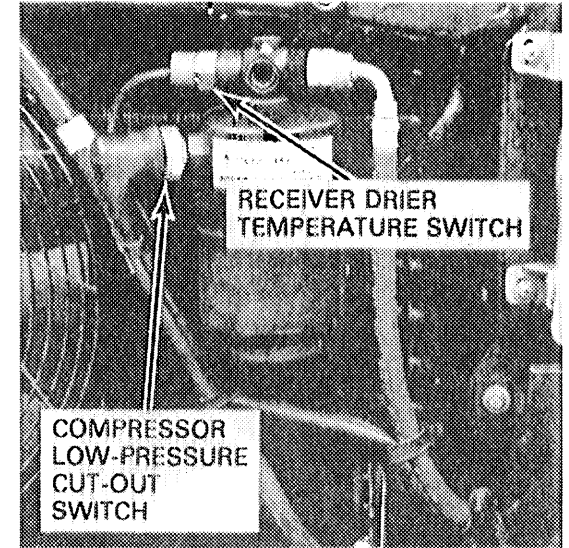


Figure 3 - LH Front Side Of Radiator

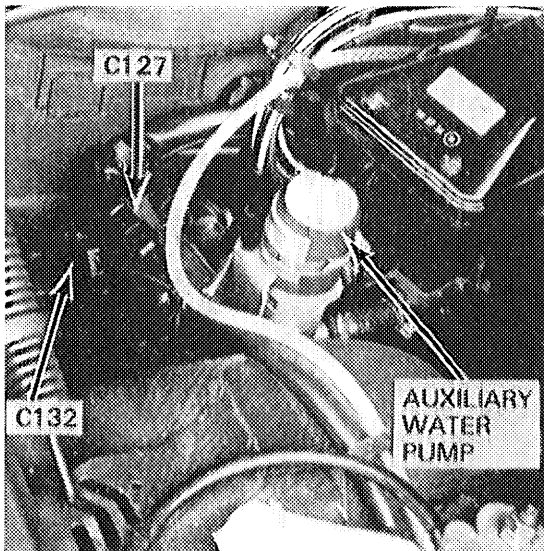


Figure 4 - Behind RH Front Wheelwell

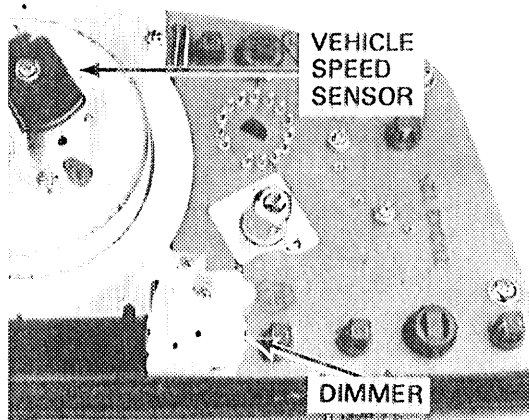


Figure 5 - Back Of Instrument Cluster

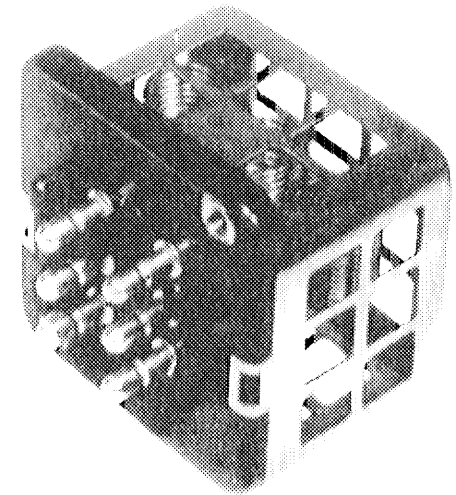


Figure 6 - Blower Resistors (Mounted In Blower Housing)