

COMPONENT LOCATIONS

AUTOMATIC CLIMATE CONTROL

Page-Figure

ACC Amplifier	Behind glove box	201-2
ACC Compressor Clutch	Front of compressor, lower LH side of engine	
ACC Control Panel	On upper console	
ACC Double Pole Relay	Behind glove box	205-4
ACC Servo Assembly	To right of RH rear of valve cover	210-2
A/C Rocker On/Off Switch ..	On upper console	
A/C In-Line Fuse	In fuse box	201-2
A/C Start Relay	In fuse box	201-2
Ambient Temperature Sensor.	Off RH bottom corner of chassis number plate.	206-2
Auxiliary Water Pump	Ahead of servo and cruise control actuator.	210-2
Bi-Level Compressor		
Vacuum Switch	Behind upper console	
Bi-Level Vacuum Switch	Behind upper console	
Blower Master Vacuum		
Switch	Behind glove box	205-4
Blower Motor	To right of glove box	201-1
Blower Resistors	In blower housing	211-1
Compressor Low-Pressure		
Cut-Out Switch	On receiver drier	202-1
Compressor Vacuum Switch .	Behind center of glove box	205-4
Evaporator Temperature		
Regulator	Behind glove box	
Fuse Box	LH rear corner of engine compartment	100-1
In-Car Temperature Sensor.	Top middle of instrument panel	
Switch-Over Valves	Behind upper console	
Water Pump Temperature		
Switch	Behind of glove box	201-1
C125 (6 pins)	Behind ACC servo assembly	210-2
C126 (2 pins)	Behind RH side of glove box	
C127 (2 pins)	Behind auxiliary water pump	207-1
C133 (12 pins)	Above passenger's footwell, next to console	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	210-4

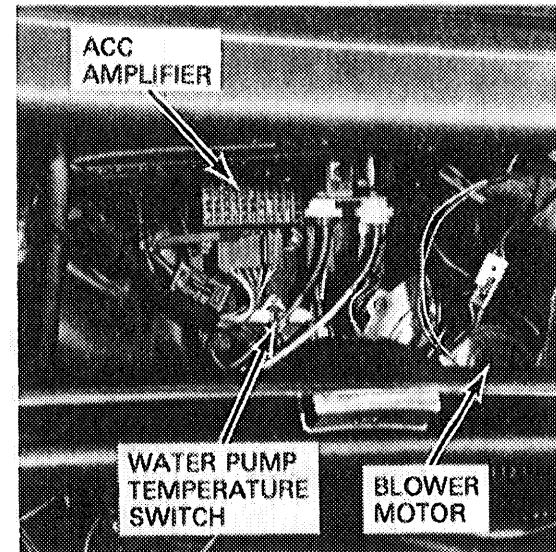


Figure 1 - Behind Glove Box

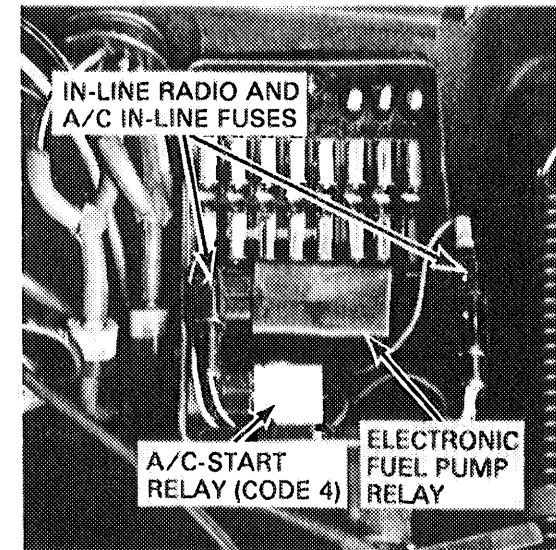


Figure 2 - Fuse Box

COMPONENT LOCATIONS

AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Behind LH kick panel	205-3
Coolant Temperature Switch	In water outlet, top front of engine	211-2
Fuse Box	LH rear corner of engine compartment	100-1
Receiver Drier Temperature Switch	On top of receiver drier	202-1
G107	LH radiator support	210-4

BACKUP LIGHTS/TRANSMISSION KICKDOWN

Fuse Box	LH rear corner of engine compartment	100-1
Kickdown Solenoid	RH front of transmission	209-2
Kickdown Switch	Under accelerator pedal	
Starter Lockout/Backup Light Switch	LH side of transmission	209-3
C104 (14 pins)	Base of parking brake support	205-3
G103	Behind LH rear seat	207-2
G104	Behind RH rear Seat	205-2

CENTER CONSOLE ILLUMINATION

Fuse Box	LH rear corner of engine compartment	100-1
Hazard Switch	In console, behind gear shift selector	
Light Switch	Instrument panel, left of steering column	203-2
G102	Behind instrument cluster	

CHARGING SYSTEM

Alternator	Front of engine	
Battery	RH front of engine compartment	
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-2
Light Switch	Instrument panel, left of steering column	203-2
Starter Assembly	Lower RH rear of engine	
C105 (4 terminals)	Below battery	210-5
G100	Below battery	210-5

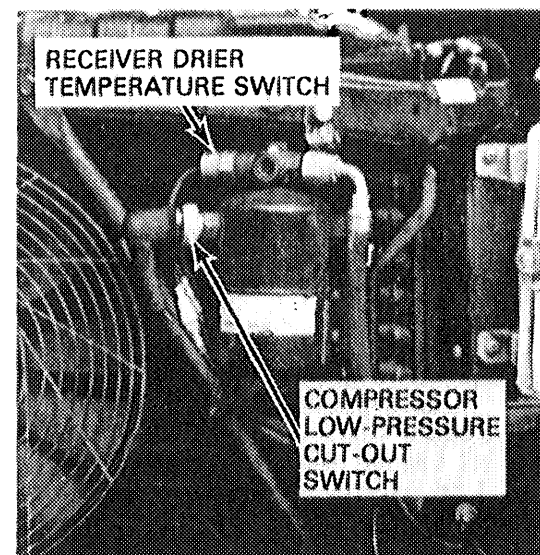


Figure 1 - LH Front of Radiator

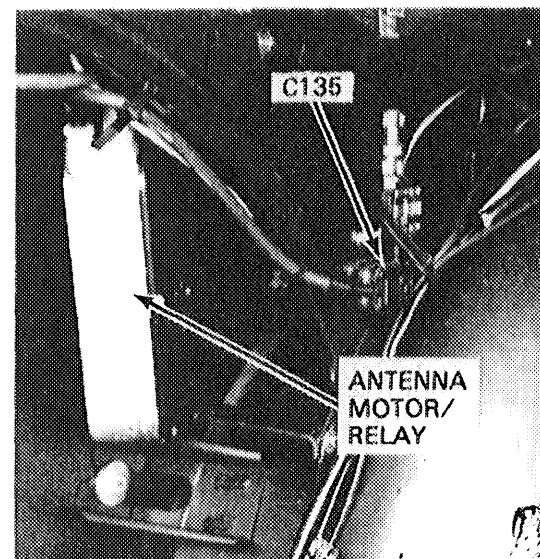


Figure 2 - Behind LH Rear Wheel Well

COMPONENT LOCATIONS

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

		Page-Figure
Antenna Motor/Relay	Behind LH rear wheel well	202-2
Antenna Switch	On upper console	
Fuse Box	LH rear corner of engine compartment	
In-Line Radio Fuse	In fuse block	201-2
C104 (14 pins)	Base of parking brake support	205-3
C135 (6 pins)	Behind LH rear wheel well	205-1
G102	Behind instrument cluster	
G103	Behind LH rear seat	207-2

GLOVE BOX LIGHT

Brake Switch	Brake pedal support	
Fuse Box	LH rear corner of engine compartment	100-1
Glove Box Light Switch	LH side of glove box	205-4
G101	RH front fender, behind headlights	

COURTESY LIGHTS

Dome Light Delay Relay	Above parking brake support	203-1
Door Switches	In each door jamb	204-2
Flasher	Between parking brake and brake support	203-1
Front Dome Light and Switch	Behind rear view mirror assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Dome Light Switch	On upper console	
Warning Module	Behind instrument panel, left of steering column	
C104 (14 pins)	Base of parking brake support	205-3
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G103	Behind LH rear seat	207-2
G104	Behind RH rear seat	205-2

HEADLIGHTS/FOG LIGHTS

Combination Switch	Upper LH of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	203-2
C106 (14 pins)	Between parking brake and brake support	205-3
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	210-4

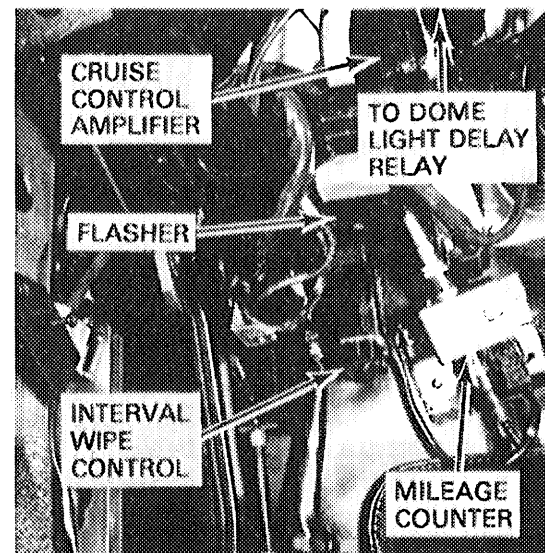


Figure 1 - LH Kick Panel

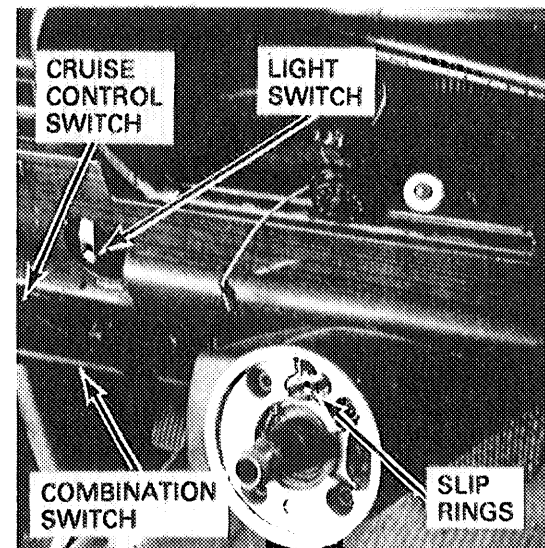


Figure 2 - LH Side of Instrument Panel

COMPONENT LOCATIONS

HEATED SEATS

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Heated Seat In-Line Fuses ...	Above parking brake support	
Seat Heaters	In each seat cushion	
Seat Heater Switches	In center console	
G102	Behind instrument cluster	

HORNS

Fuse Box	LH rear corner of engine compartment	100-1
Horn Switch	Behind center of steering wheel	
Slip Rings	Behind steering wheel	203-2
C106 (14 pins)	Between parking brake and brake support	205-3
C135 (6 pins)	Behind LH rear wheel well	
G102	Behind instrument cluster	

LIGHTS: PARK/TAIL OR MARKER/LICENSE/TRUNK

Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	203-2
C104 (14 pins)	Base of parking brake support	205-3
C135 (6 pins)	Behind LH rear wheel well	
G101	RH front fender, behind headlights	
G103	Behind LH rear seat	207-2
G104	Behind RH rear seat	205-2
G107	LH radiator support	210-4

POWER DISTRIBUTION

Diagnostic Plug	Top of LH front wheel well	204-1
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	208-2
In-Line Radio Fuse	In fuse box	201-2
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	Base of parking brake support	205-3
C105 (4 terminals)	Below battery	210-5
G100	Below battery	210-5

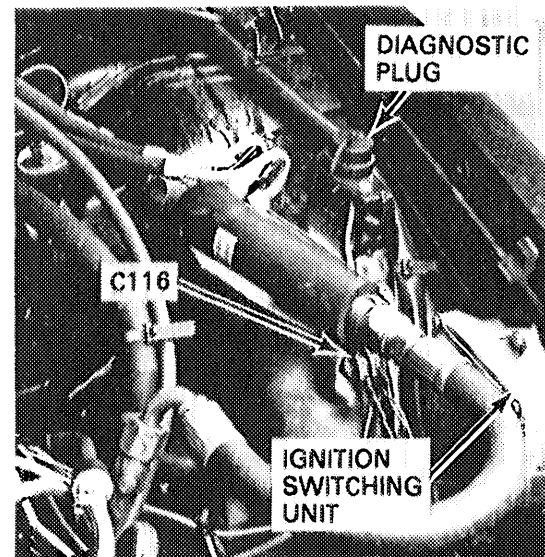


Figure 1 - LH Front Wheel Well

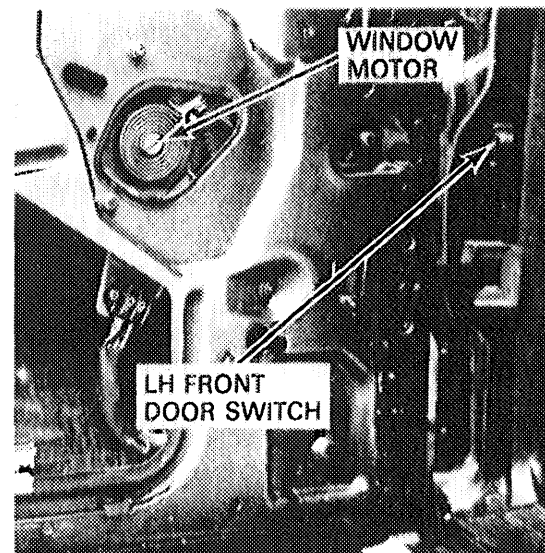


Figure 2 - Driver's Door

COMPONENT LOCATIONS

POWER WINDOWS

Page-Figure

Console Switch Group	On center console	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Window Switches	Below each rear window	
Window Motors	Below each window	204-2
Window Relay	Behind LH kick panel	
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	

REAR DEFOGGER

Fuse Box	LH rear corner of engine compartment	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay	To right of parking brake support	205-3
C104 (14 pins)	Base of parking brake support	205-3
G102	Behind instrument cluster	
G104	Behind RH rear seat	205-2

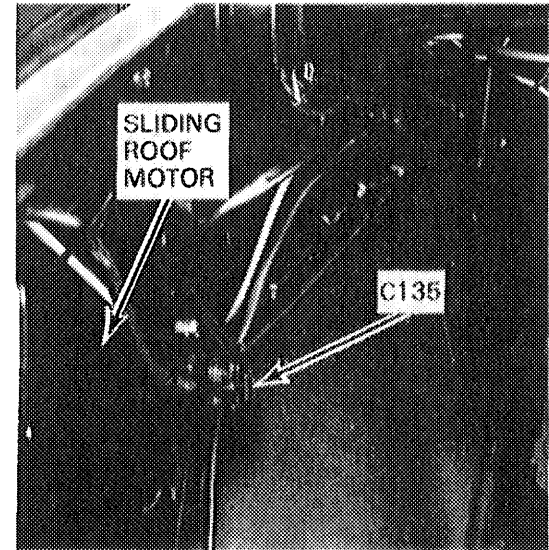


Figure 1 - Behind LH Rear Wheel Well

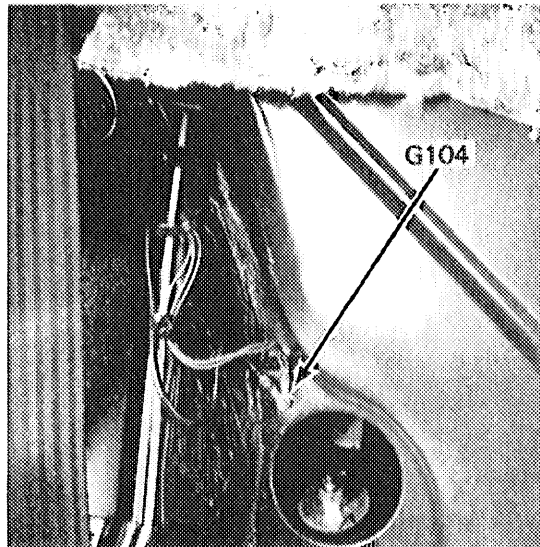


Figure 2 - Behind RH Rear Seat

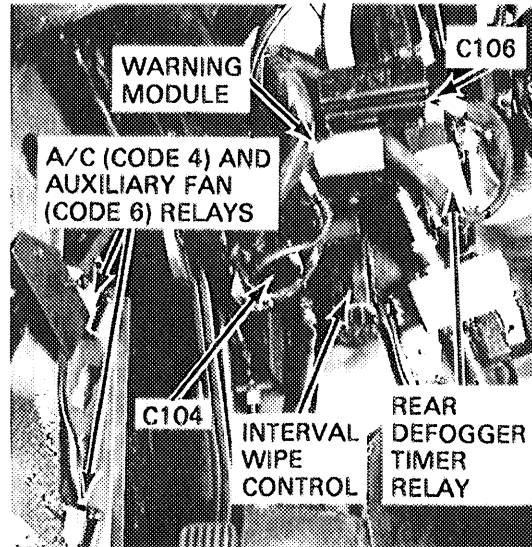


Figure 3 - LH Kick Panel

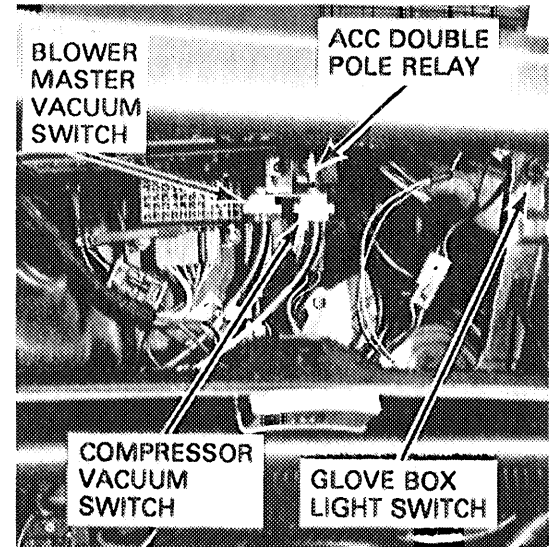


Figure 4 - Behind Glove Box

COMPONENT LOCATIONS

SLIDING ROOF

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Sliding Roof Motor	Above LH rear wheel well	205-1
Sliding Roof Switch	On upper console assembly	
G102	Behind instrument cluster	

START/IGNITION/FUEL DELIVERY/LAMBDA CONTROL

A/C-Start Relay	In fuse box	201-2
Cold-Start Valve	To right of front part of LH valve cover	206-1
Diagnostic Plug	Top of LH front wheel well	204-1
Electronic Fuel Pump Relay ..	In fuse box	201-2
Frequency Valve	Between LH valve cover and air flow sensor ..	206-1
Fuel Pump	Under car, behind differential	209-4
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Coil	Front of LH front wheel well	210-1
Ignition Resistors	Behind LH headlight	211-3
Ignition Switch	Instrument panel, right of steering column	208-2
Ignition Switching Unit	Attached to front part of LH front fender	204-1
Lambda Electronic Control Module (ECM)	Behind RH kick panel	210-3
Lambda Voltage Supply Relay	Under RH side of instrument panel	
Oil Temperature Switch	Beside oil filter	210-6
Over Voltage Protection Unit	Below Lambda electronic control module (ECM)	210-3
Oxygen Sensor	On exhaust pipe, below primary catalyst	209-2
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup Light Switch	LH side of transmission	209-3
Thermo-Time Switch	Off front LH corner of air blow sensor assembly	206-1
Throttle Switch	Top front of engine, under air flow sensor	
Warm-Up Enrichment Compensator	Top left of RH cylinder head	206-2
C104 (14 pins)	To right of emergency brake support	205-3
C105 (4 terminals)	Below battery	210-5
C116 (2 terminals)	Lower front part of LH front wheel well	204-1
C143 (1 pin)	Under car, behind RH front wheel well	

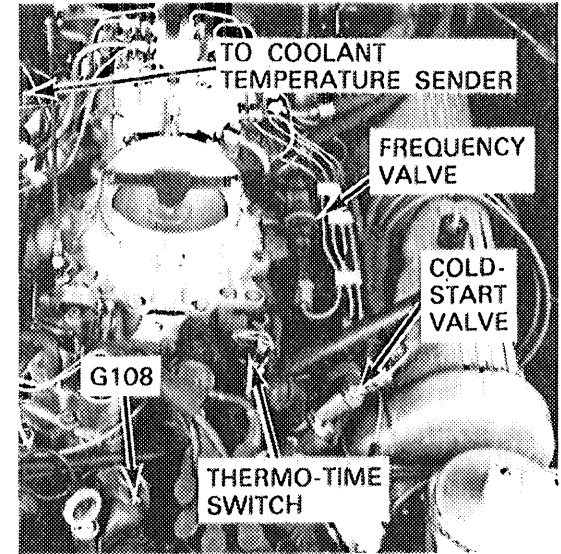


Figure 1 - Top of Engine

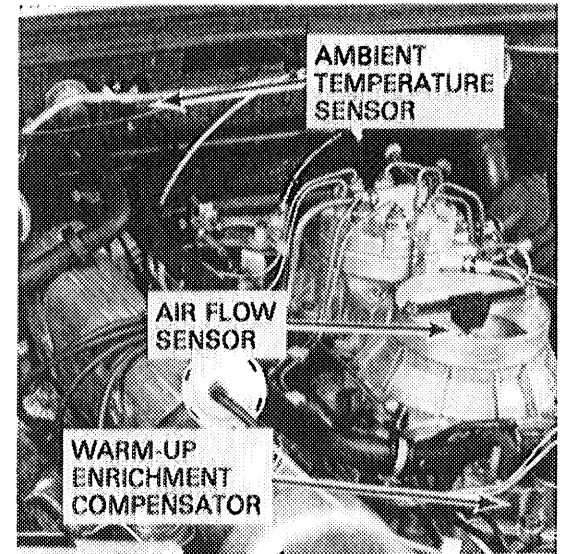


Figure 2 - Top of Engine

COMPONENT LOCATIONS

	Page-Figure
C144 (3 pins).....	Below battery 210-5
C145 (1 pin).....	Behind LH headlights 210-5
G100	RH front fender, ahead of battery 210-5
G101	RH front fender, behind headlights 210-5
G102	Behind instrument cluster 207-2
G103	Behind RH rear seat 207-2
G106	Under ignition switching unit, behind LH headlights 206-1
G108	Front of engine, at lifting bracket 206-1

STOPLIGHTS/CRUISE CONTROL

Brake Switch	Middle of brake pedal support 207-1
Cruise Control Actuator	LH rear corner of engine compartment 207-1
Cruise Control Amplifier	To left of base of steering column 203-2
Cruise Control Switch	Upper LH side of steering column 203-2
Fuse Box	LH rear corner of engine compartment 100-1
Vehicle Speed Sensor	Mounted on speedometer 209-1
C104 (14 pins)	Base of parking brake support 205-3
C140 (6 pins).....	Behind LH side of instrument panel, above steering column 205-3
G102	Behind instrument cluster 207-2
G103	Behind LH rear seat 207-2
G104	Behind RH rear seat 205-2

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH of steering column 203-2
Flasher	Between parking brake and brake support 203-1
Fuse Box	LH rear corner of engine compartment 100-1
Hazard Switch	In center console 205-3
C104 (14 pins)	Base of parking brake support 205-3
C106 (14 pins)	Between parking brake and brake support 205-3
G101	RH front fender, behind headlights 207-2
G102	Behind instrument cluster 205-2
G103	Behind LH rear seat 205-2
G104	Behind RH rear seat 210-4
G107	LH radiator support 210-4

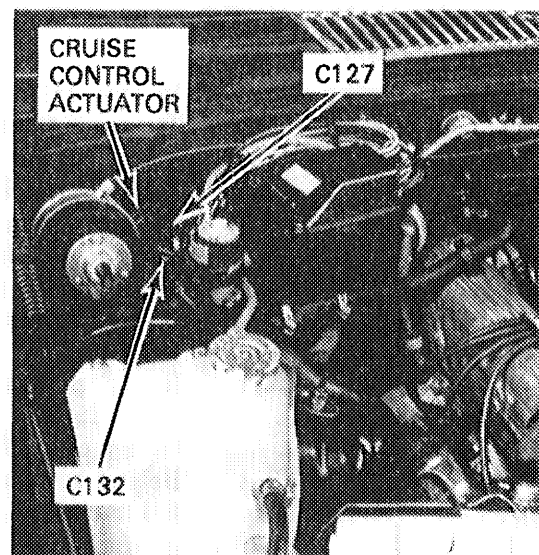


Figure 1 - Behind RH Front Wheel Well

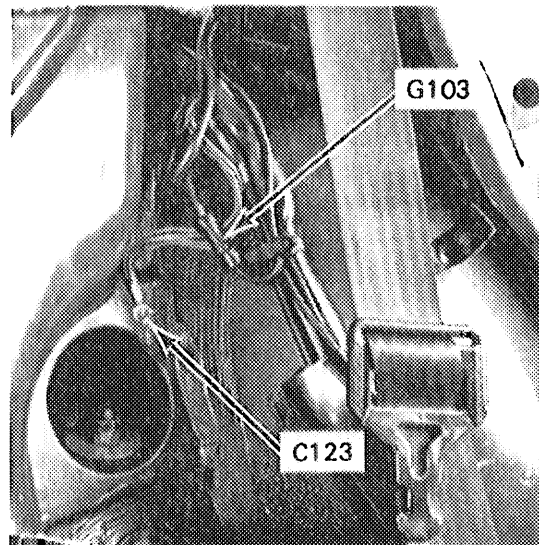


Figure 2 - Behind LH Rear Seat

COMPONENT LOCATIONS

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

	Page-Figure
Brake Wear Sensors	In each front brake pad
Coolant Temperature Sender	Top rear of RH cyclinder head 206-1
Diagnostic Plug	Top of LH front wheel well 204-1
Fuel Gauge Sender	Under first aid kit tray
Fuse Box	LH rear corner of engine compartment 100-1
Ignition Switching Unit.....	Connected to front of LH front wheel well 204-1
Light Switch	Instrument panel, left of steering column..... 203-2
Mileage Counter	Between bases of parking brake and brake support 203-1
C104 (14 pins)	Base of parking brake support 205-3
C116 (2 terminals)	Lower front part of LH front wheel well 204-1
C131 (2 pins).....	On top of LH front wheel well 208-1
C132 (2 pins).....	Behind RH front wheel well..... 207-1
G101	RH front fender, behind headlights
G102	Behind instrument cluster
G104	Behind RH rear seat 205-2
G106	Under ignition switching unit, behind LH headlights

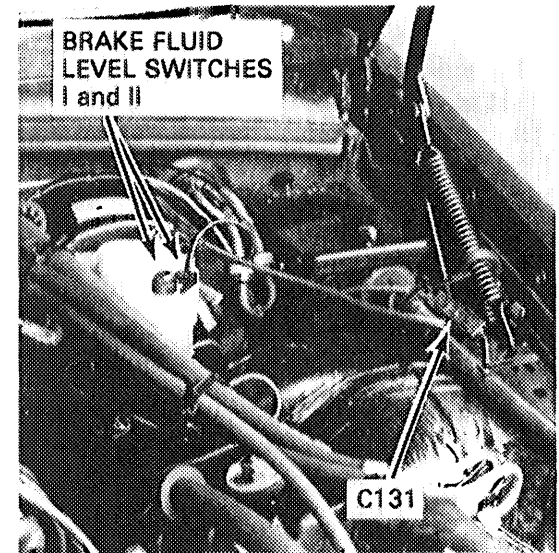


Figure 1 - Above LH Front Wheel Well

WARNING SYSTEM

Brake Fluid Level	
Switches	Brake fluid reservoir 208-1
Dome Light Delay Relay	Between parking brake and brake supports ... 203-1
Dome Light Ground	Near dome light assembly
Door Switch	In each door jamb 204-2
Driver's Seatbelt Switch.	Part of driver's seatbelt assembly
Flasher	Between parking brake and brake supports ... 203-1
Fuse Box	LH rear corner of engine compartment 100-1
Key Warning Switch	Part of ignition switch 208-2
Light Switch	Instrument panel, left of steering column
Parking Brake Switch	On parking brake support
Warning Module	Behind instrument panel, left of steering column 205-3
C104 (14 pins)	Base of parking brake support 205-3
C131 (2 pins).....	On top of LH front wheel well 208-1
G101	RH front fender, behind headlights
G102	Behind instrument cluster

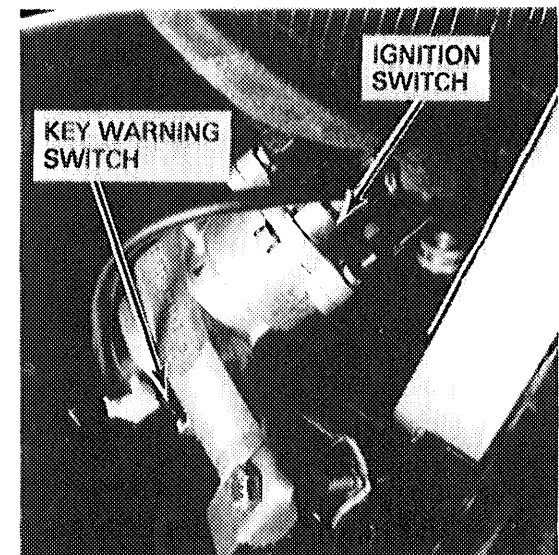


Figure 2 - Ignition Switch (As Seen From Below)

COMPONENT LOCATIONS

WIPER/WASHER

		Page-Figure
Combination Switch	Upper LH of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind instrument panel, left of steering column	203-1
Washer Motor	Below battery	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	Between parking brake and brake support	205-3
C112 (6 pins)	Above parking brake support	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

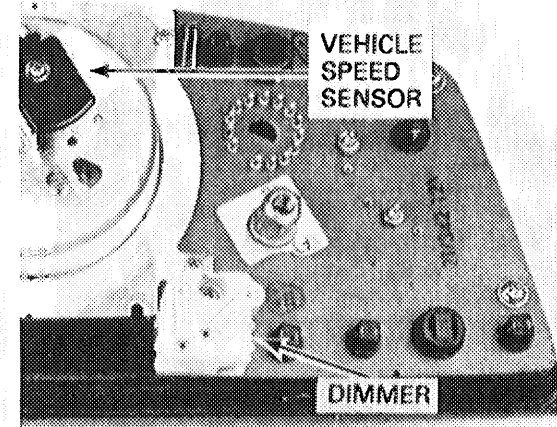


Figure 1 - Back of Instrument Cluster

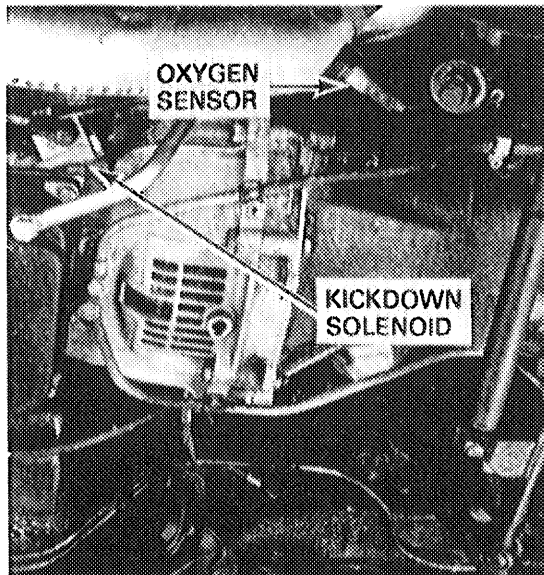


Figure 2 - RH Side of Transmission

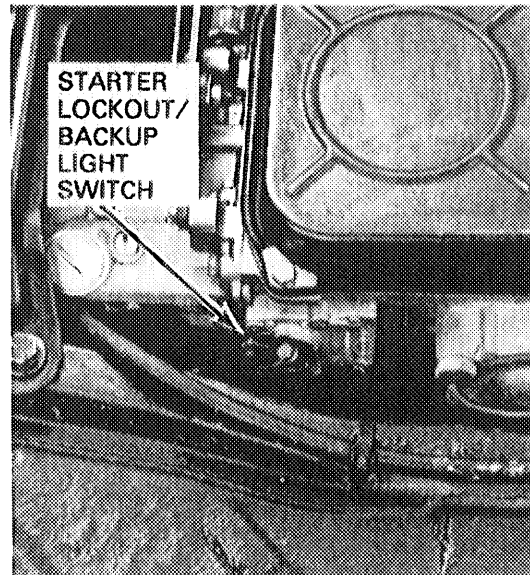


Figure 3 - LH Side of Transmission

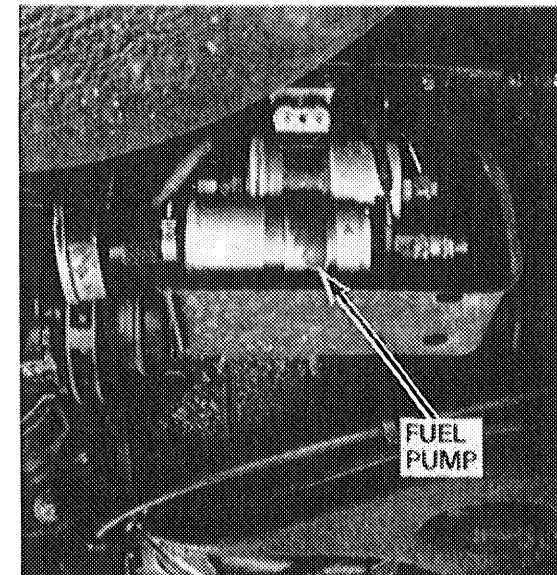


Figure 4 - Behind Differential

COMPONENT LOCATIONS

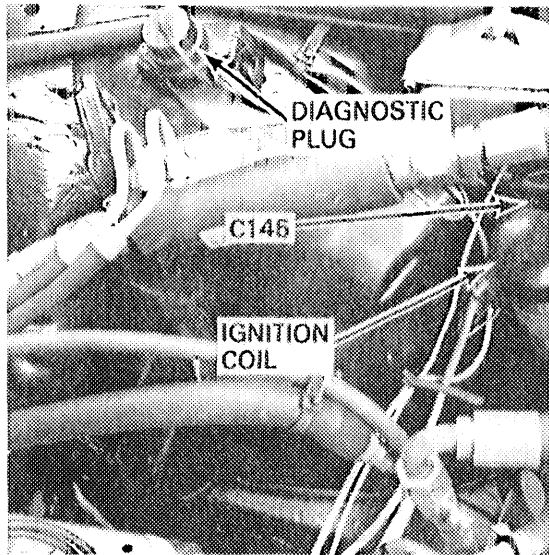


Figure 1 - LH Front Wheel Well

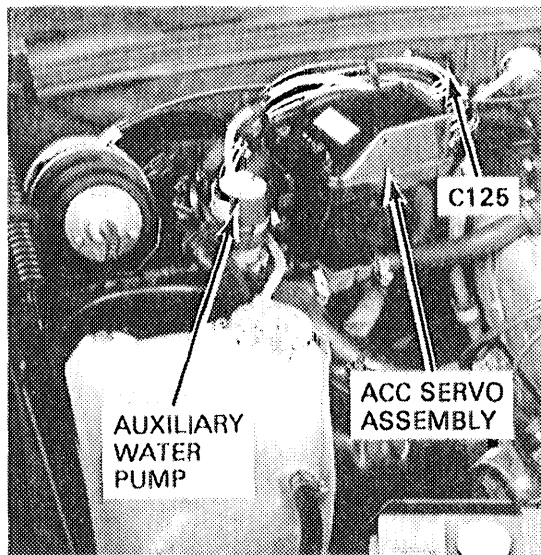


Figure 2 - To Right Rear of Engine

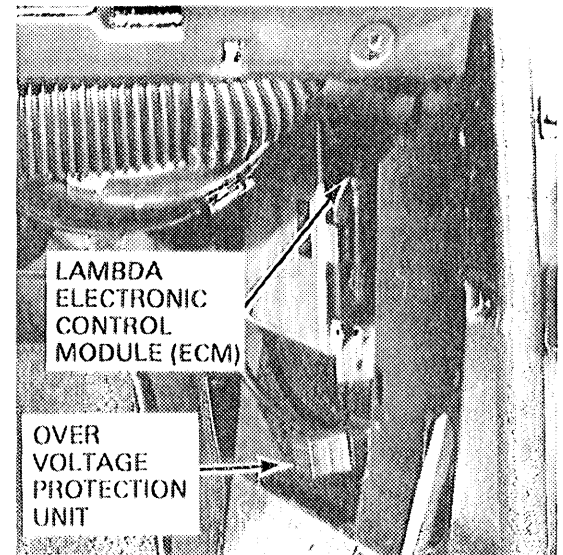


Figure 3 - RH Kick Panel

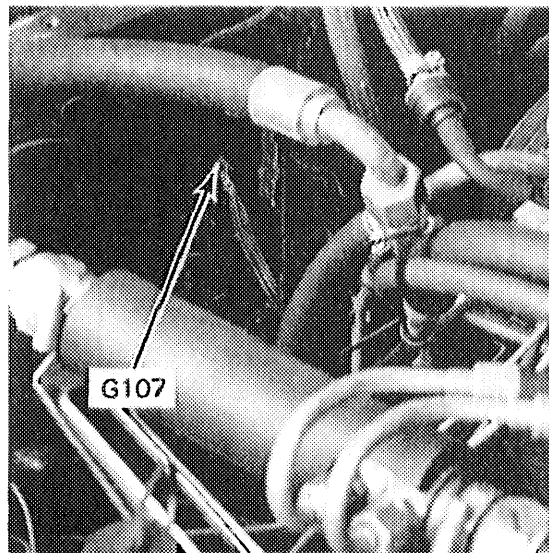


Figure 4 - LH Radiator Support

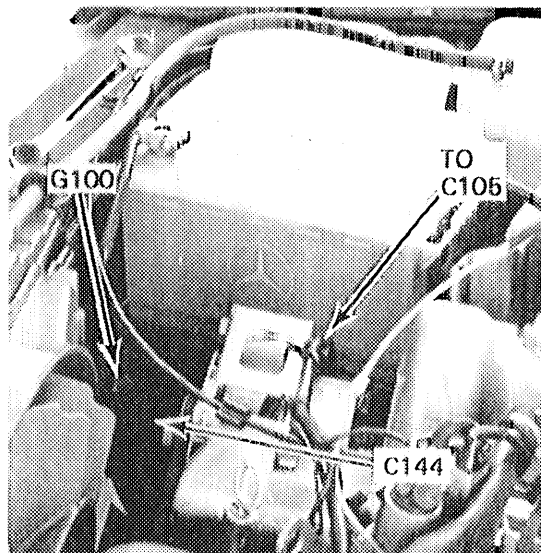


Figure 5 - Beside Battery

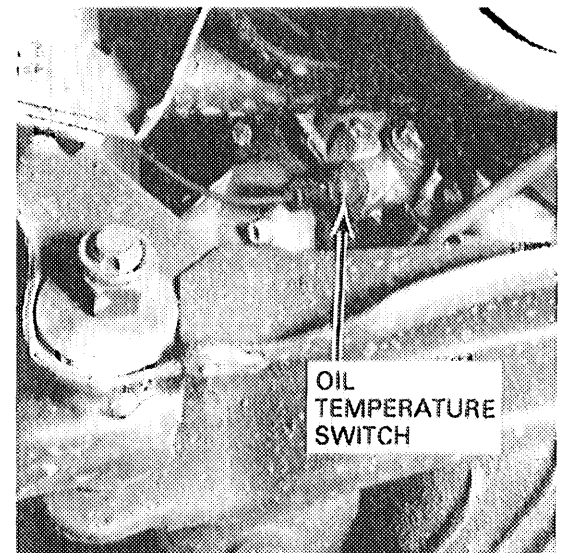


Figure 6 - Base of Oil Filter

COMPONENT LOCATIONS

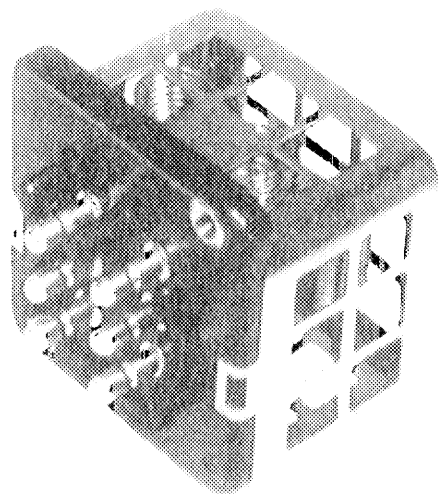


Figure 1 - Blower Resistors (Mounted in Blower Housing)

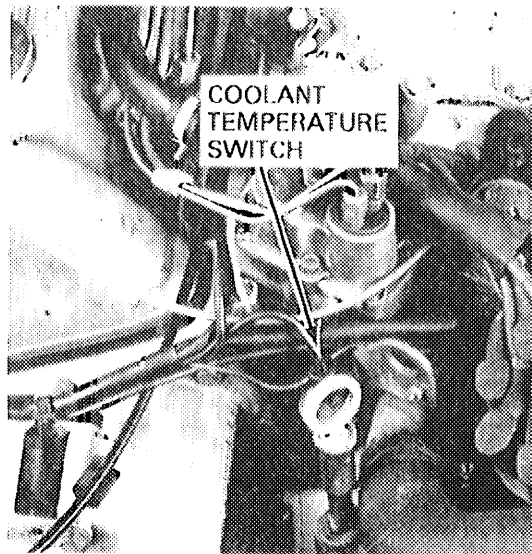


Figure 2 - Front RH Side of Engine

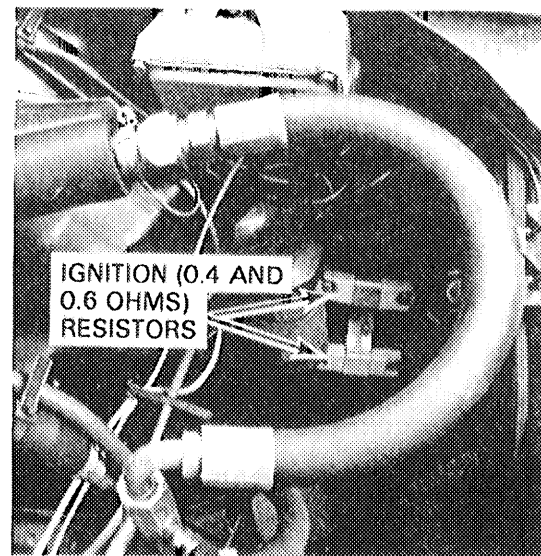


Figure 3 - Behind LH Headlights