

INDEX

INDEX - Alphabetical Listing of Electrical Circuits


Automatic Climate Control.....	123	Lights (continued)	
Automatic Antenna	121	—Headlights.....	108
Auxiliary Fan	122	—Instrument Cluster Illumination	114
Charging System	107	—License	111
Cigar Lighter	121	—Marker	111
Clock	114	—Park	110
Component Location	201	—Stop	109
Cruise Control	109	—Tail	110
Fuel Delivery	105	—Turn Signal	112
Gauges	114	—Trunk	111
Ground Distribution	129	Power Distribution	102
Heated Seats	128	Power Windows.....	127
Horns	119	Radio	121
Ignition	105	Rear Defogger	126
Lambda Control	106	Sliding Roof	126
Lights		Start	104
—Backup	116	Tachometer	114
—Center Console Illumination	118	Transmission Kickdown	116
—Courtesy	117	Warning Indicators	114
—Fog Lights.....	108	Warning System	113
—Glove Box	119	Wiper/Washer	120
—Hazard	112		

Fuse-Circuit List


Fuse	Rating (AMPS)	Circuits Protected	Page
1	8(WT)	Automatic Antenna	121
		Courtesy Lights	117
		Lights: Hazard	112
		Trunk Light	
		Warning System	113
2	16(PK)	Auxiliary Fan	122
3	16(PK)	Automatic Climate Control	125
4	8(WT)	Backup Lights/Transmission Kickdown	116
		Lights: Turn Signal	112
		Stoplights/Cruise Control	109
		Warning Indicators/Gauges	114
		Warning System	113
5	8 (WT)	Center Console Illumination	118
		Instrument Cluster Illumination	115
		Lights: Marker/License	111
		Lights: Park/Tail (RH)	110
		Warning System	113
6	25(BU)	Cigar Lighter	121
		Rear Defogger	126
7	8(WT)	Lights: Park/Tail (LH)	110
8	16(PK)	Headlights	108
		Horns	119
		Wiper/Washer	120
9	8(WT)	Automatic Climate Control	124

Fuse	Rating	Circuits Protected	Page
10	16(PK)	Auxiliary Fan	122
		Power Windows	127
		Sliding Roof	126
11	8(WT)	Headlights (LH High Beam)	108
12	8(WT)	Headlights (RH High Beam)	108
13	16(PK)	Headlight (RH Low Beam)/Fog Lights	108
14	8(WT)	Headlight (RH Low Beam)	108
15	16(PK)	Power Windows	127
16	16(PK)	Power Windows	127
In-Line	2	Automatic Climate Control	124
	8	Heated Seat (Front)	128
	8	Heated Seat (Rear)	128
	8	Radio	121


102
280
SE

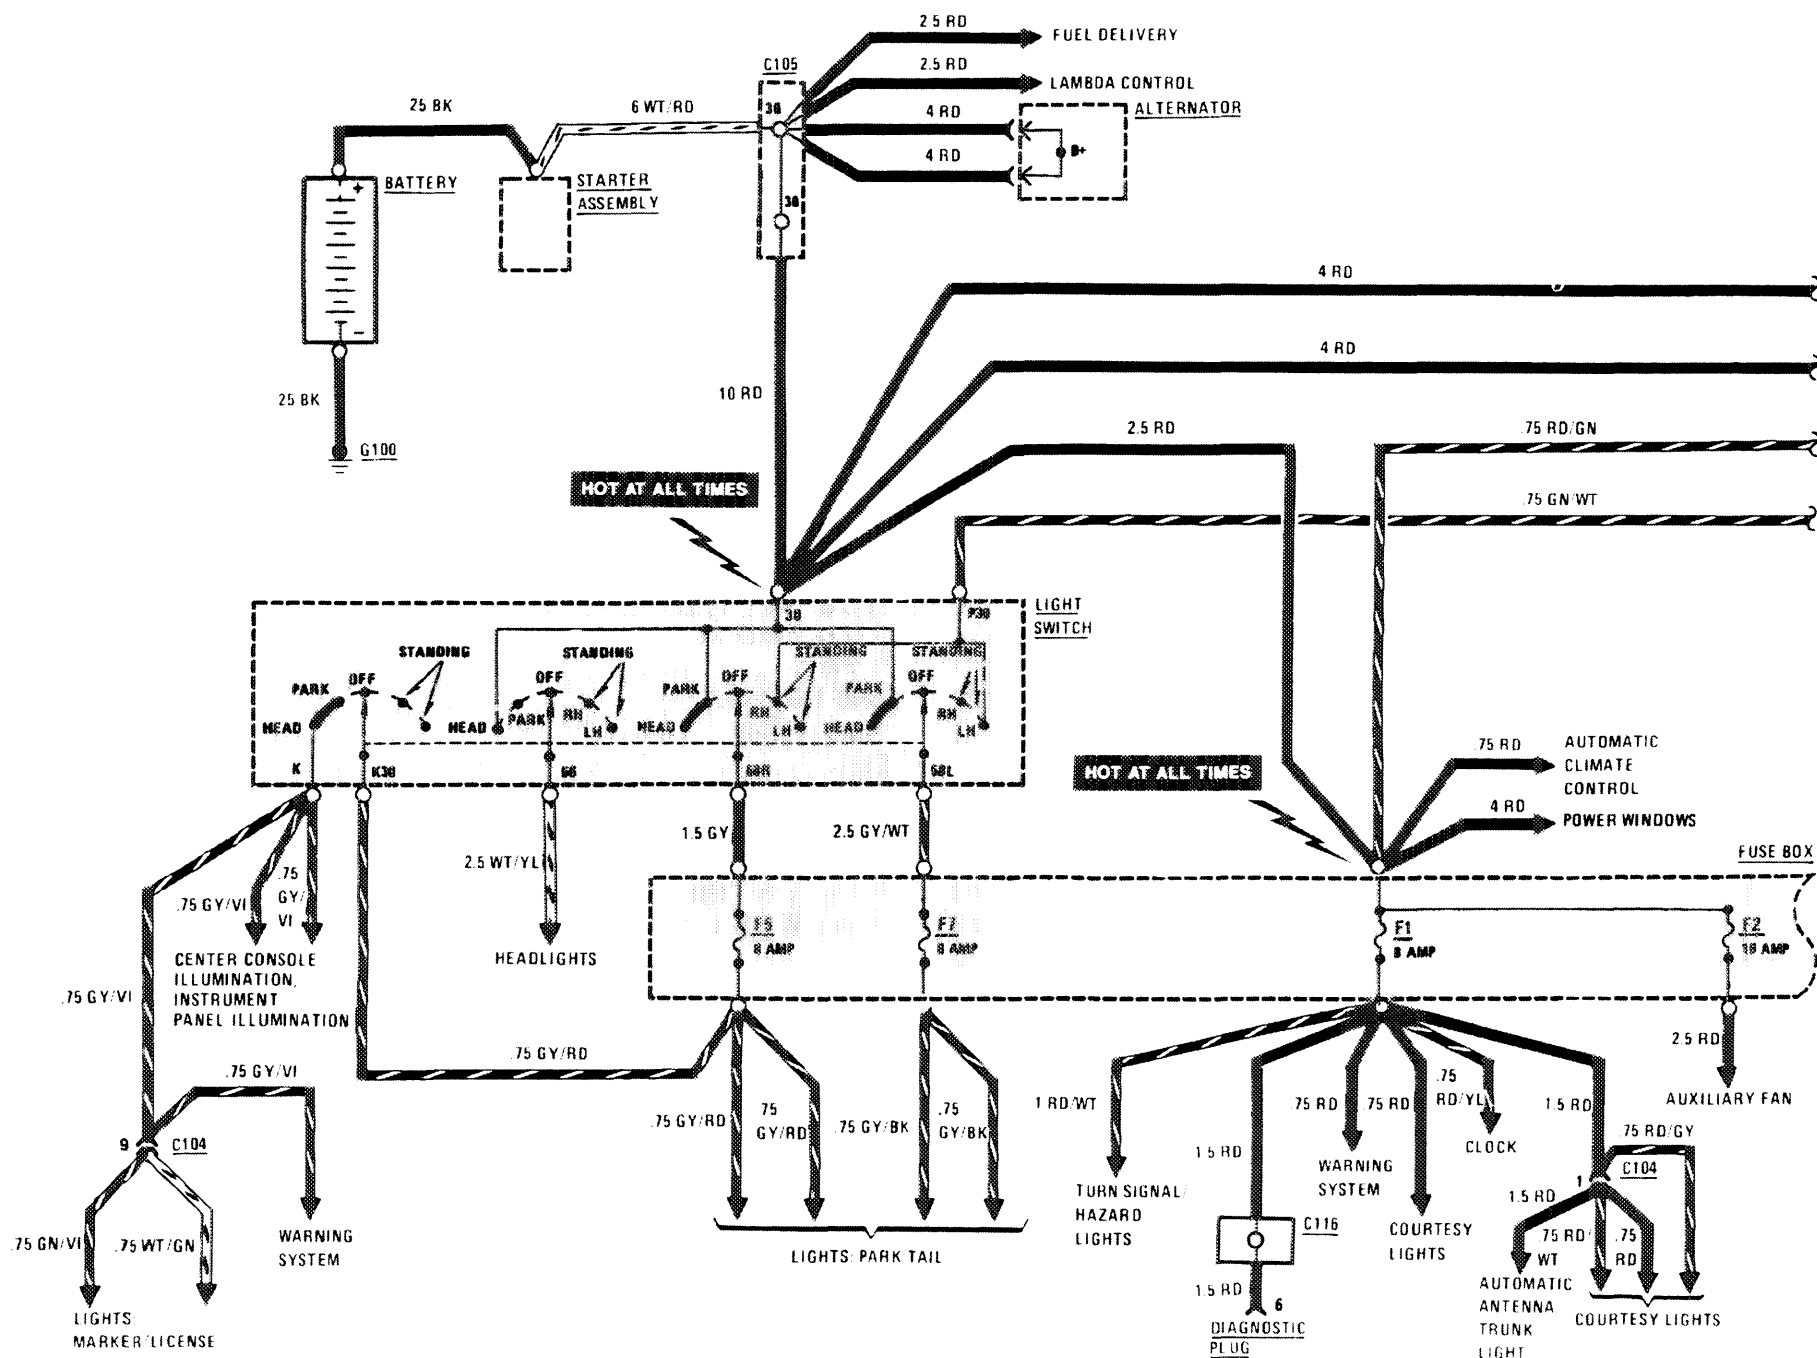


POWER DISTRIBUTION

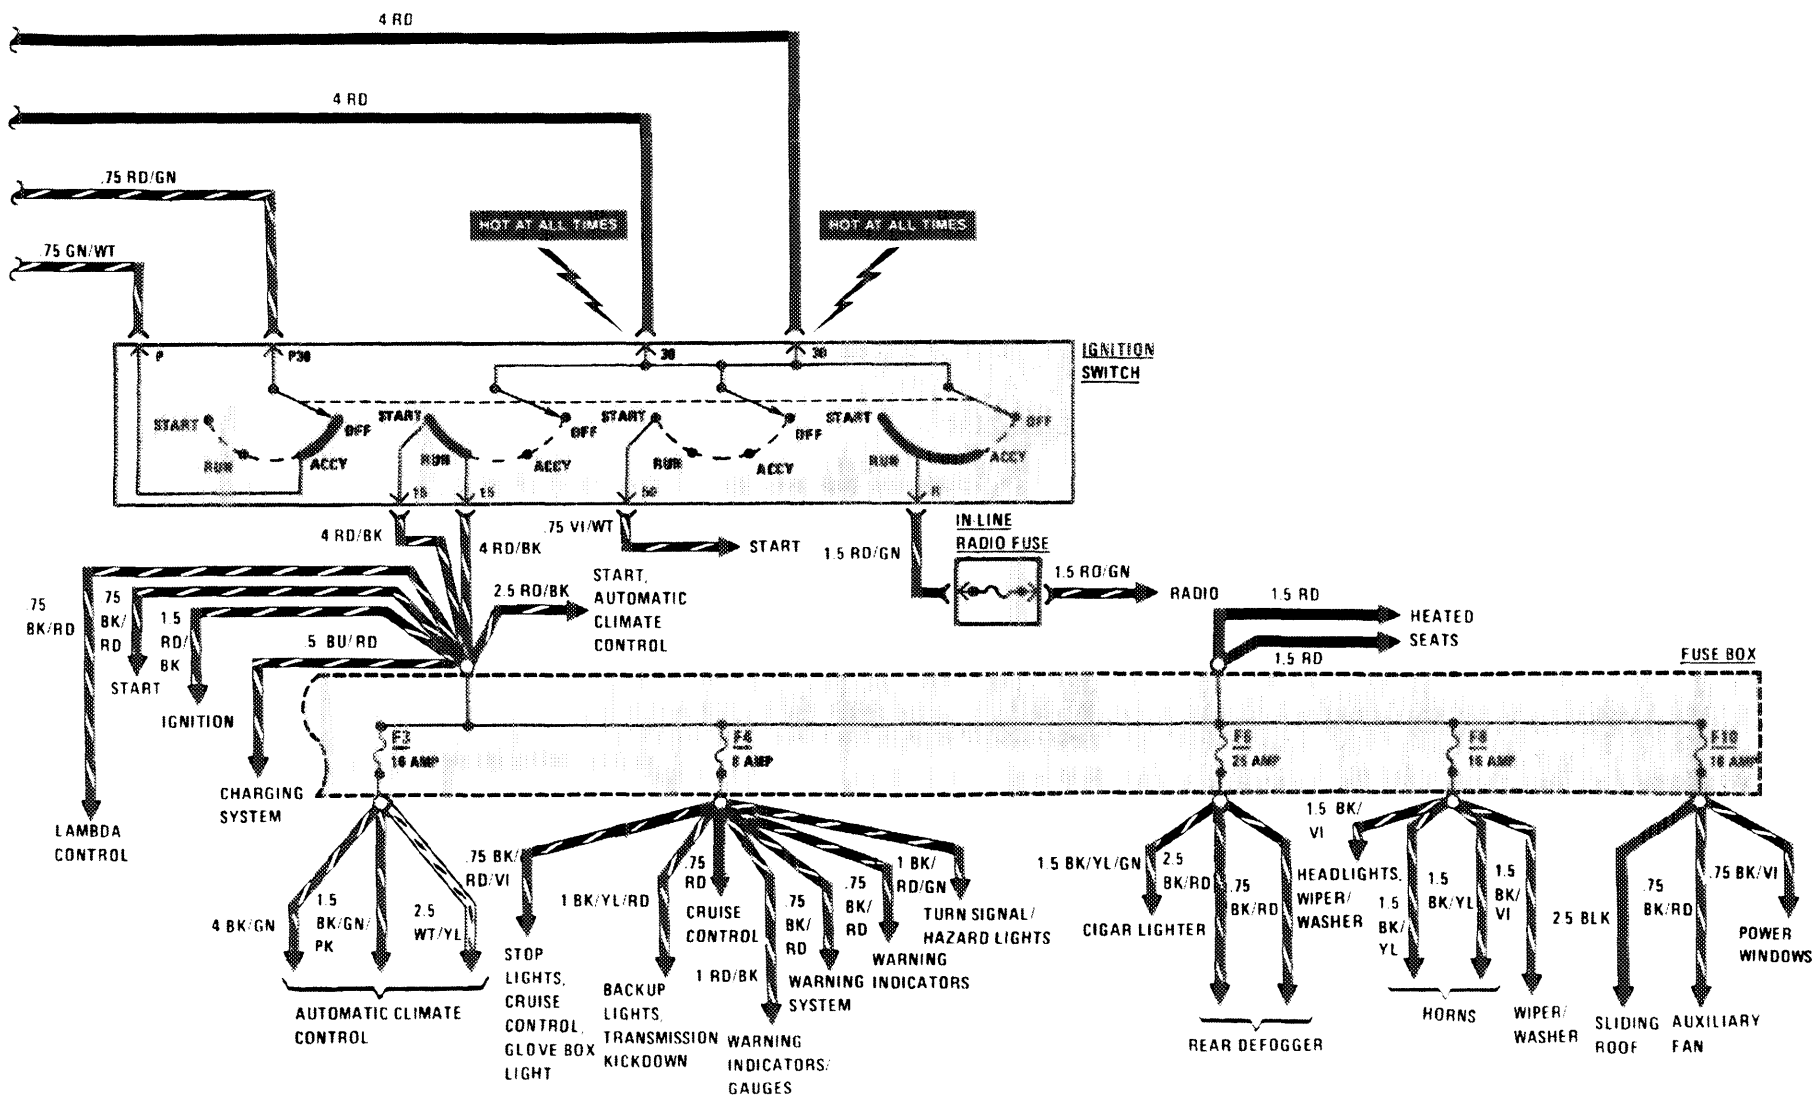


START

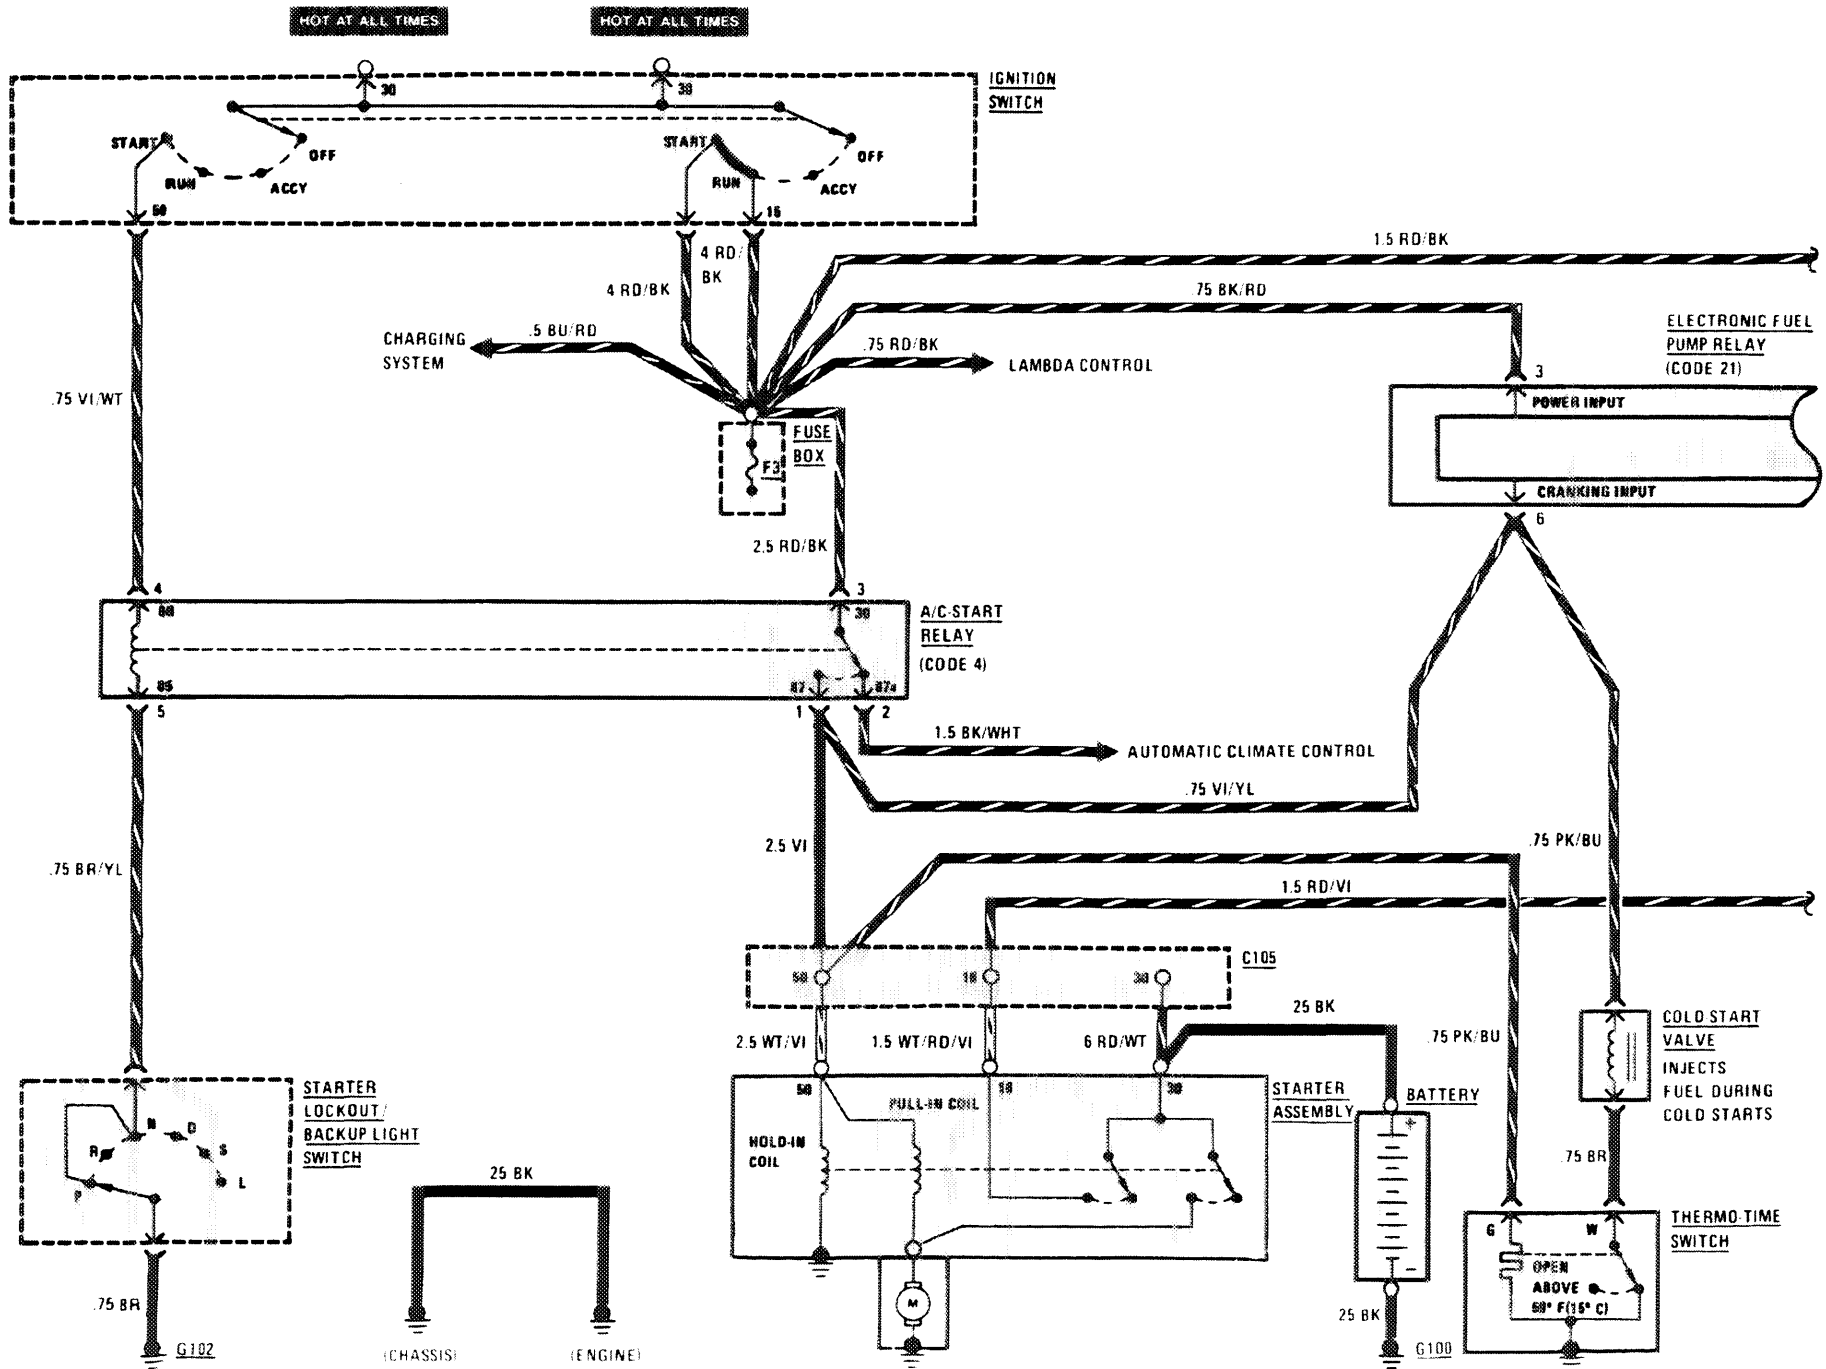


IGNITION/FUEL DELIVERY

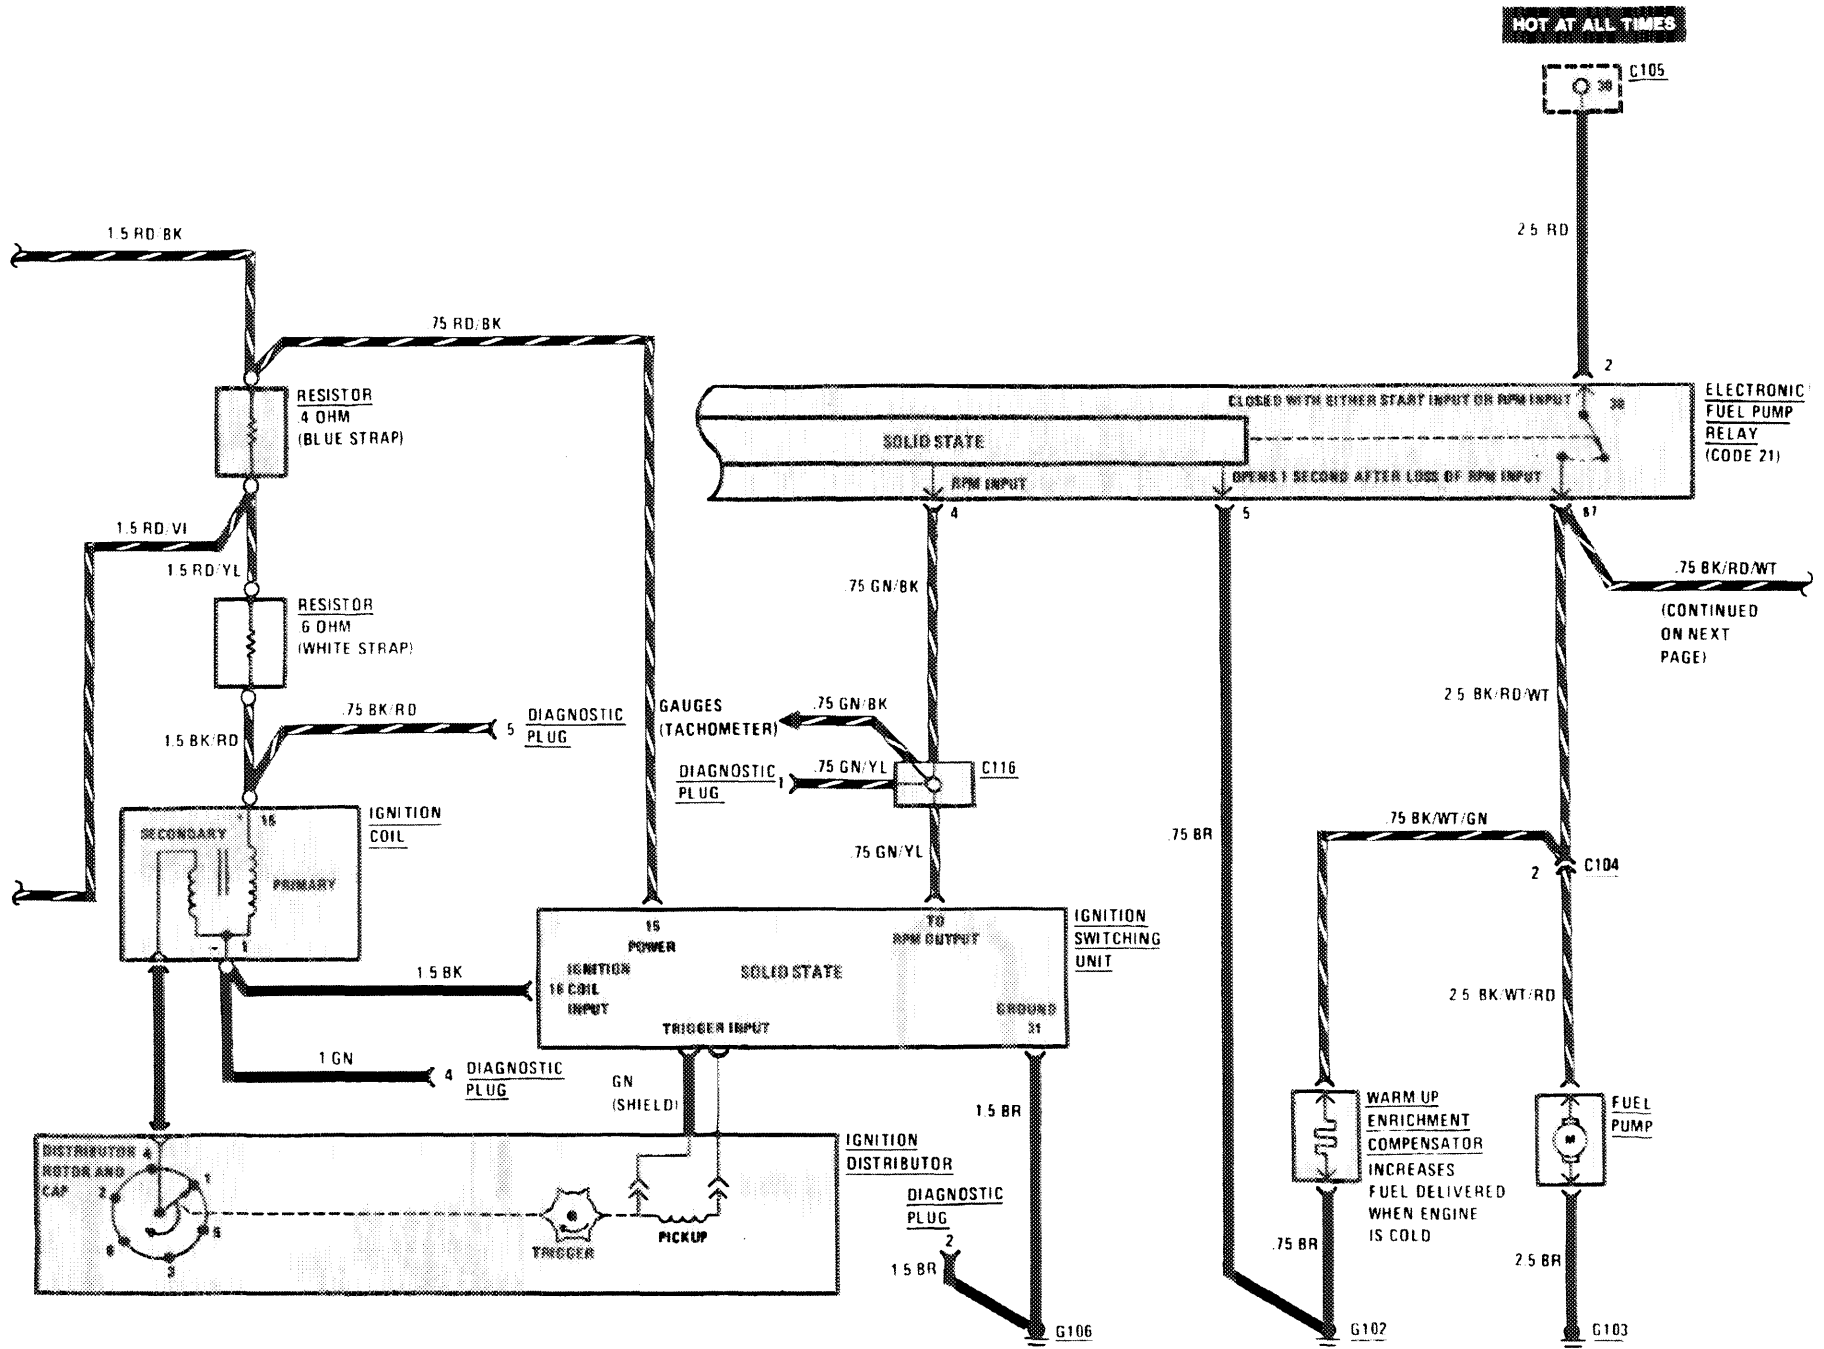


LAMBDA CONTROL

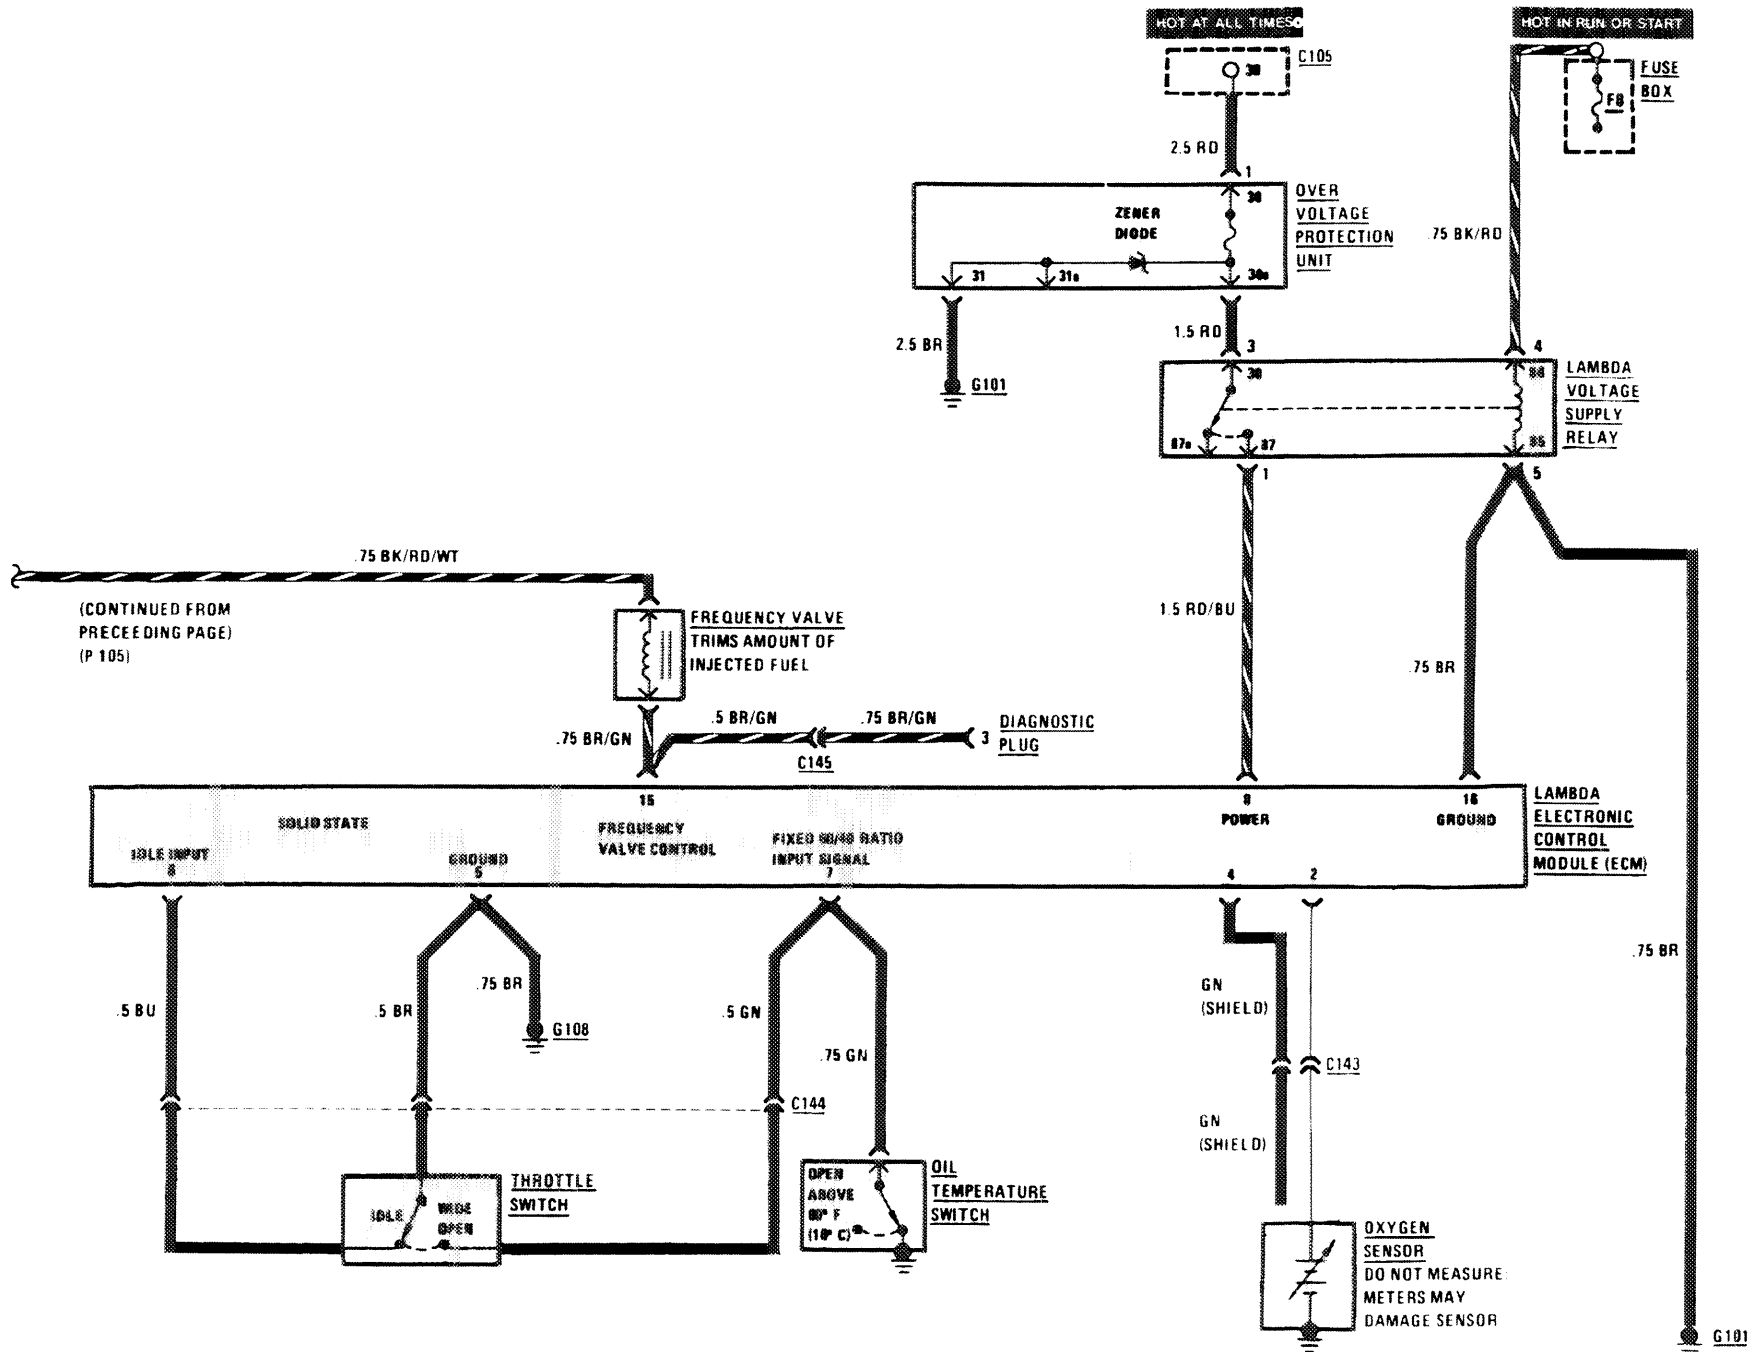


CHARGING SYSTEM

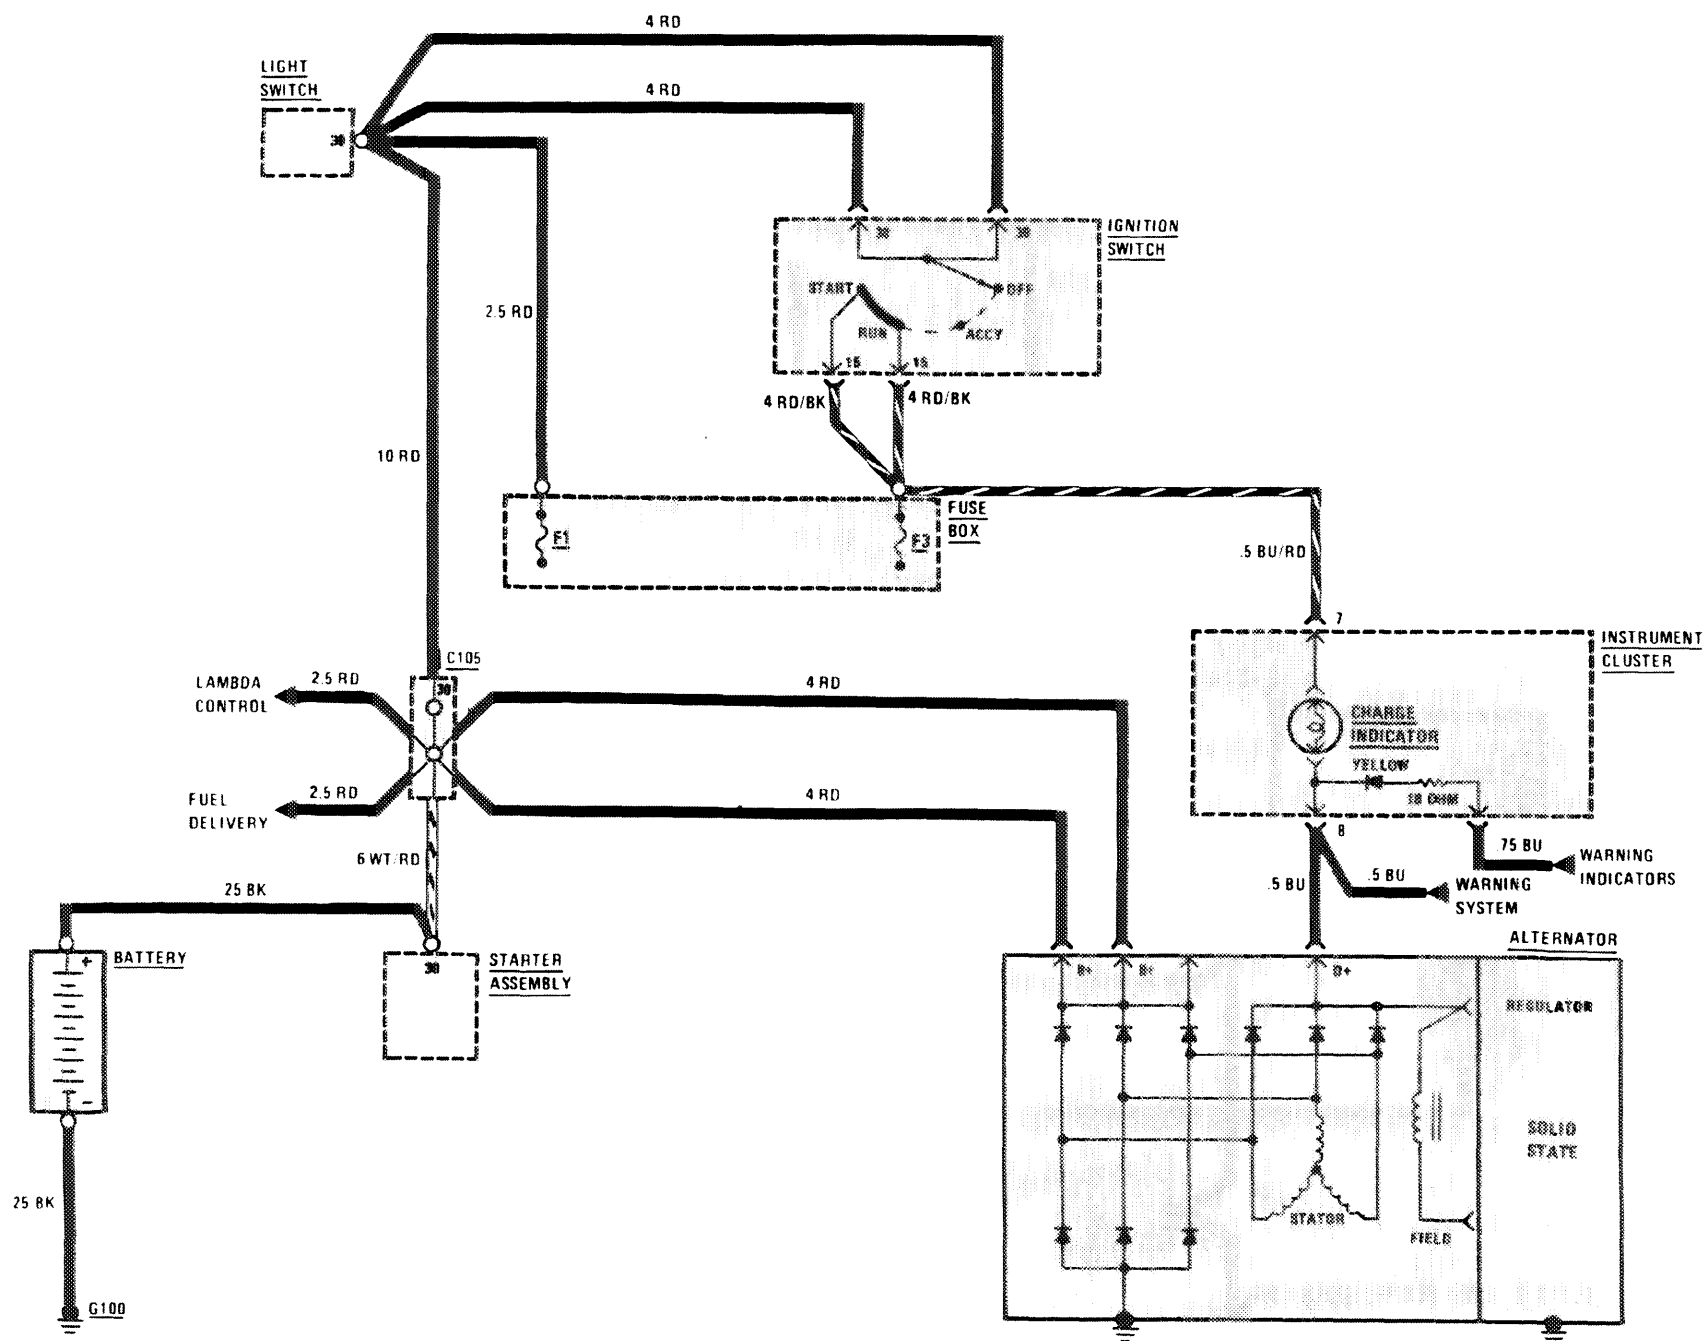

108
280
SE

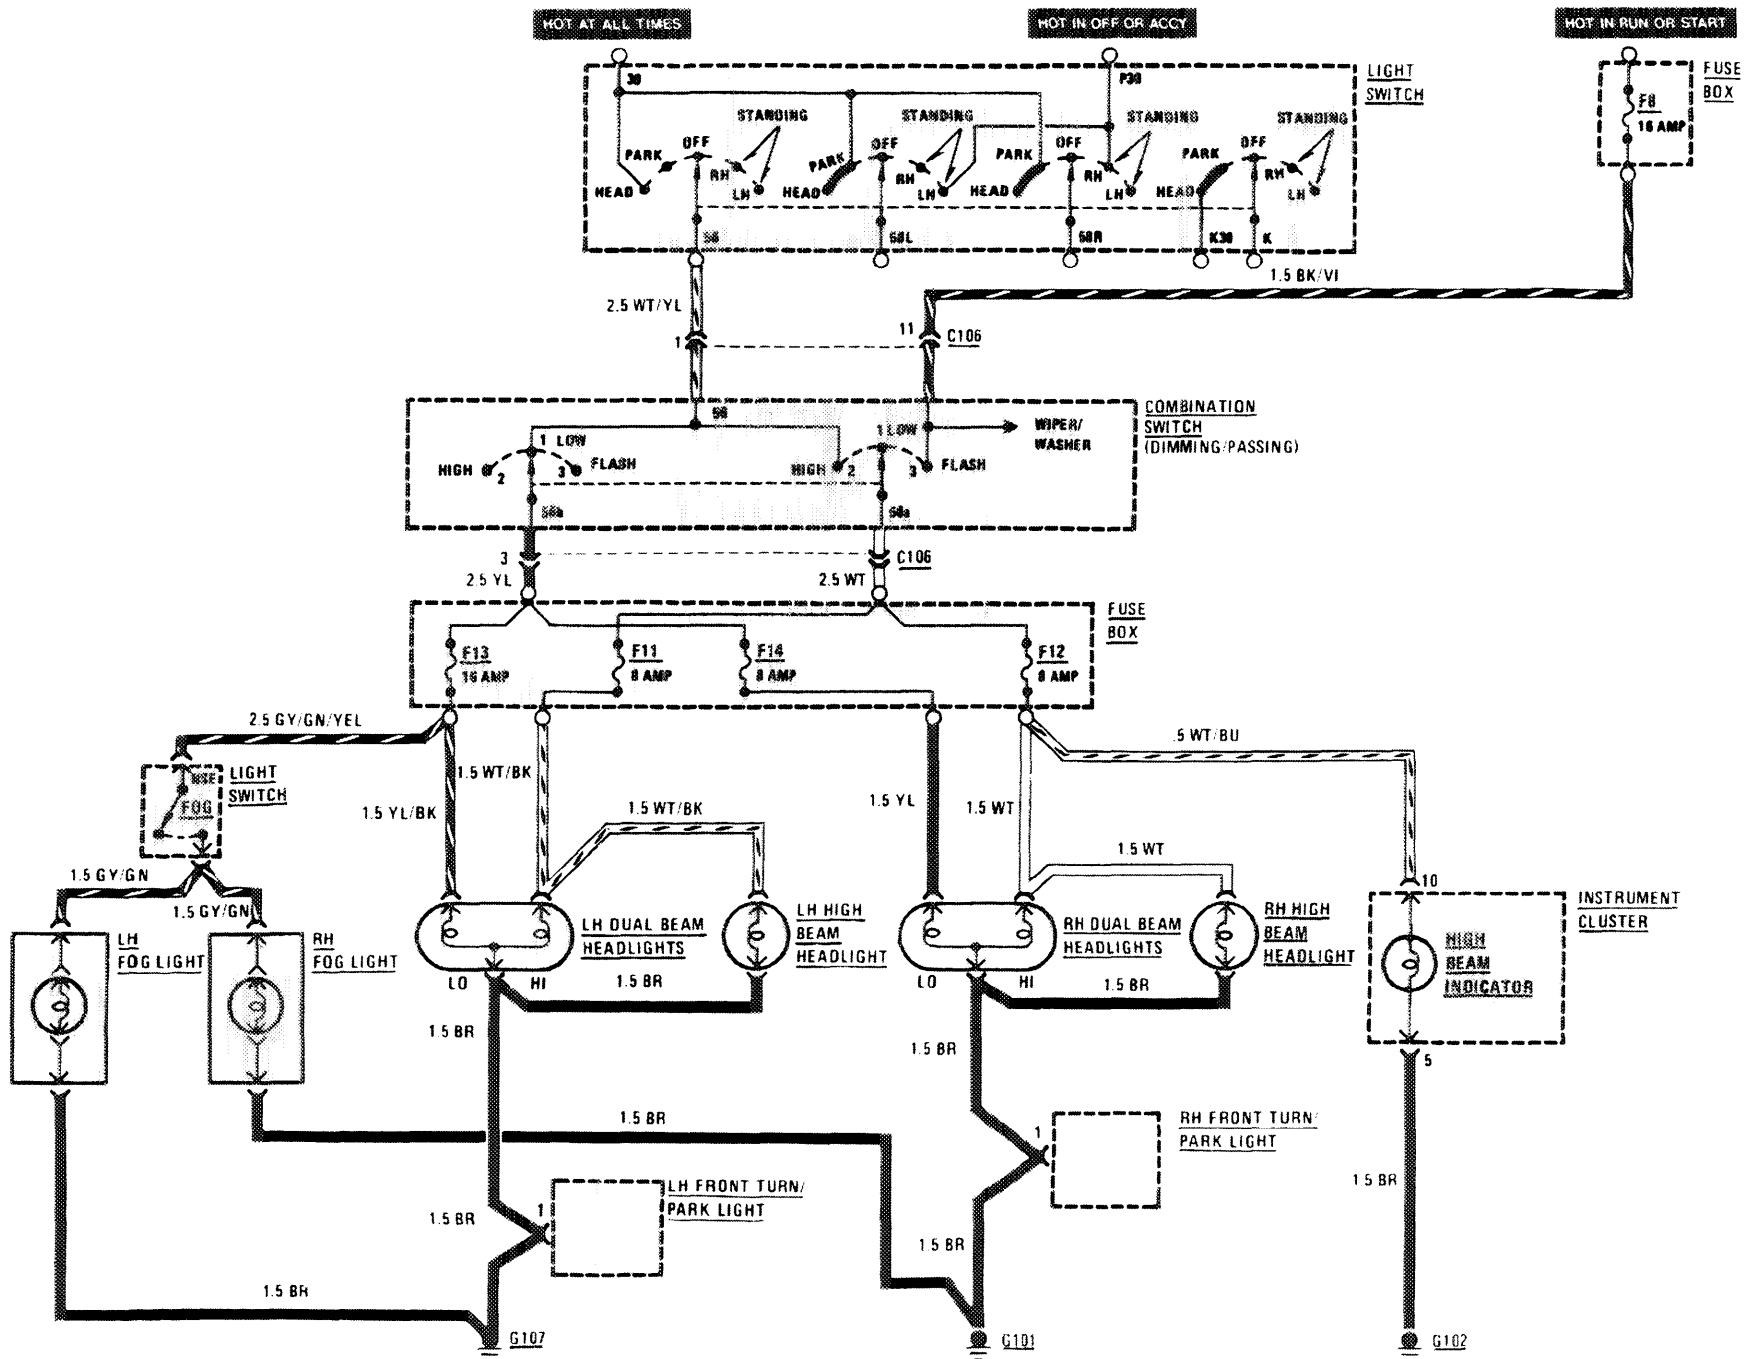


STOPLIGHTS/CRUISE CONTROL

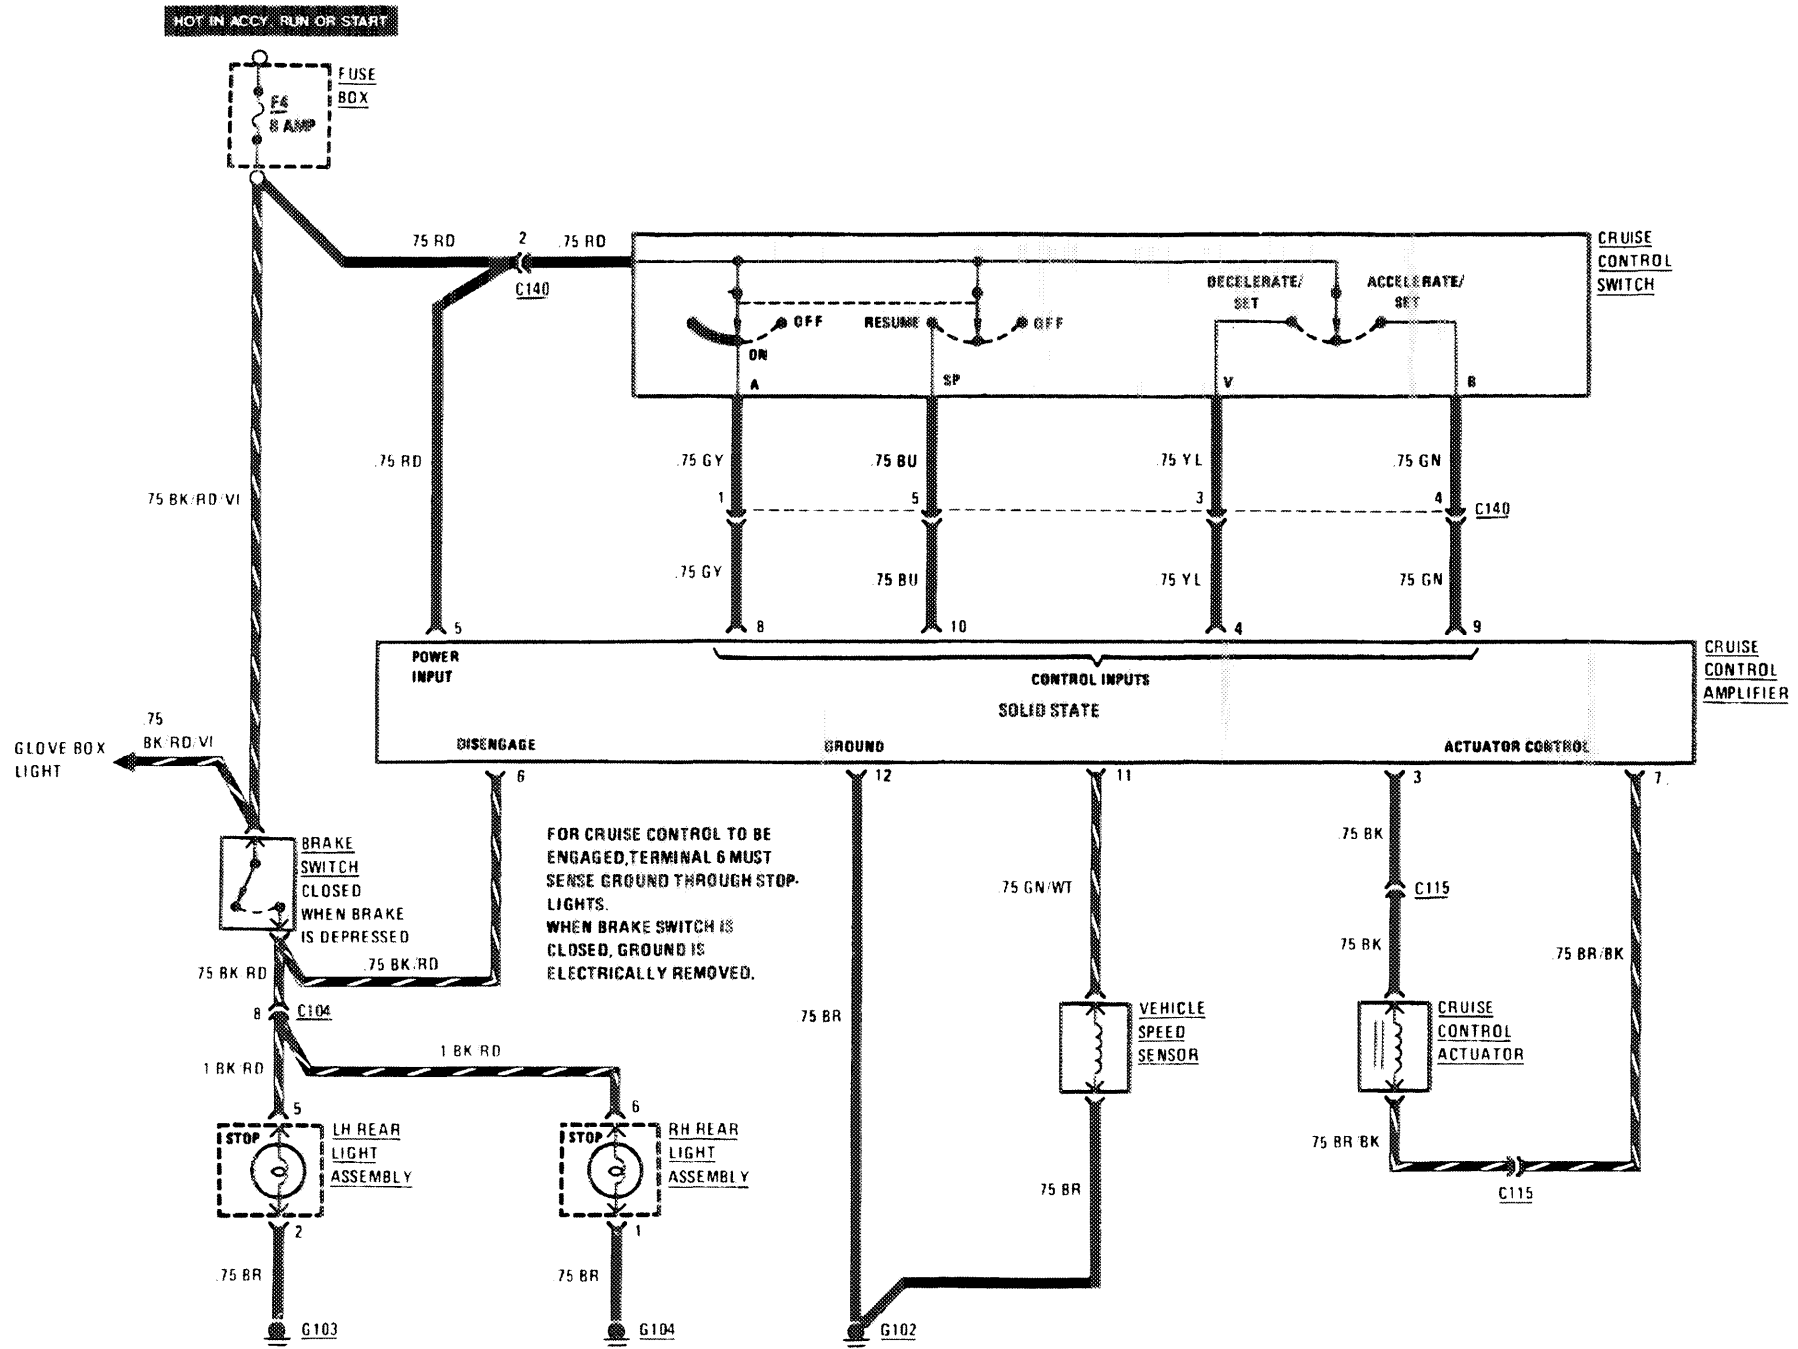


LIGHTS: PARK/TAIL

HOT AT ALL TIMES


HOT AT ALL TIMES

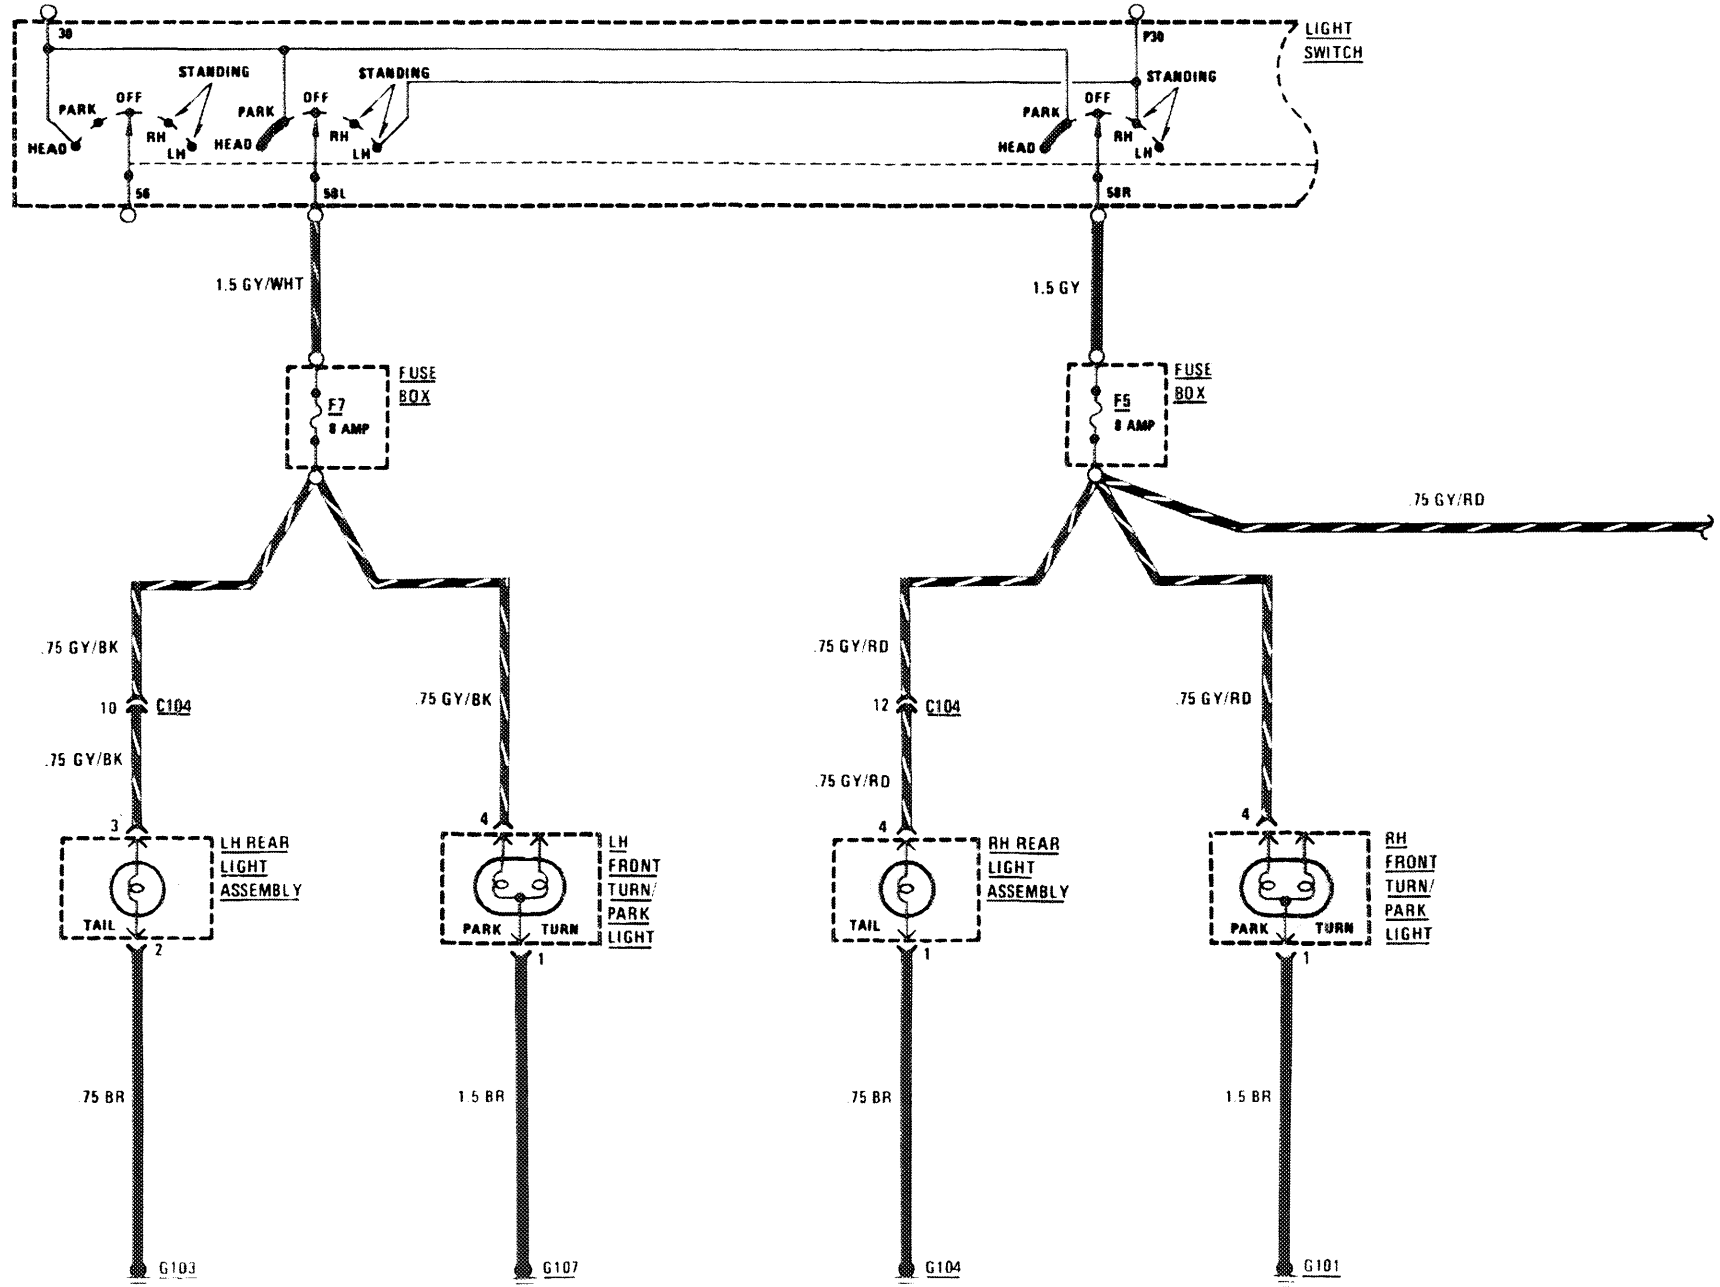


LIGHTS: MARKER/LICENSE/TRUNK

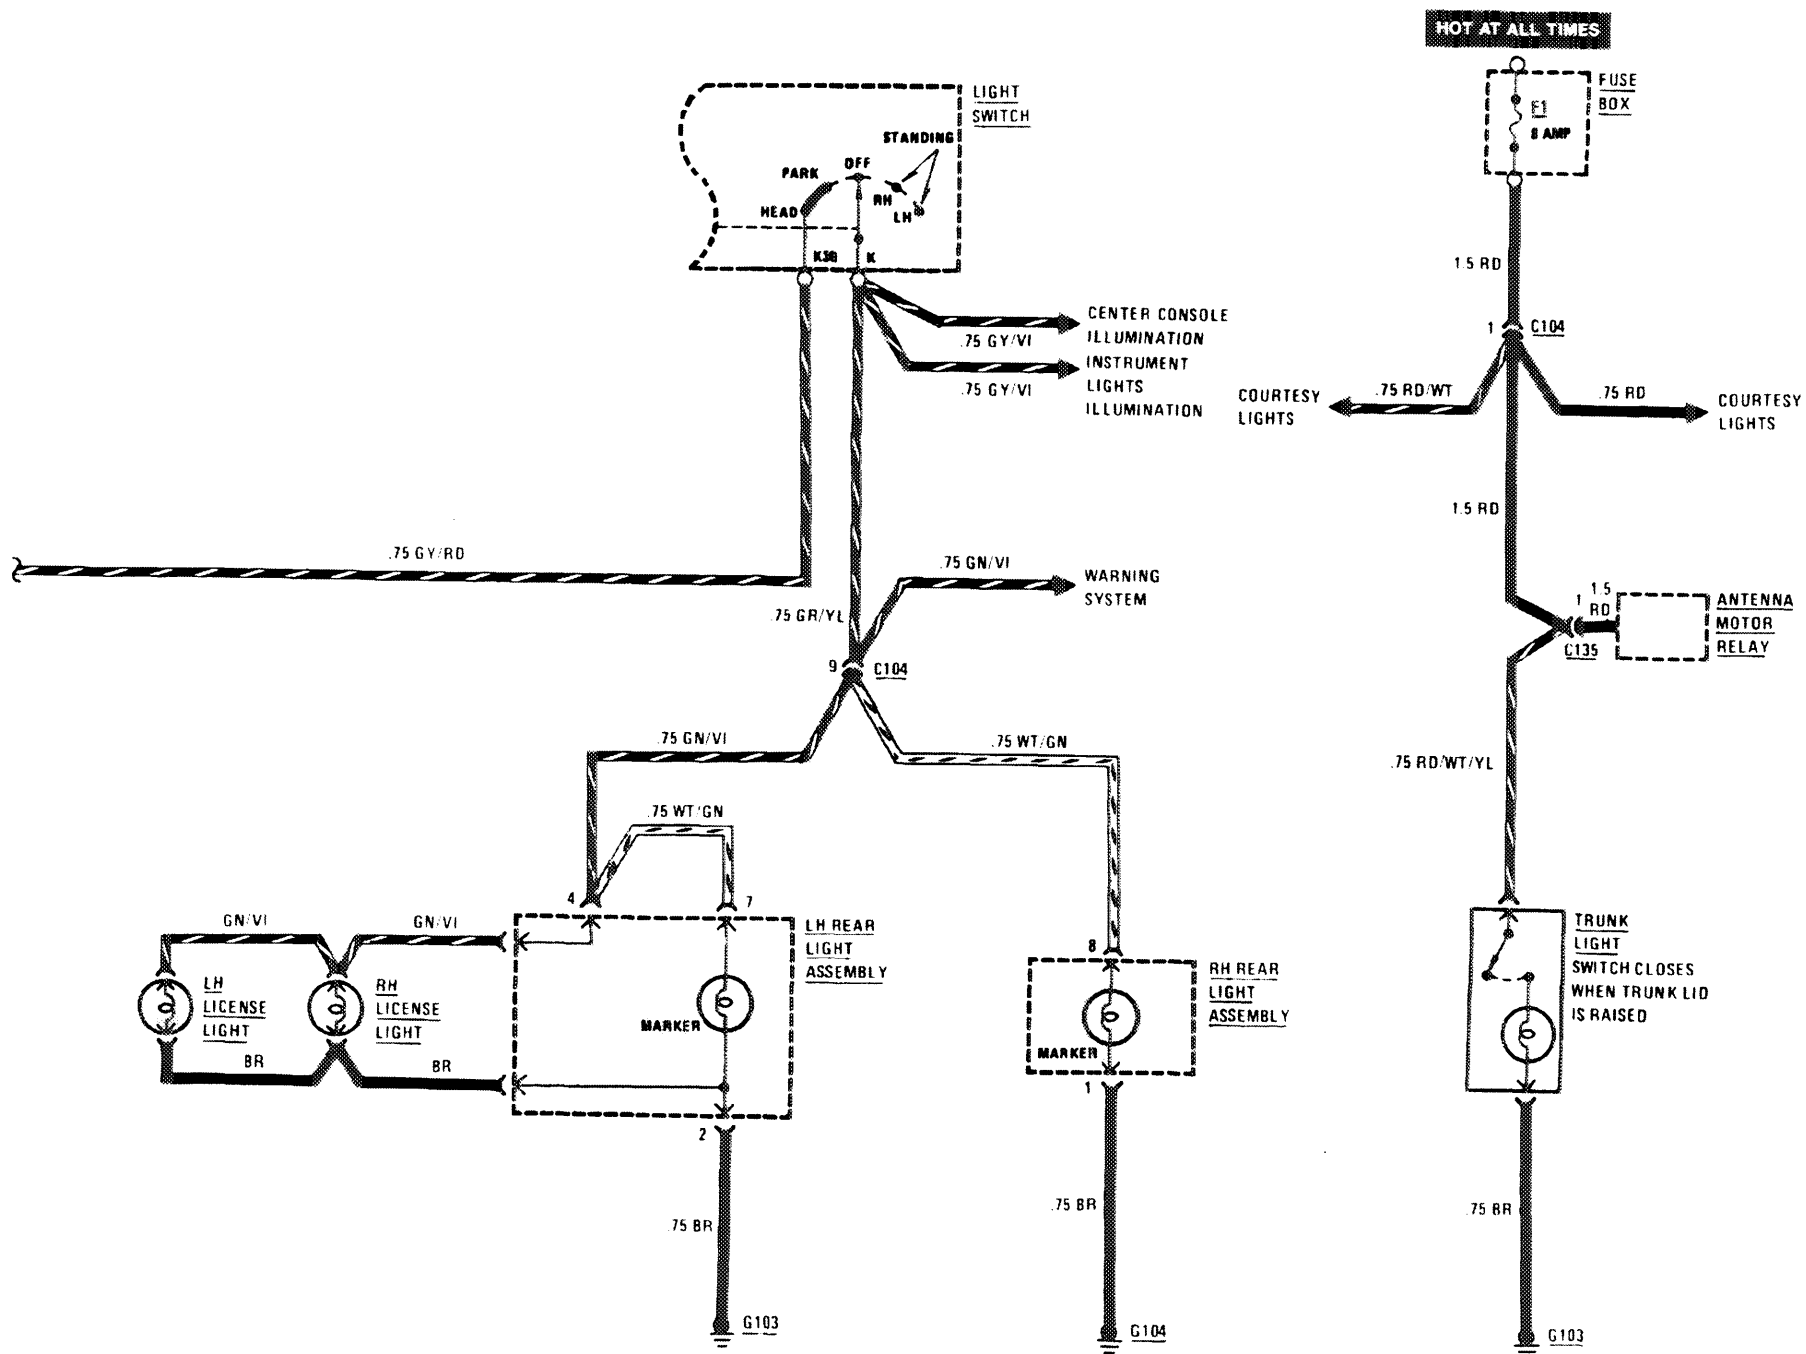


TURN SIGNAL/HAZARD LIGHTS

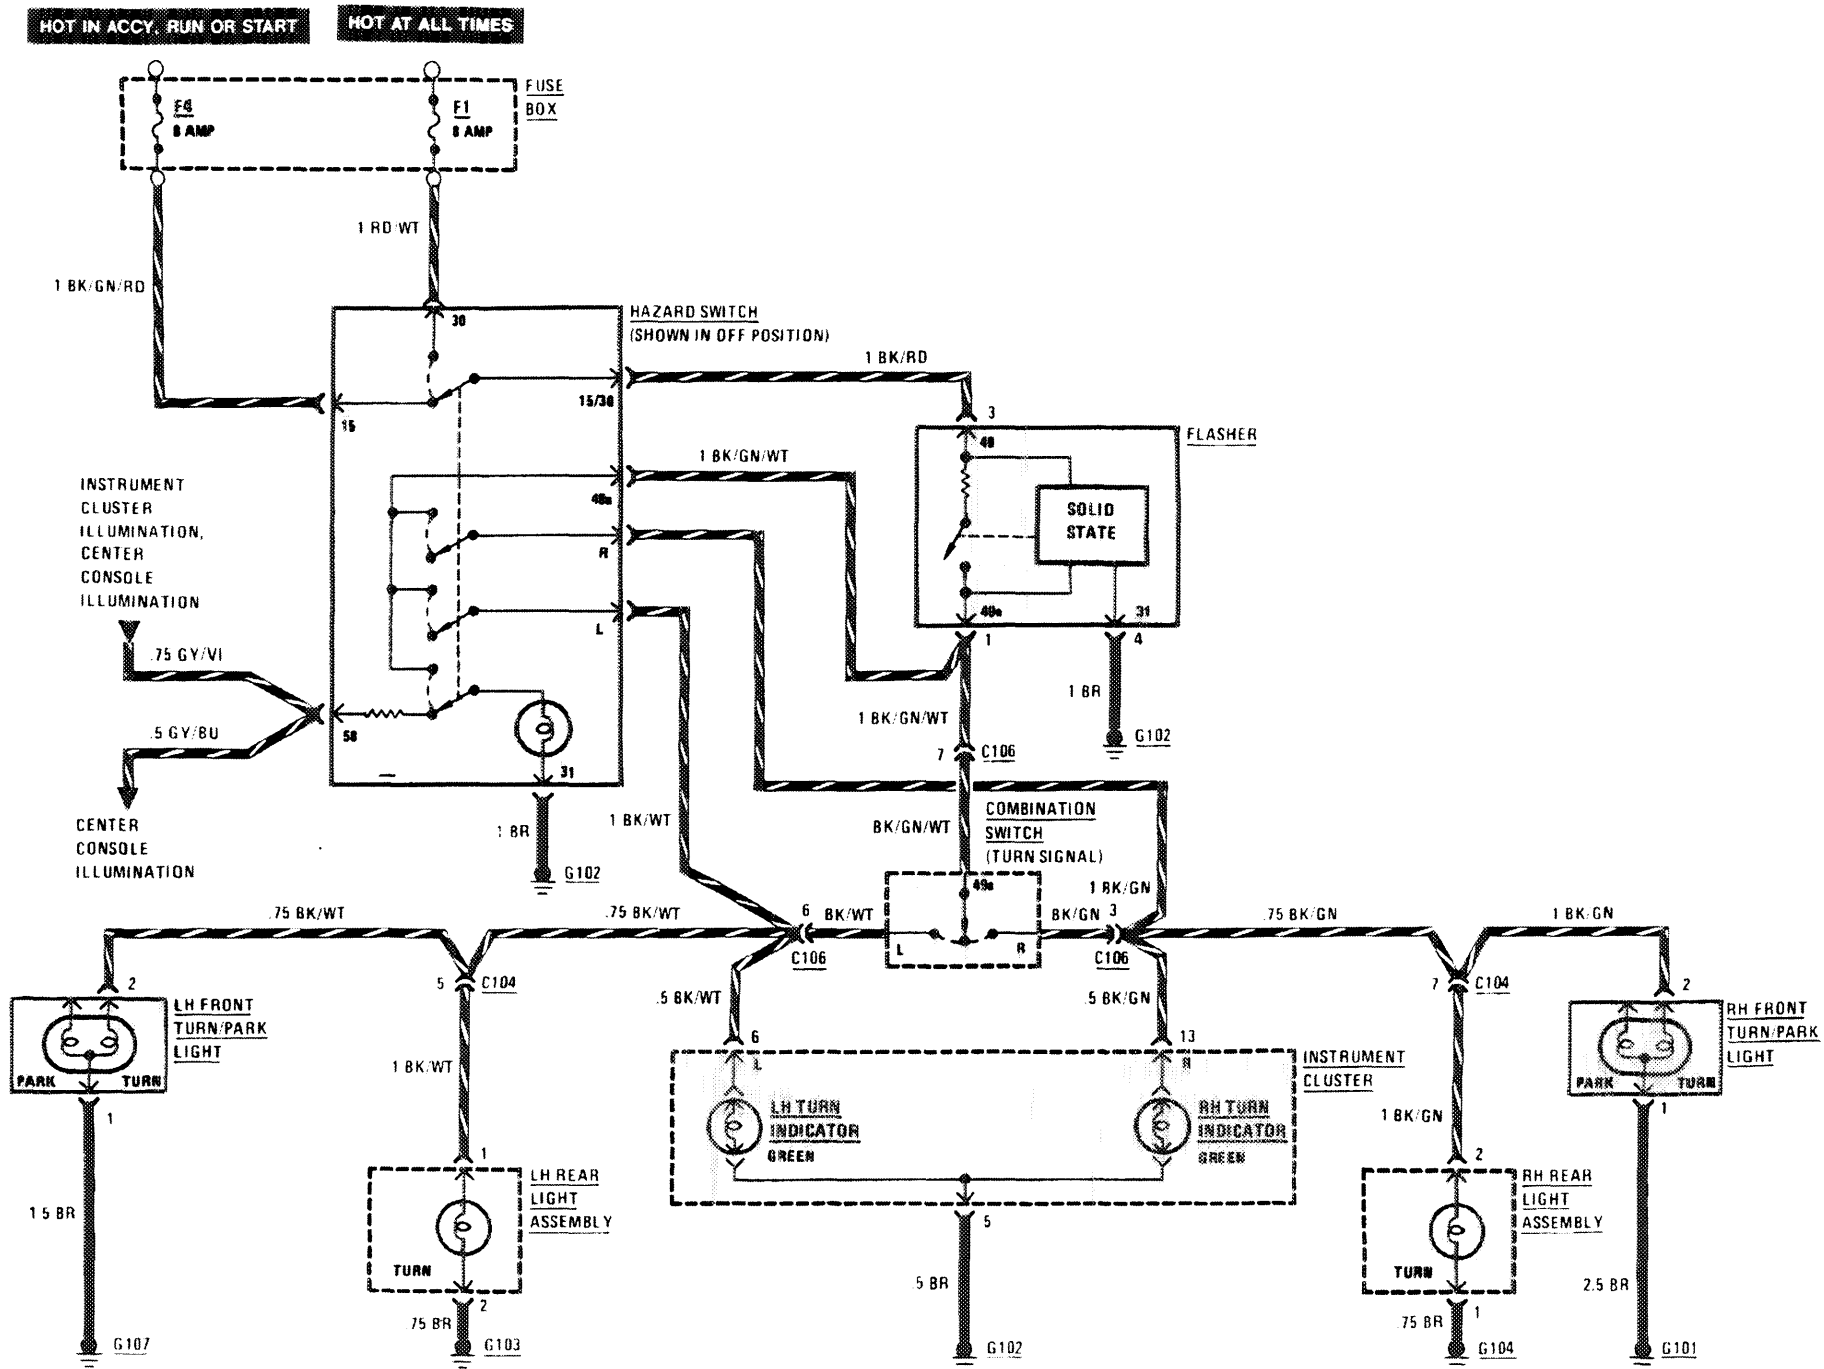


WARNING SYSTEM

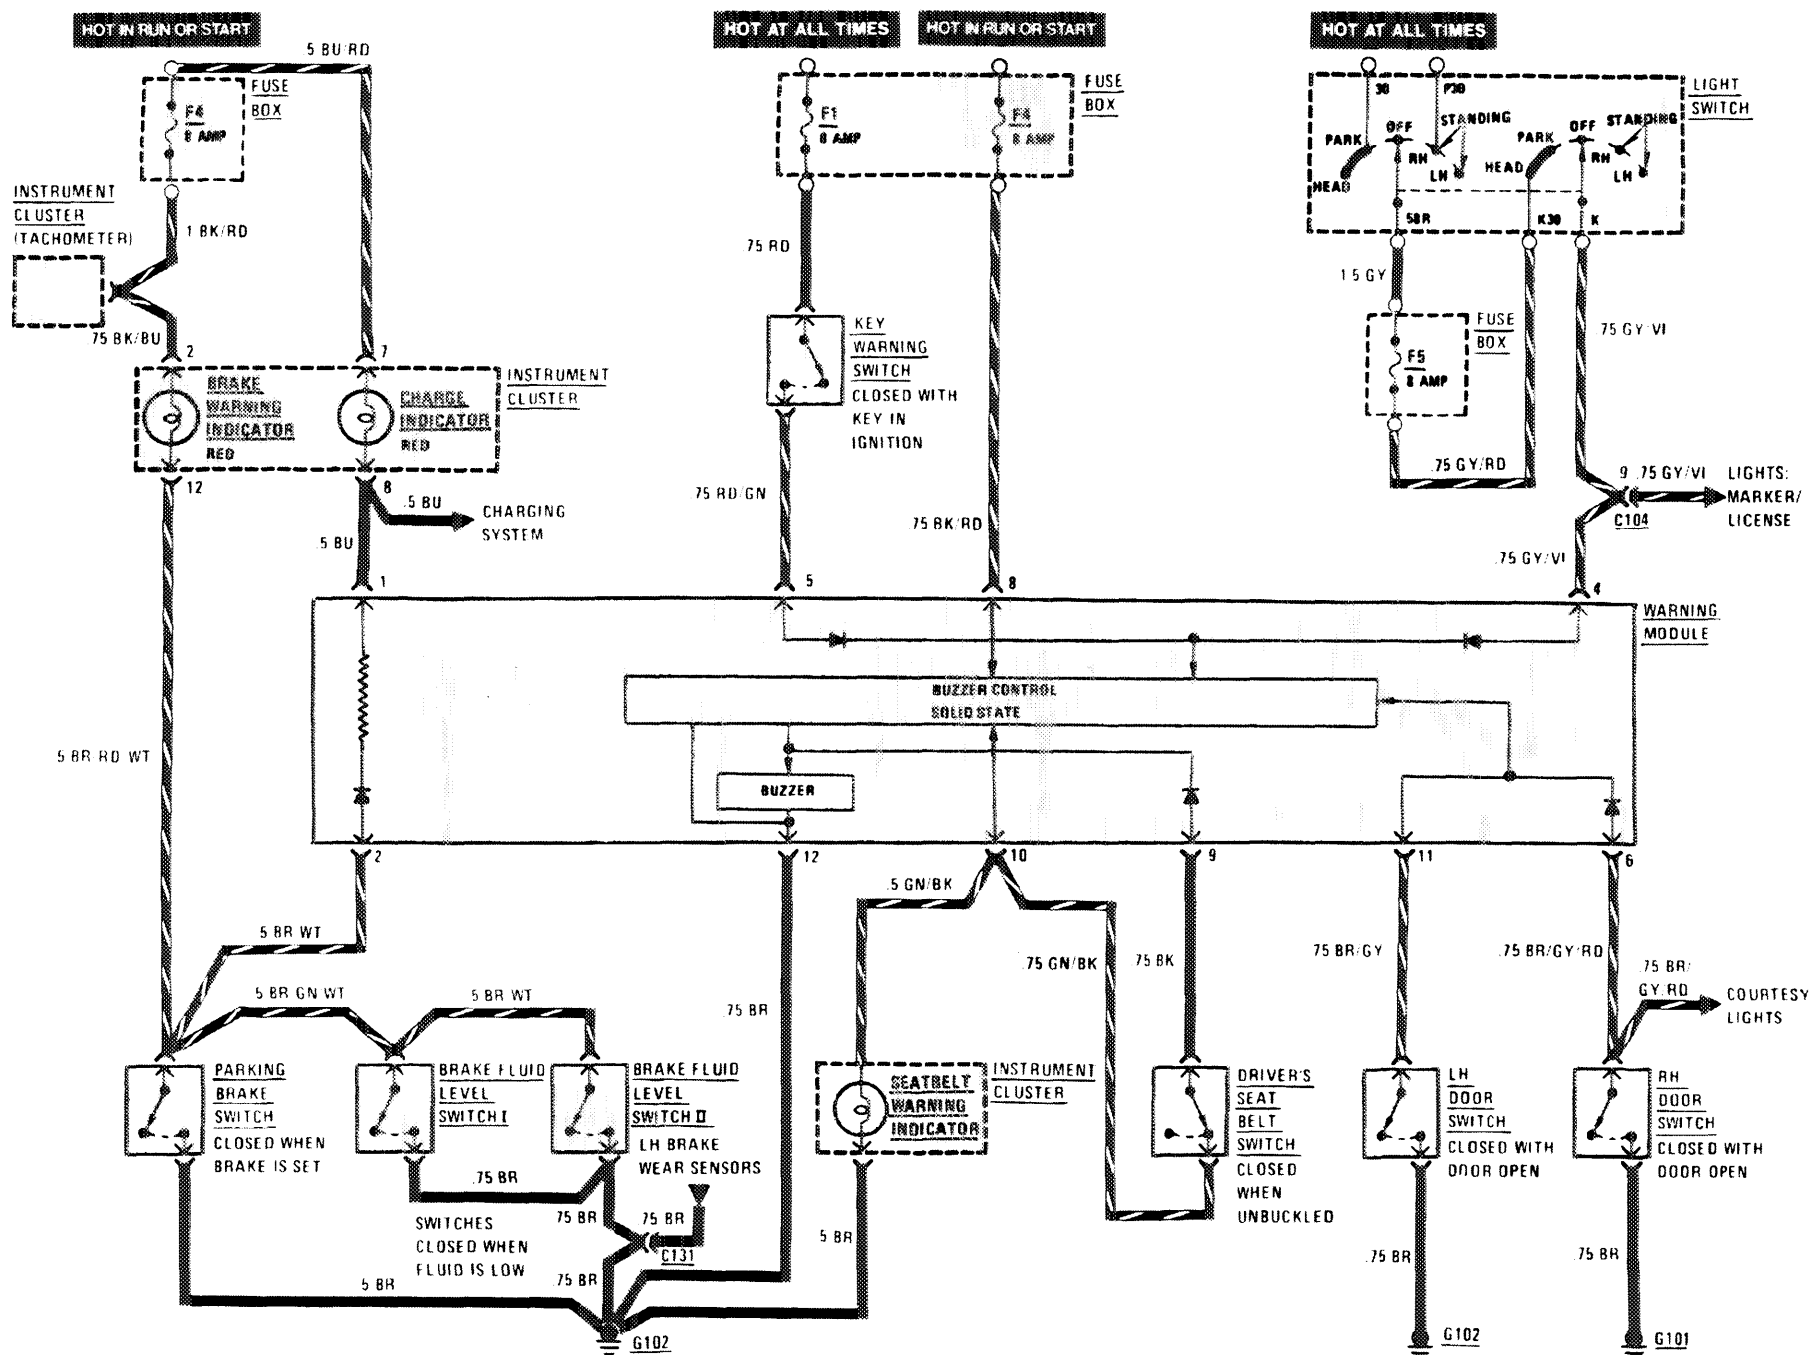


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

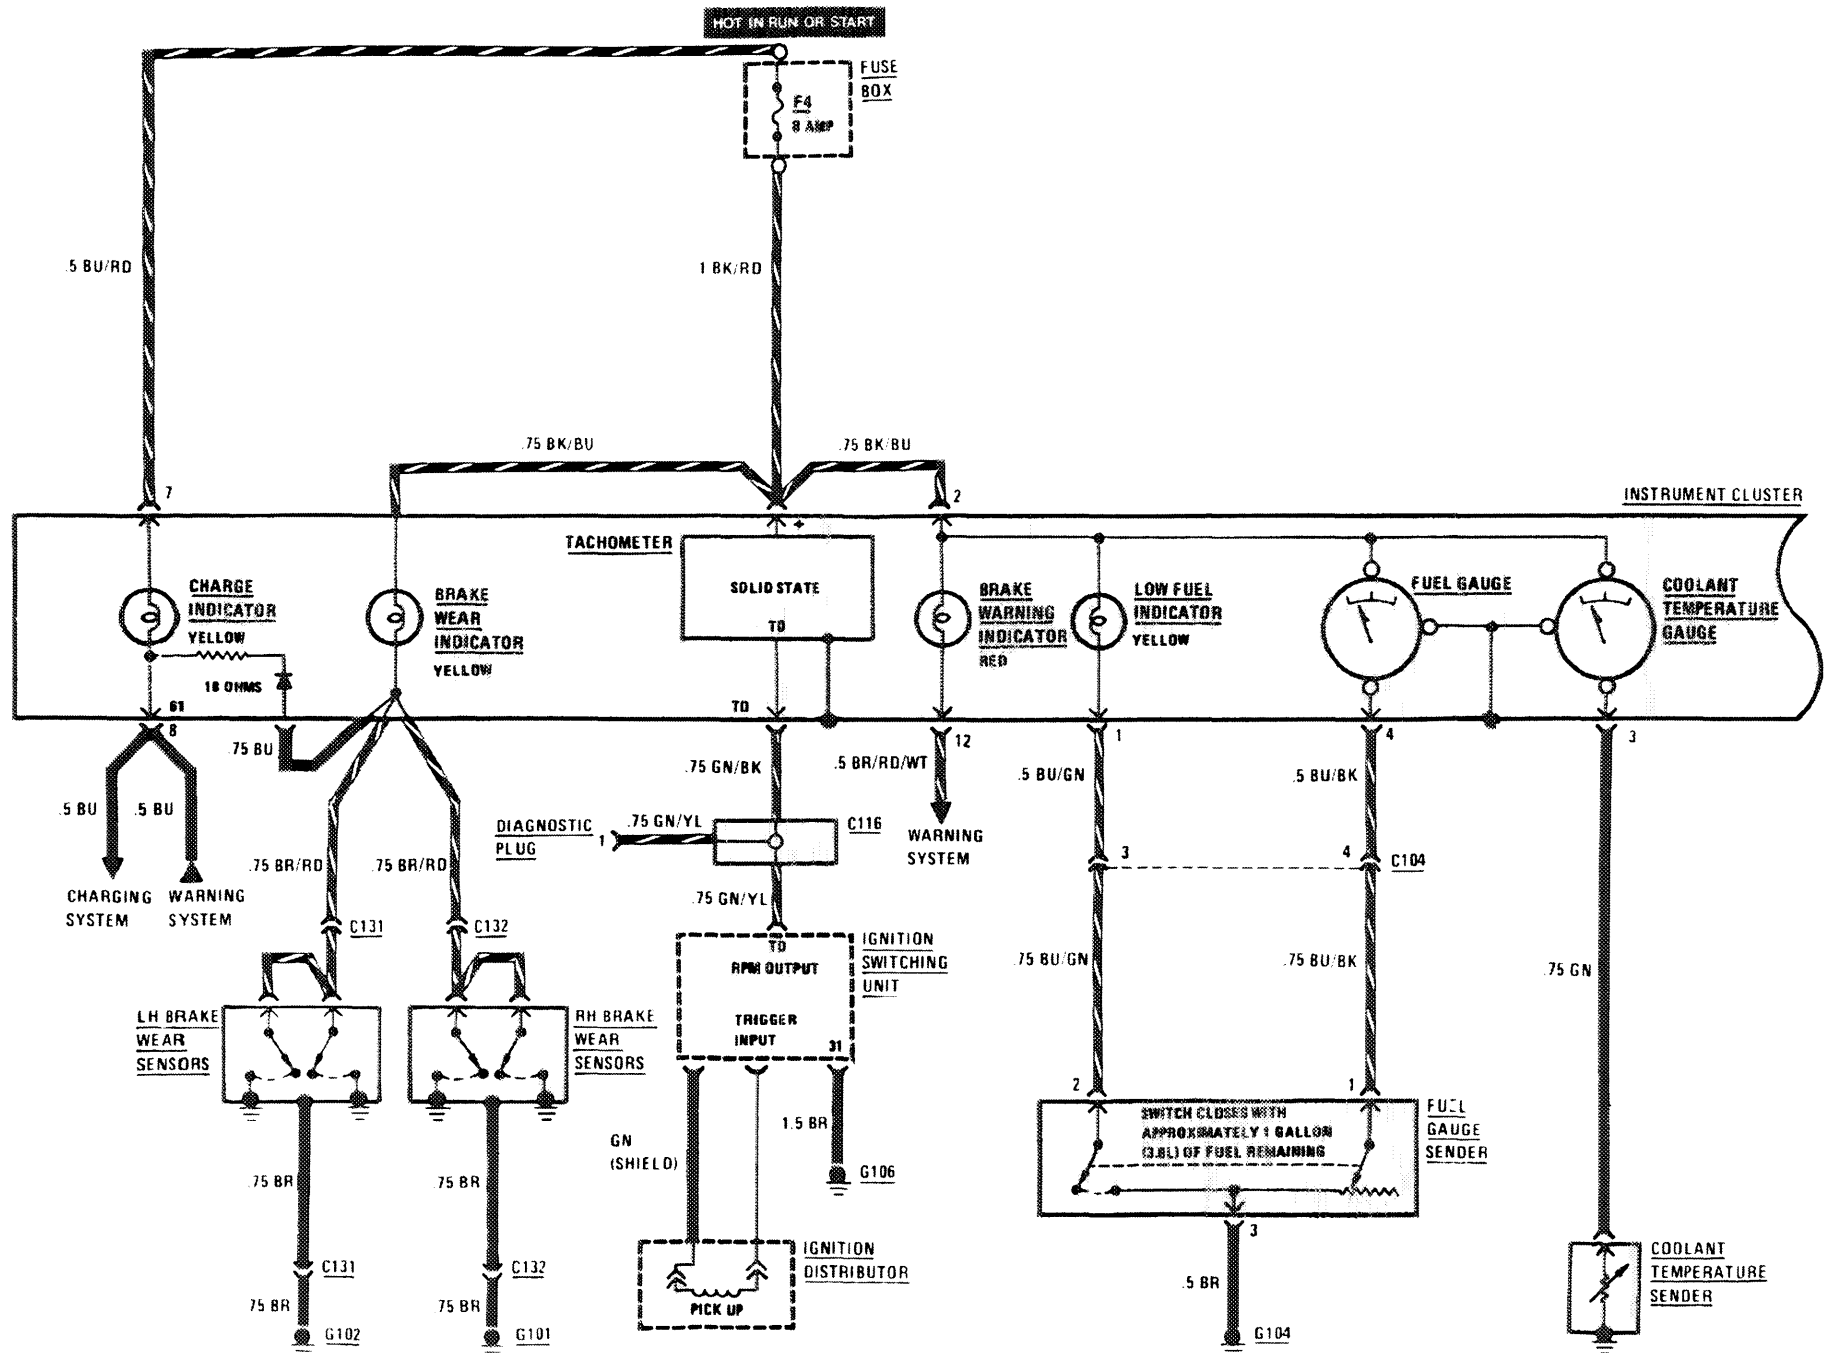


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

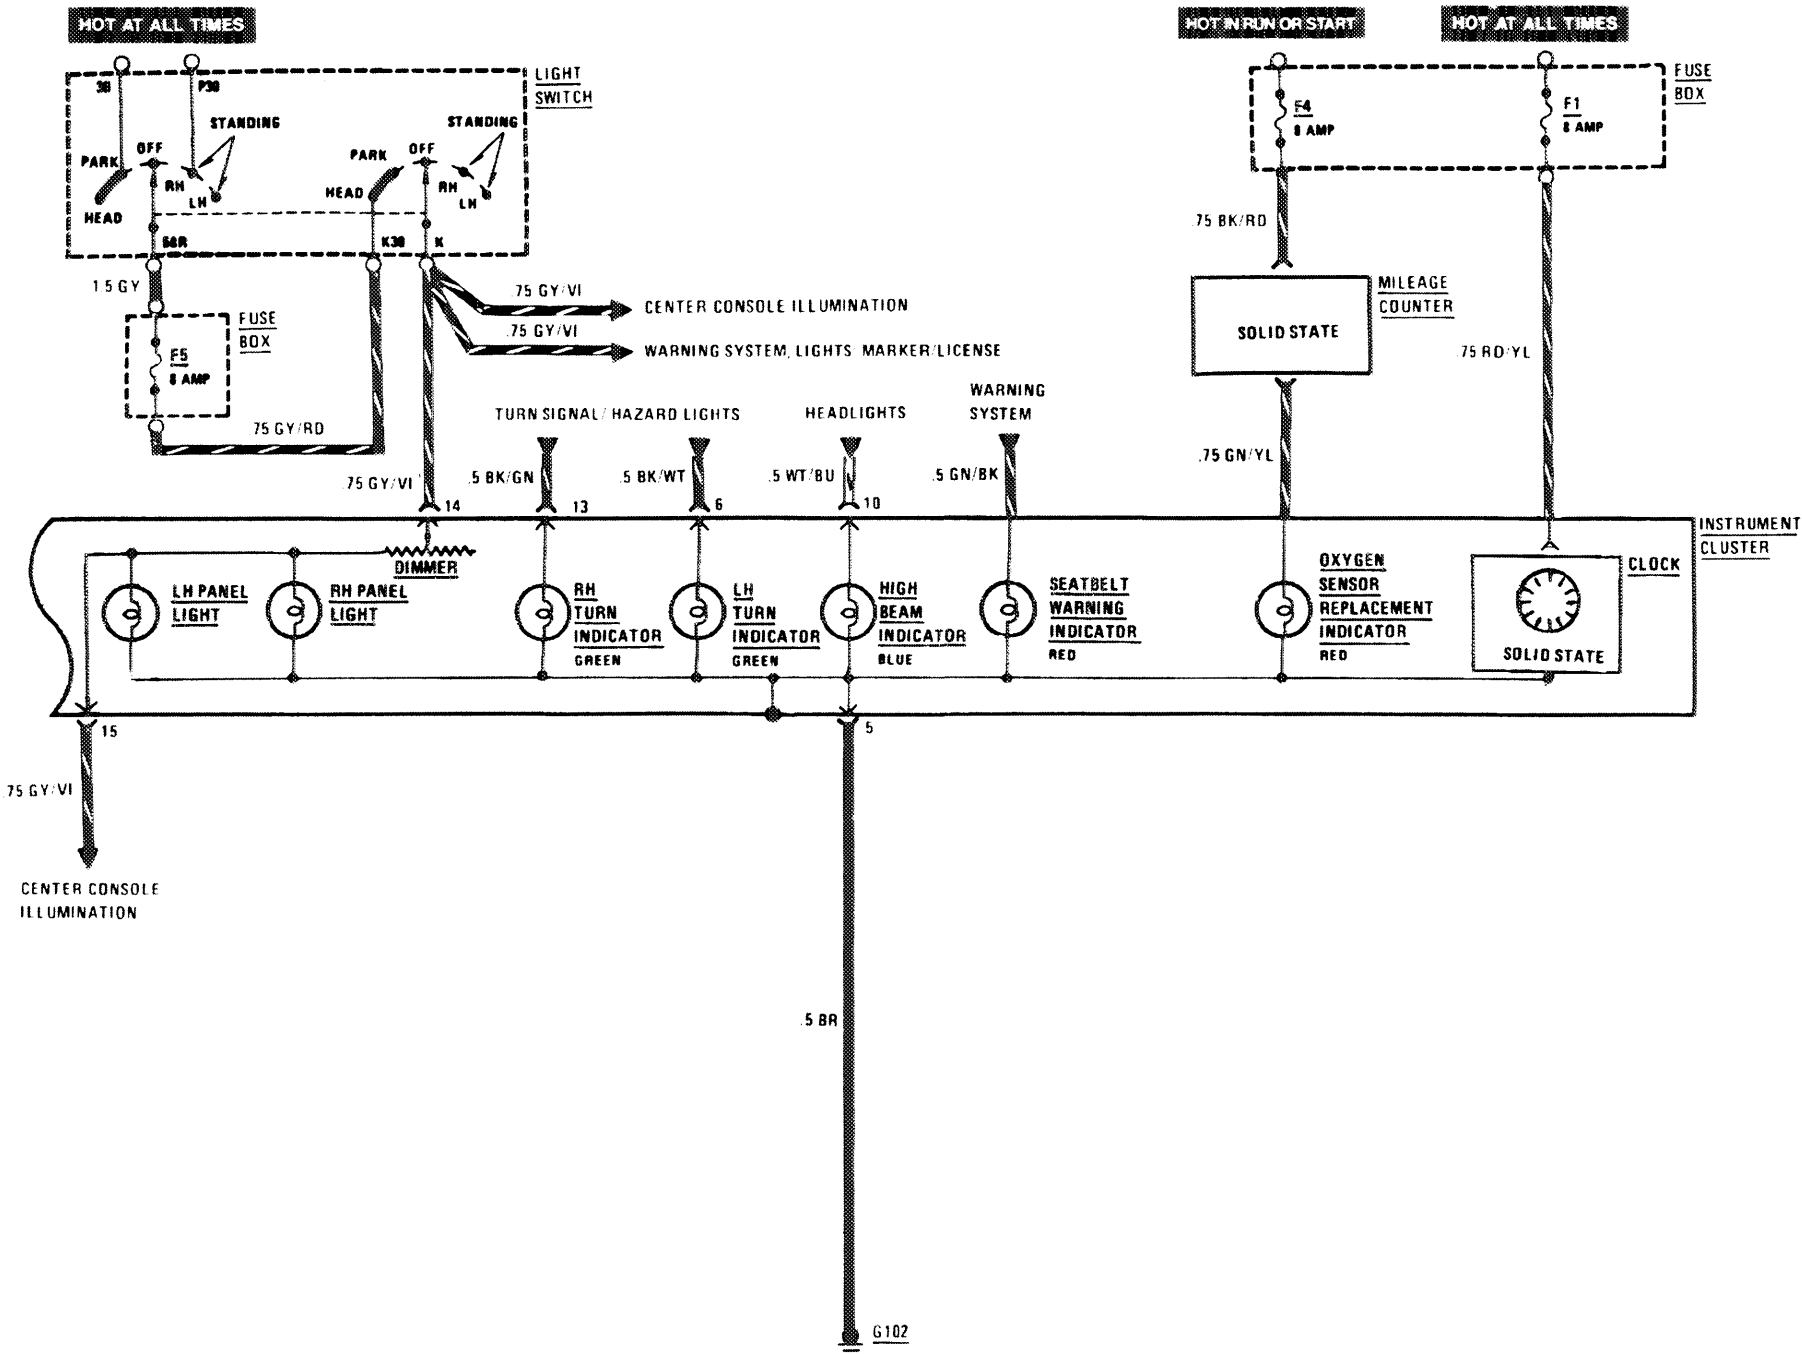


BACKUP LIGHTS/TRANSMISSION KICKDOWN

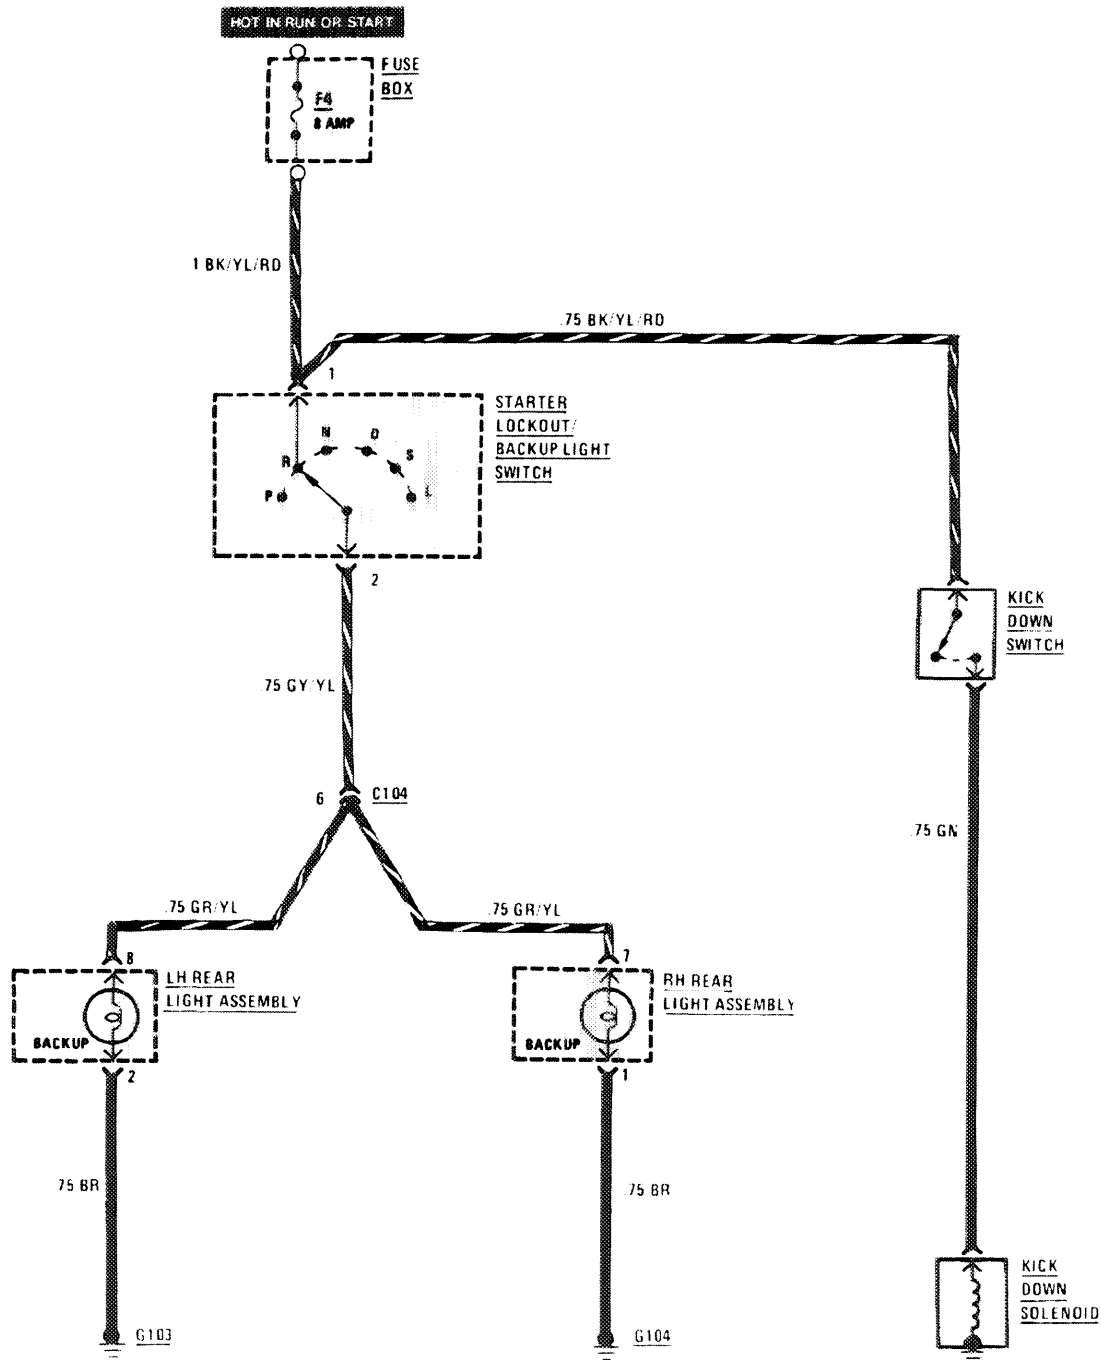



COURTESY LIGHTS

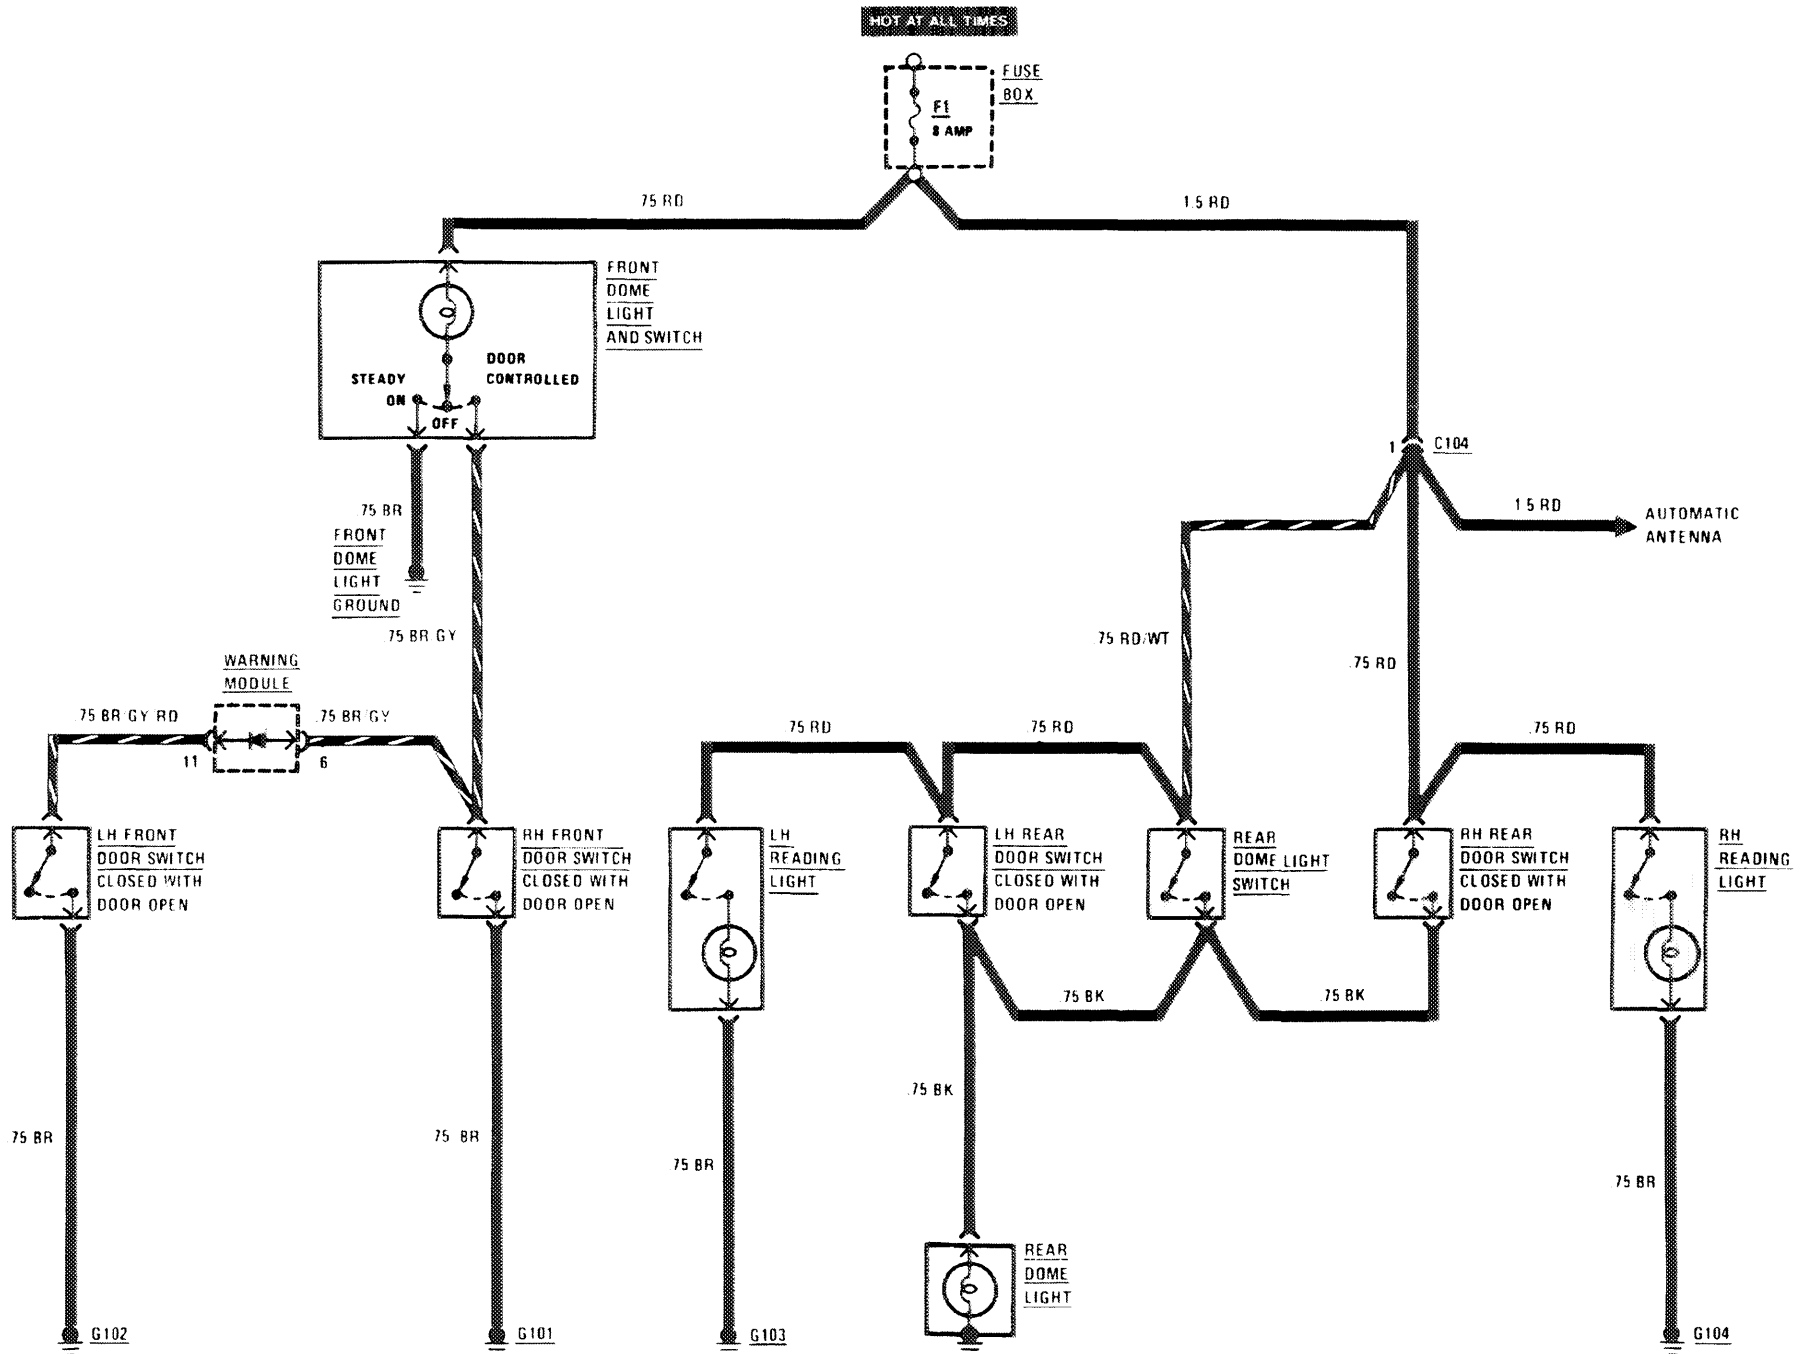


118
280
SE

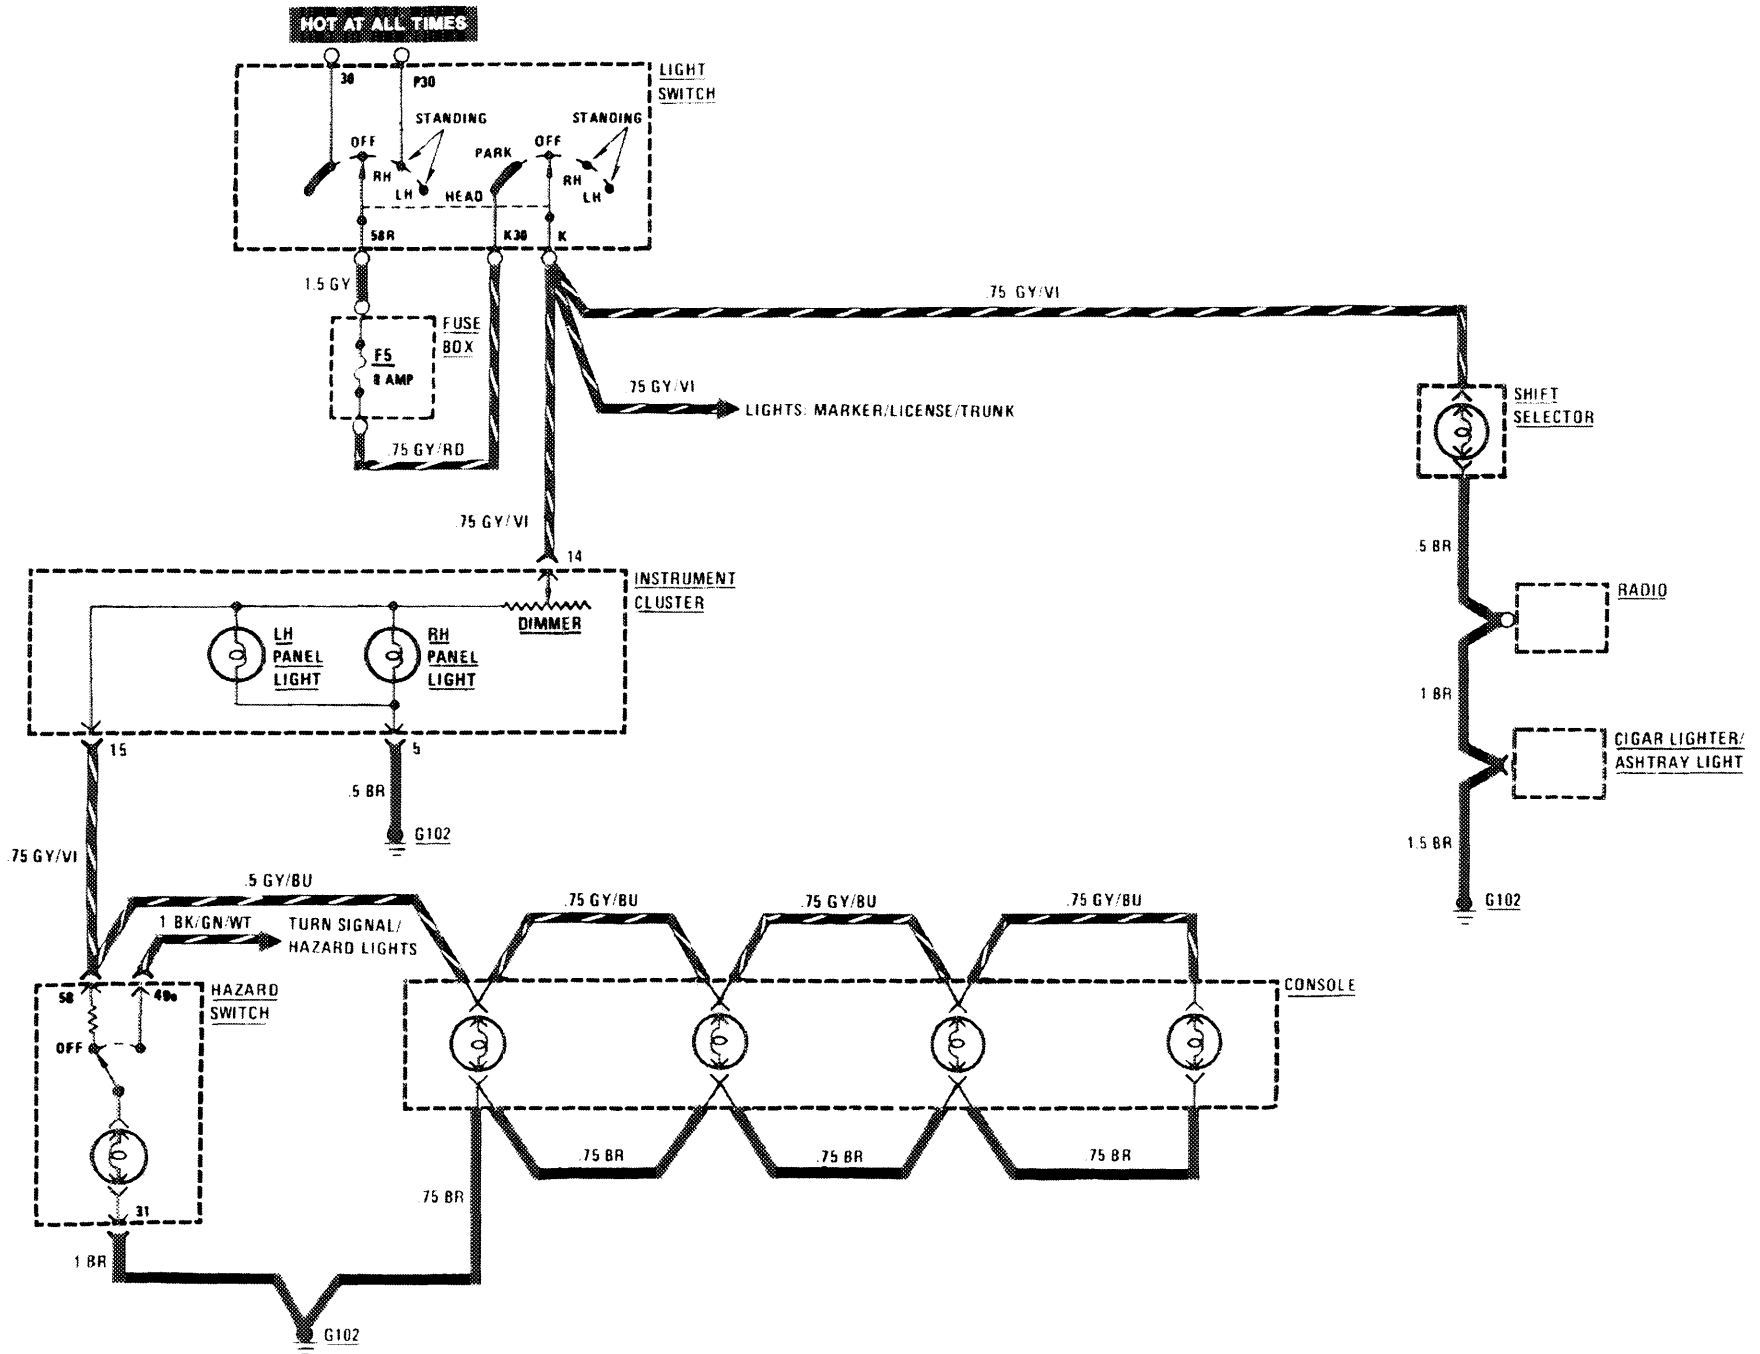


GLOVE BOX LIGHT/HORNS

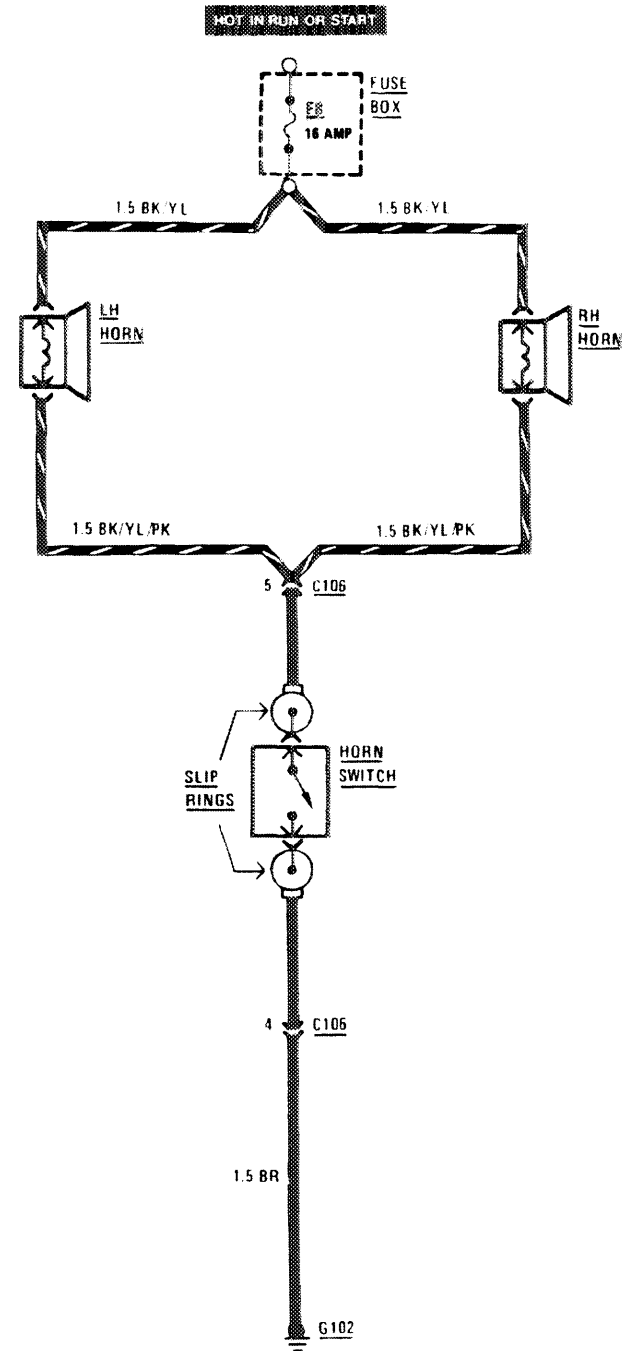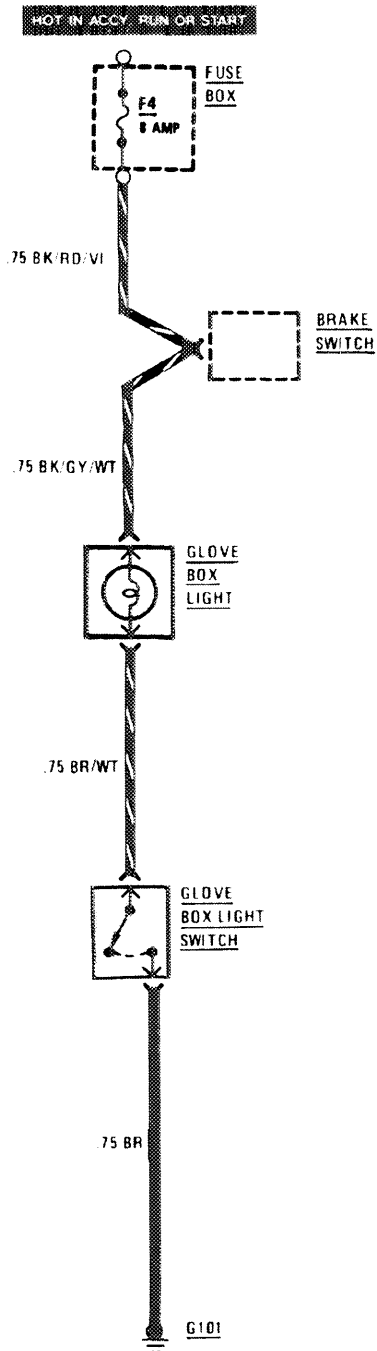


20
80
SE

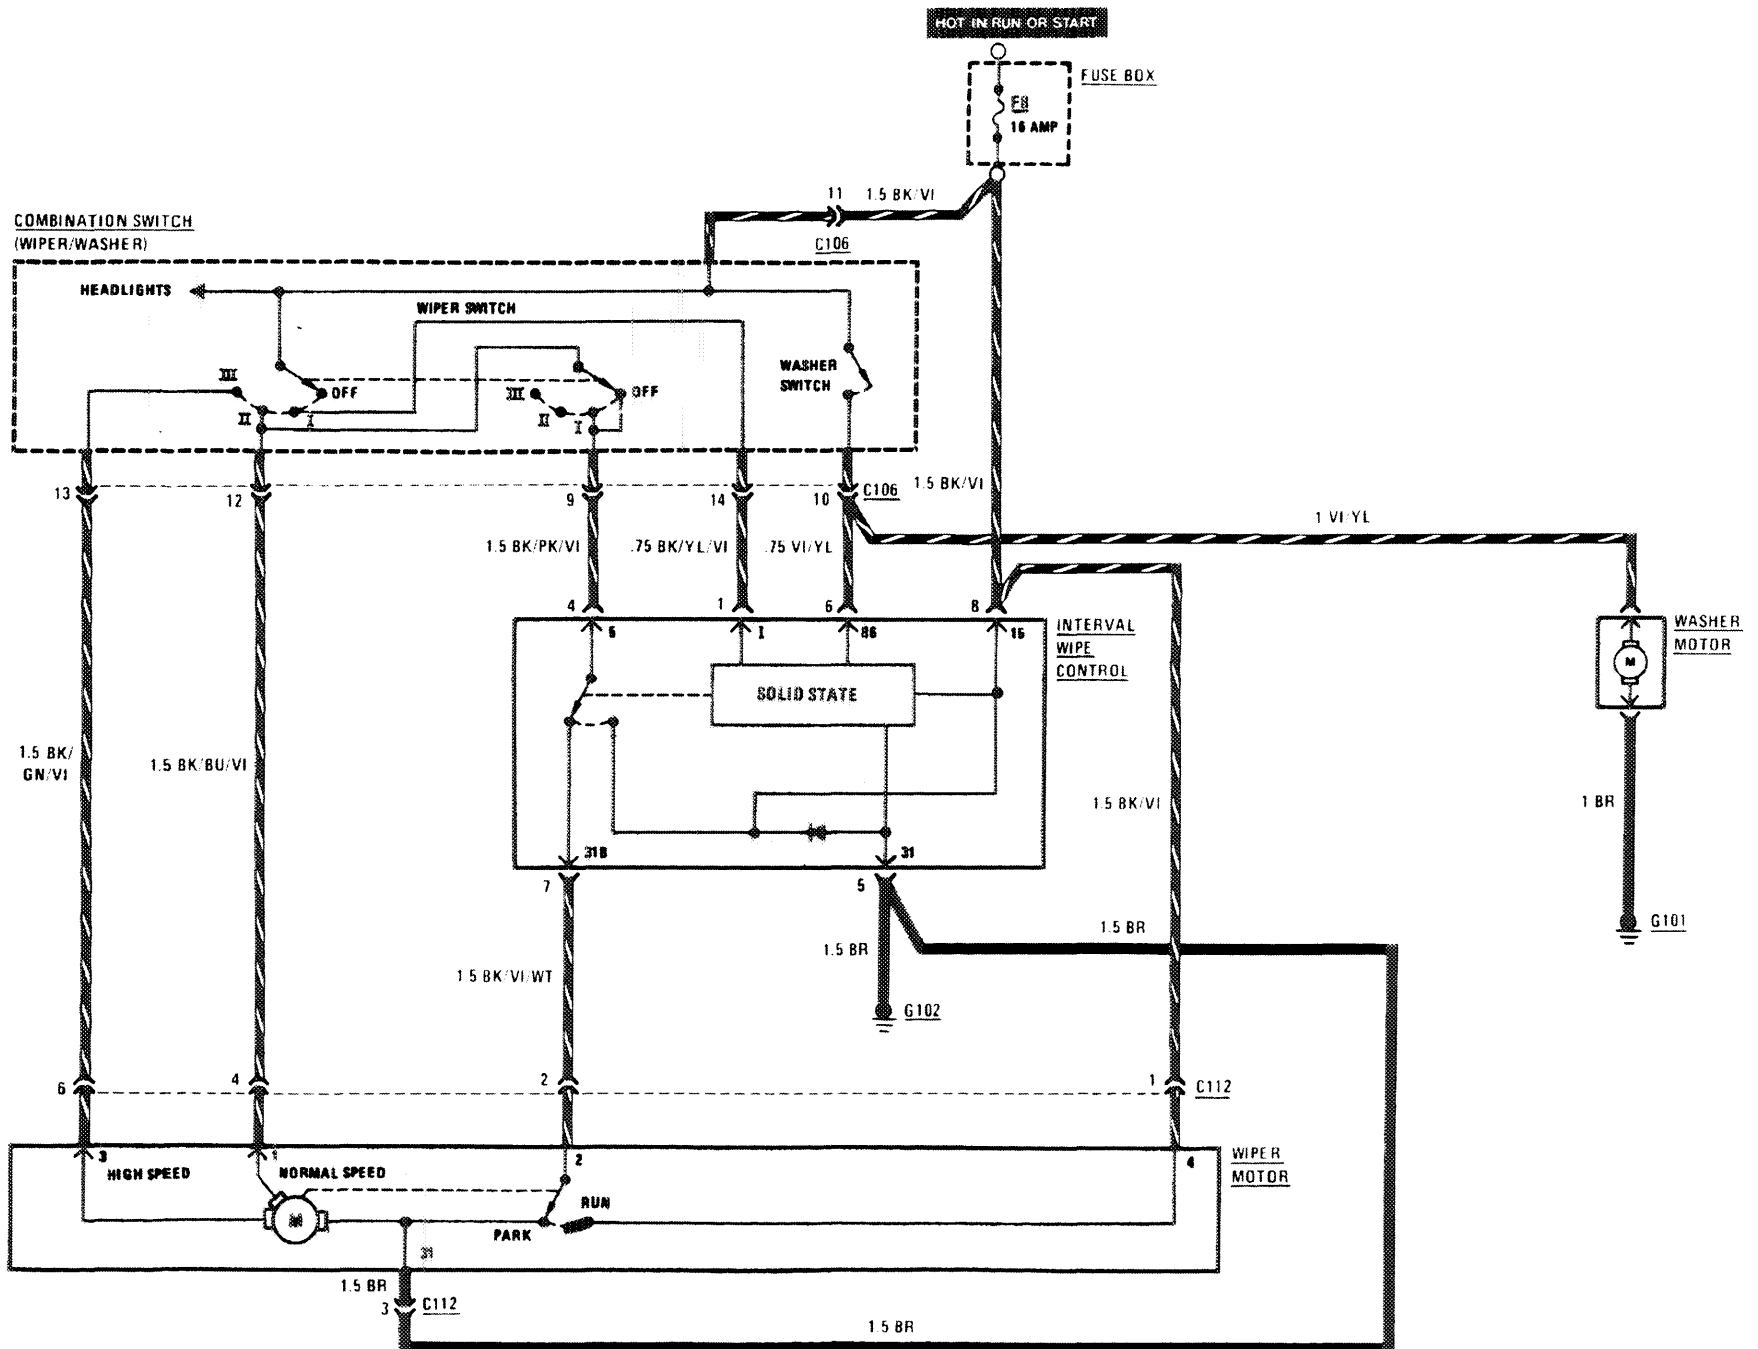


121
280
SE

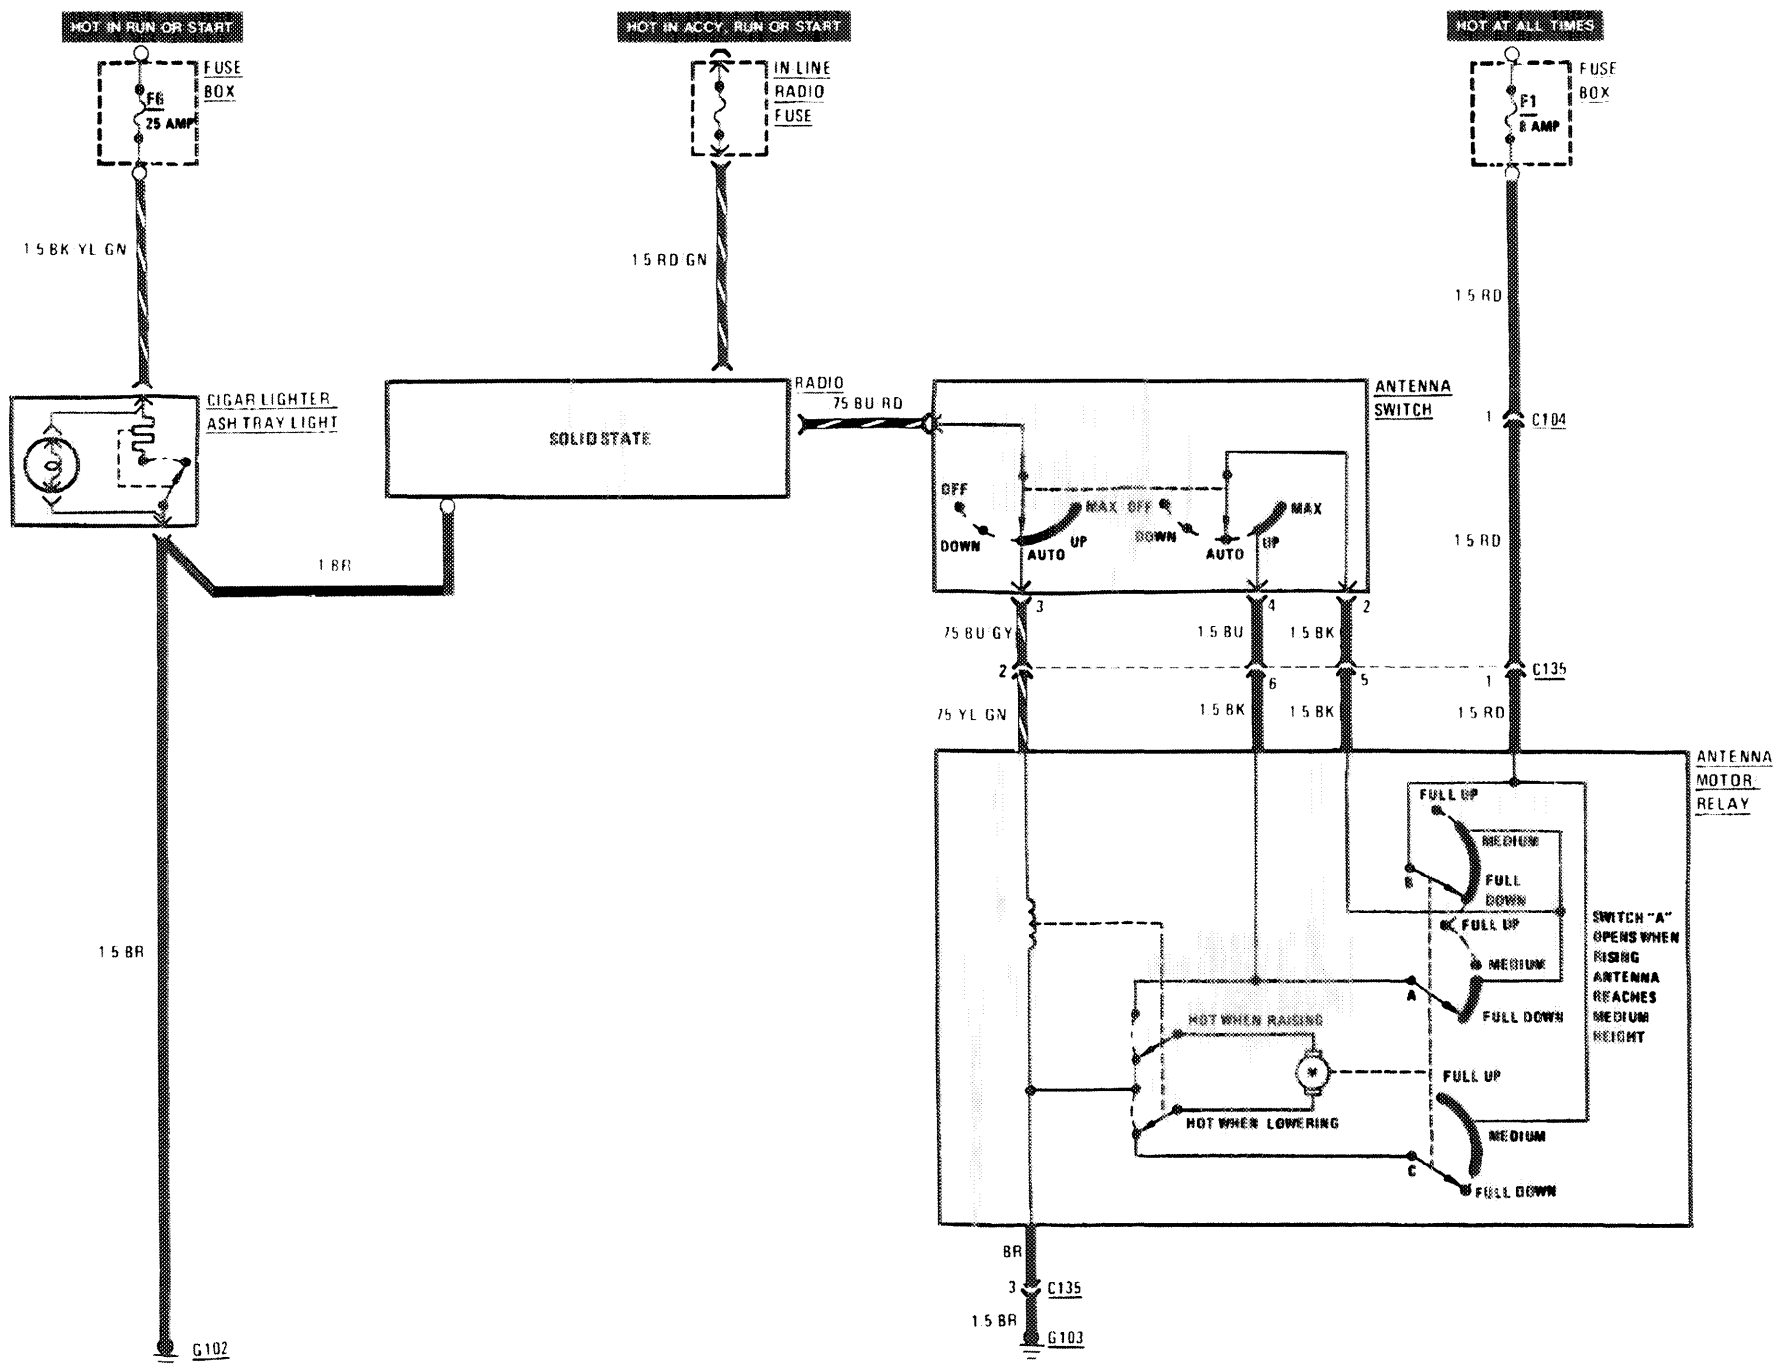


AUXILIARY FAN

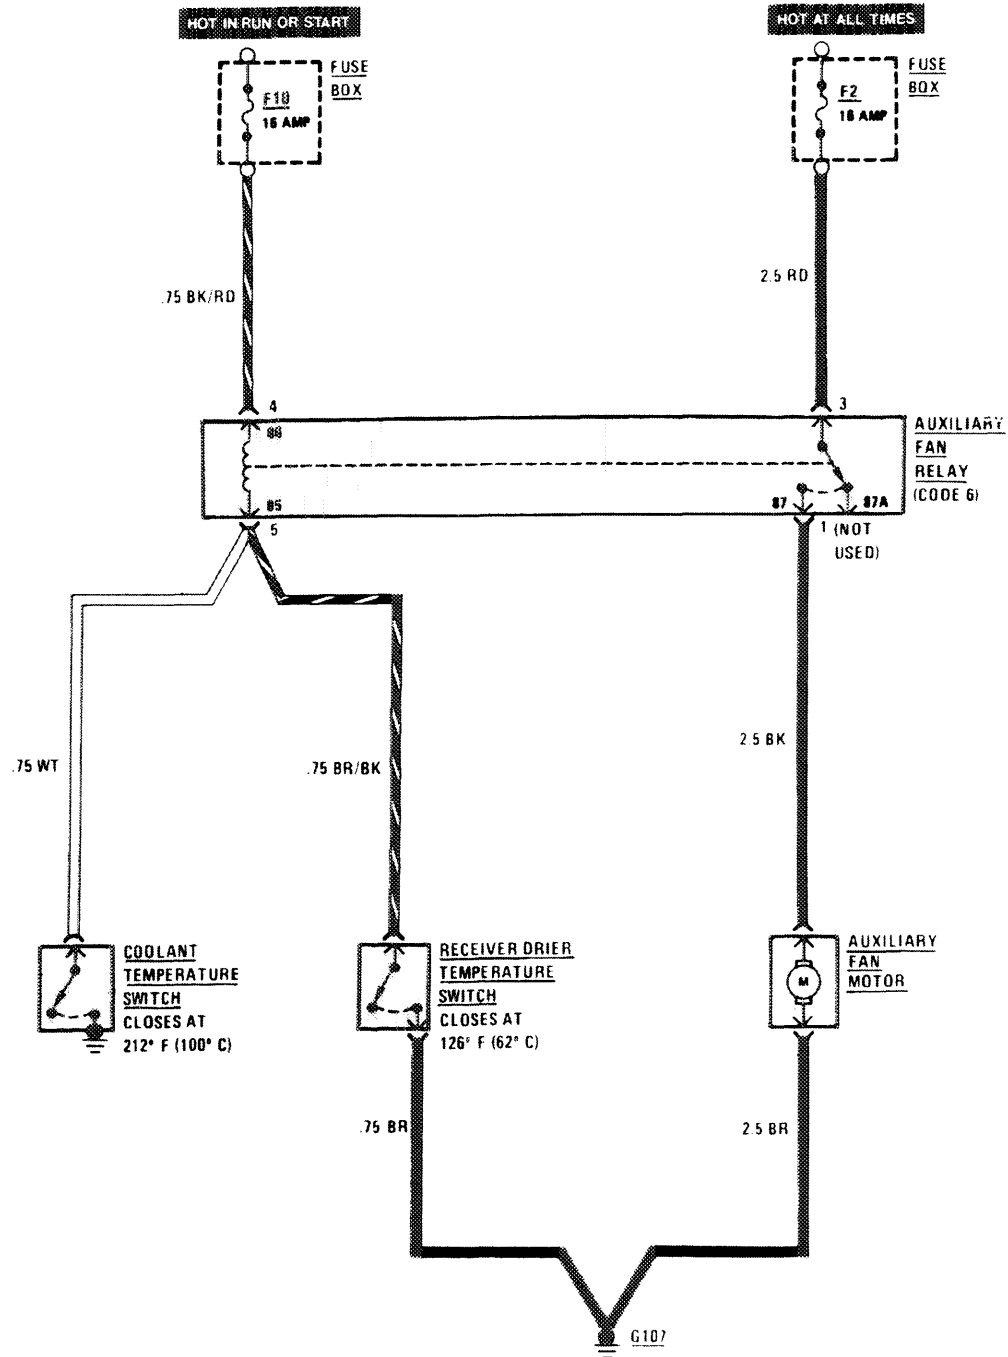


AUTOMATIC CLIMATE CONTROL

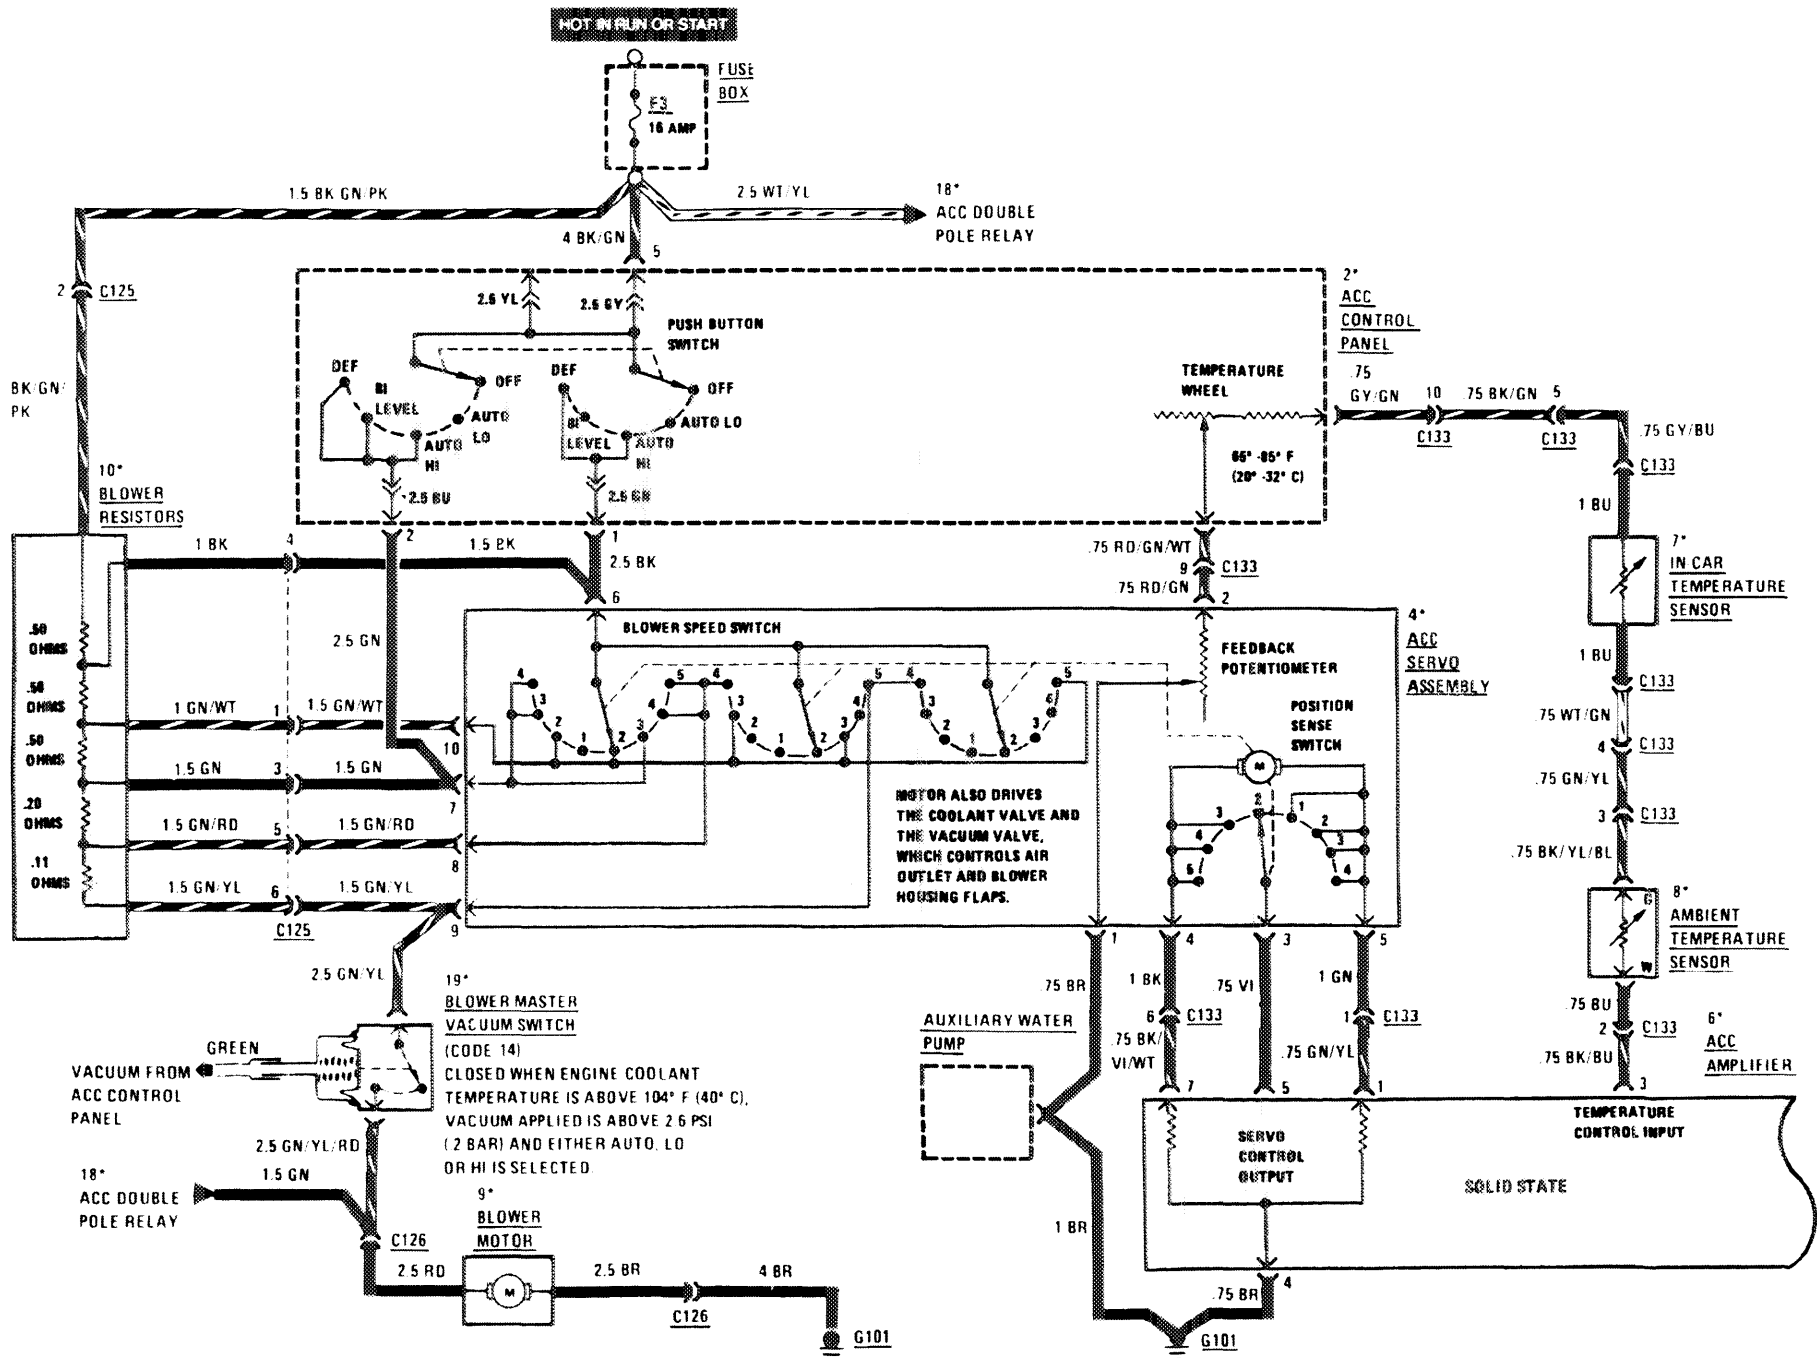

124
280
SE


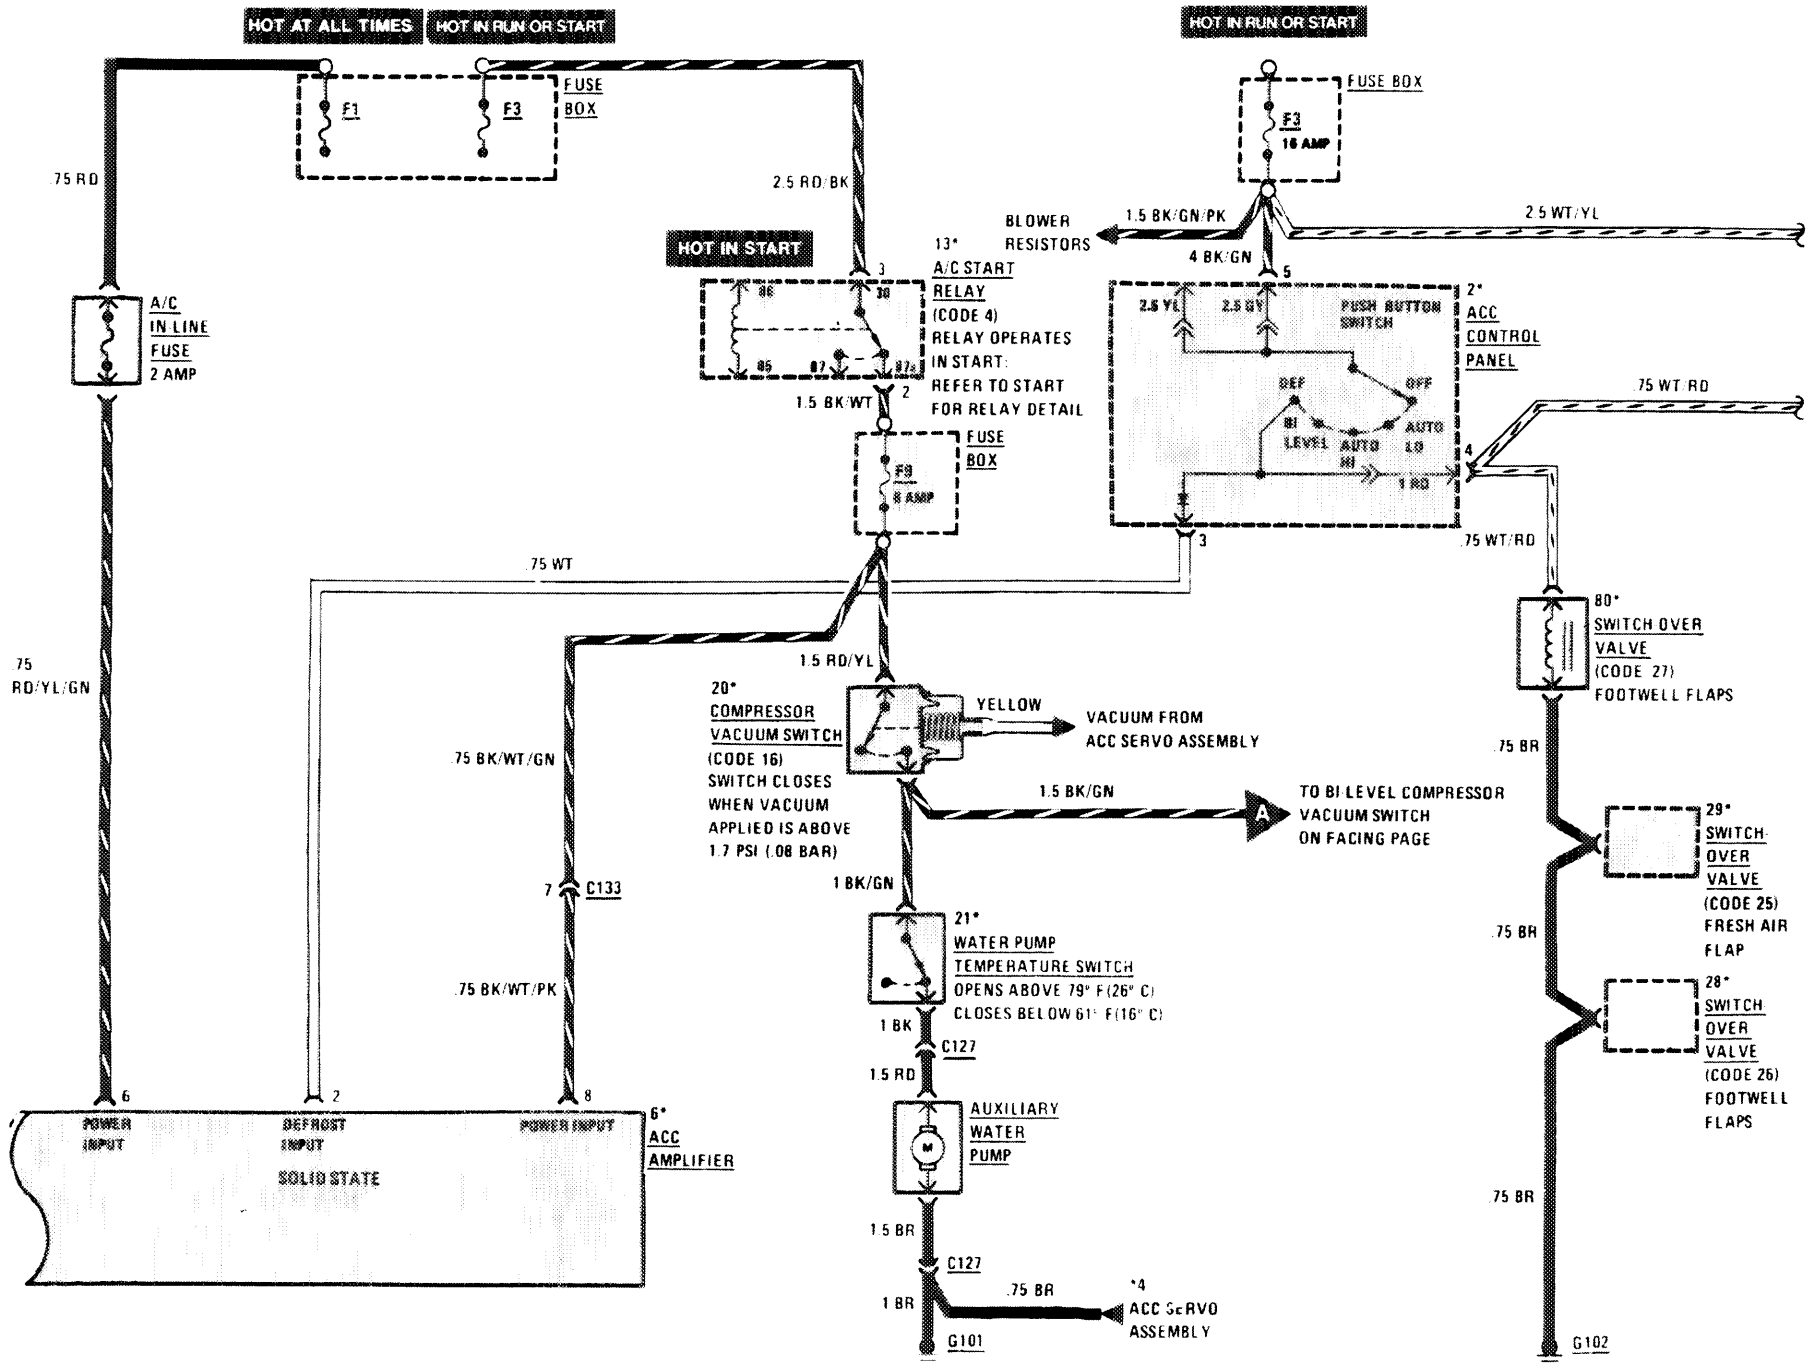


AUTOMATIC CLIMATE CONTROL

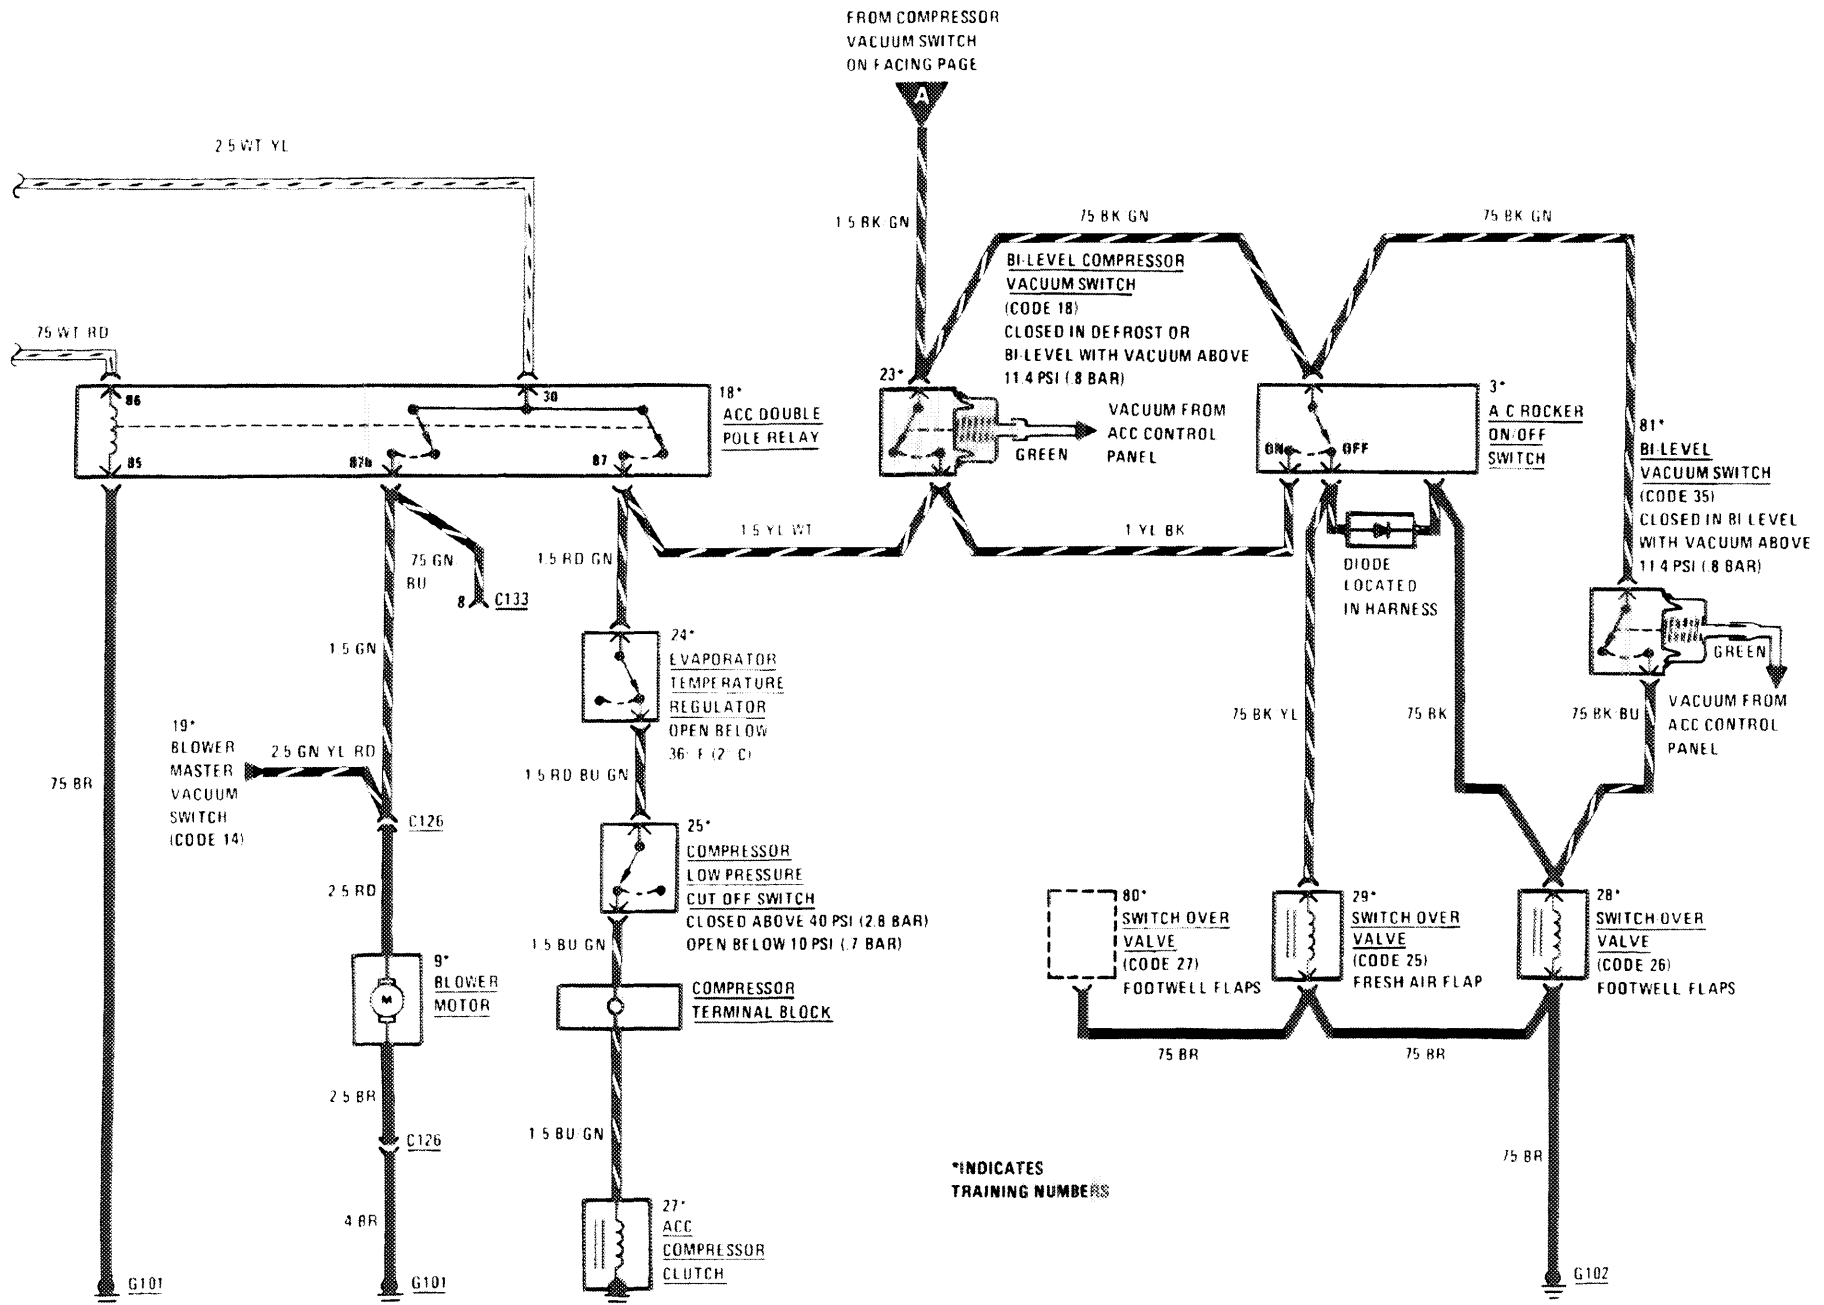


125
280
SE


REAR DEFOGGER / SLIDING ROOF

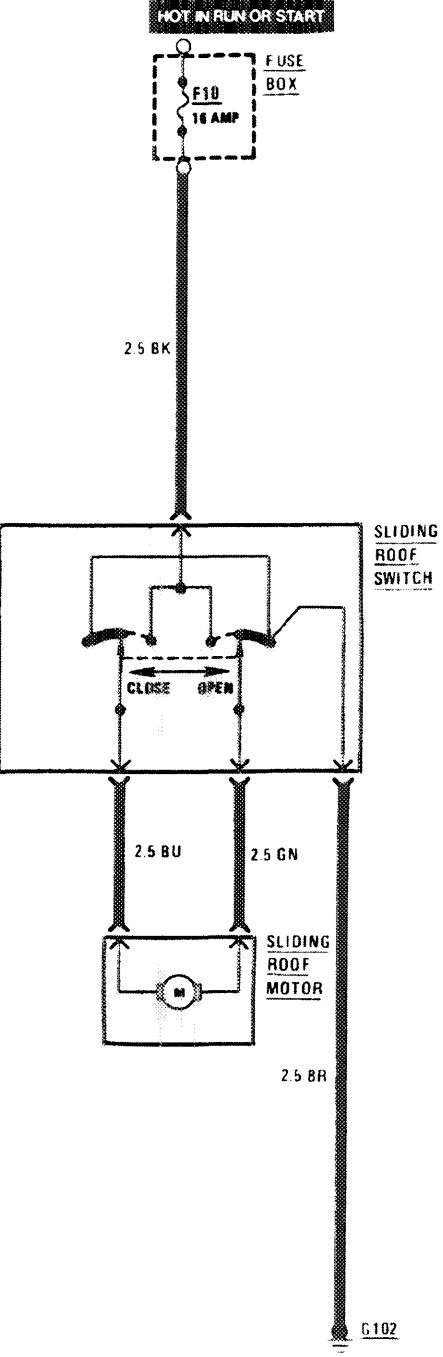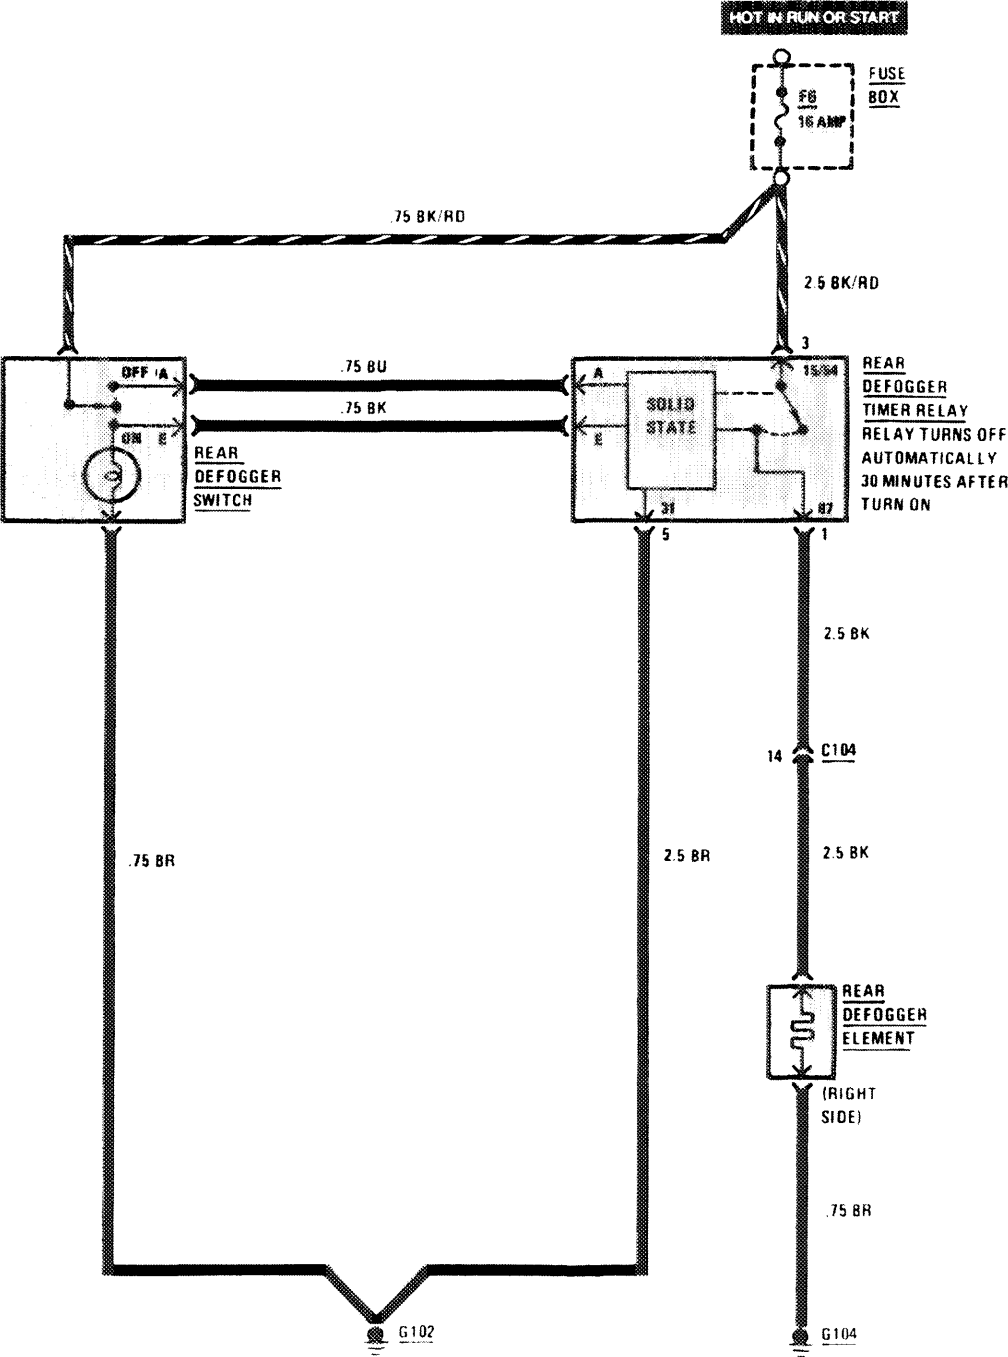


POWER WINDOWS

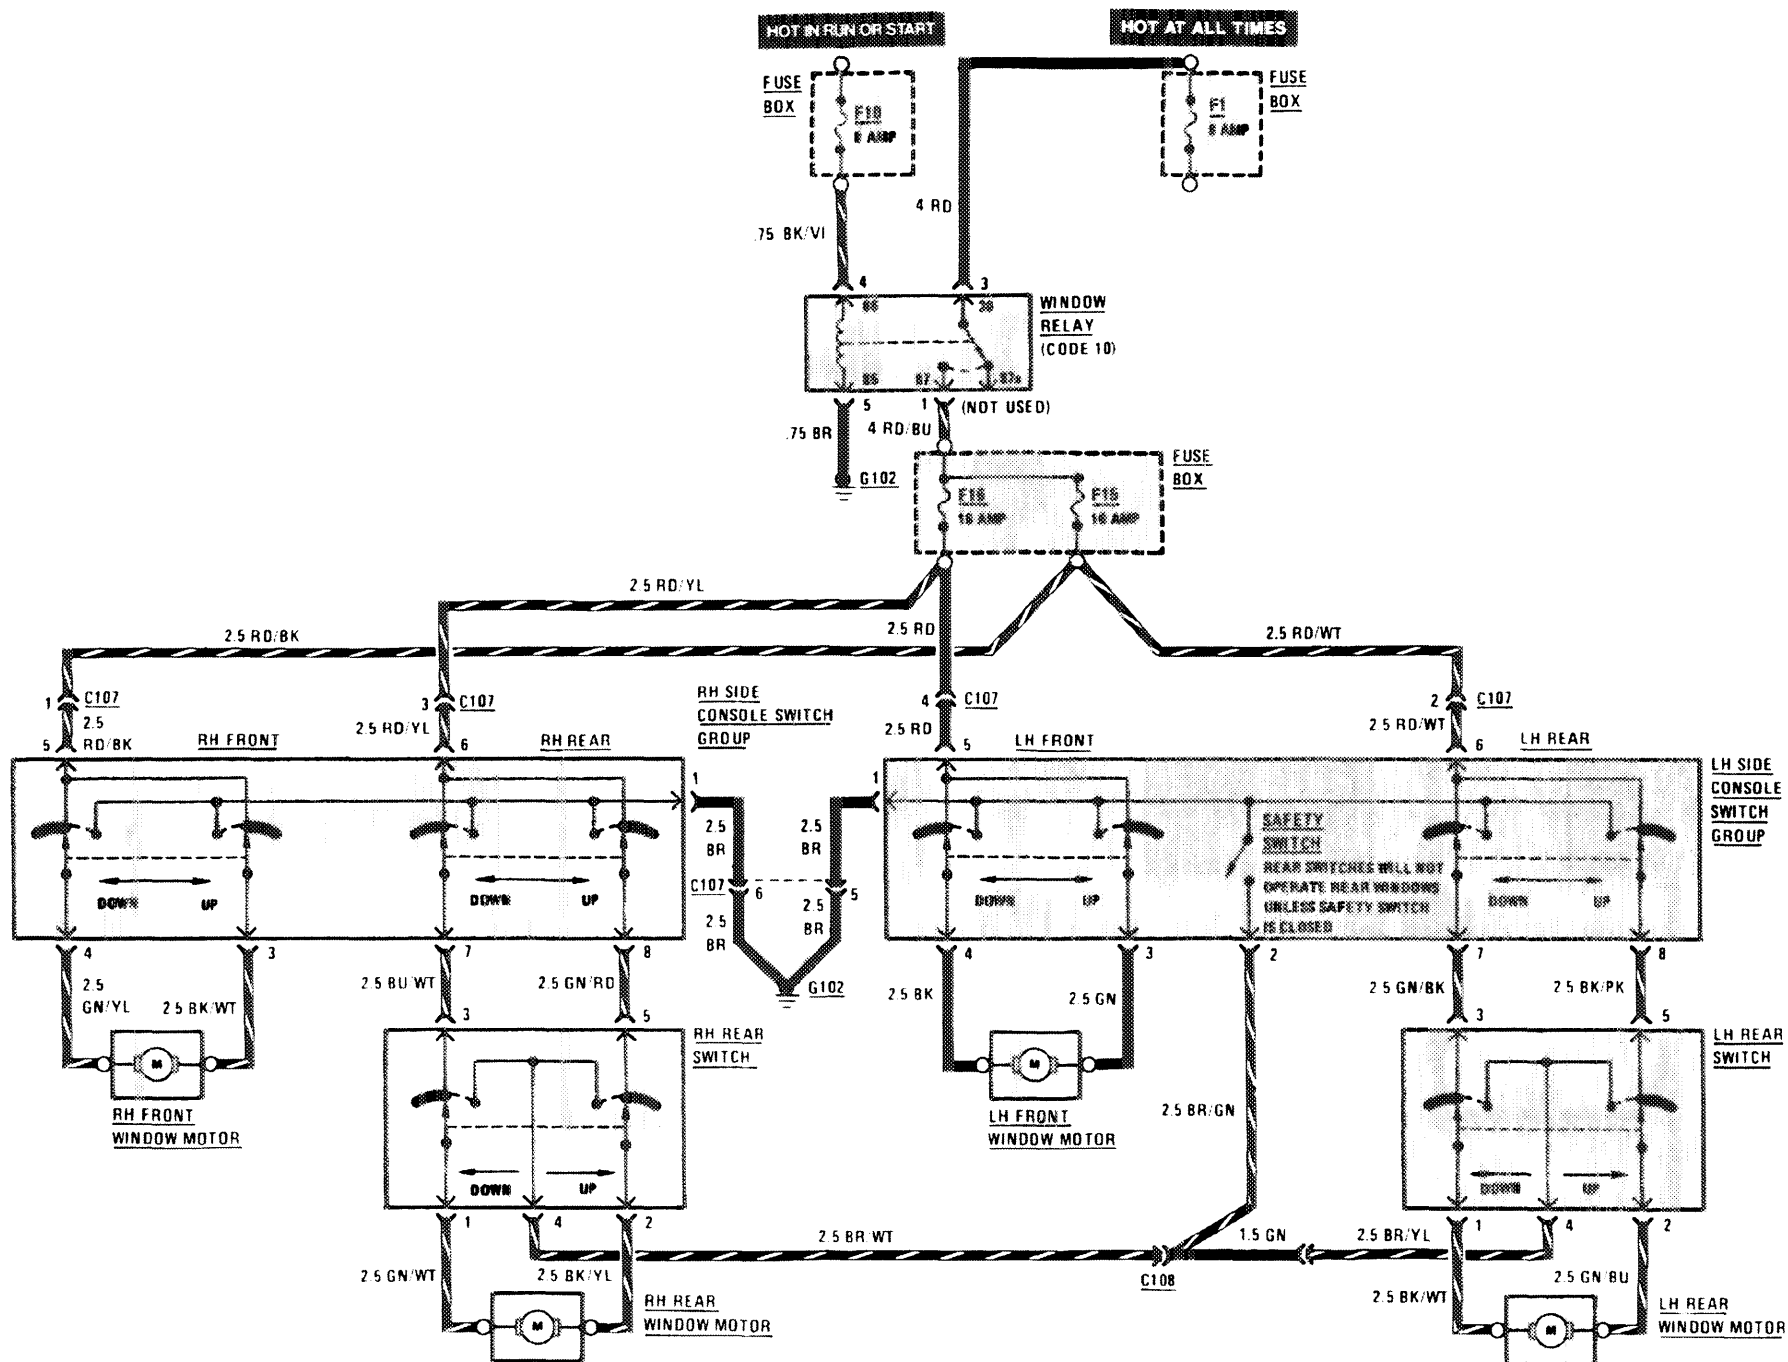


HEATED SEATS

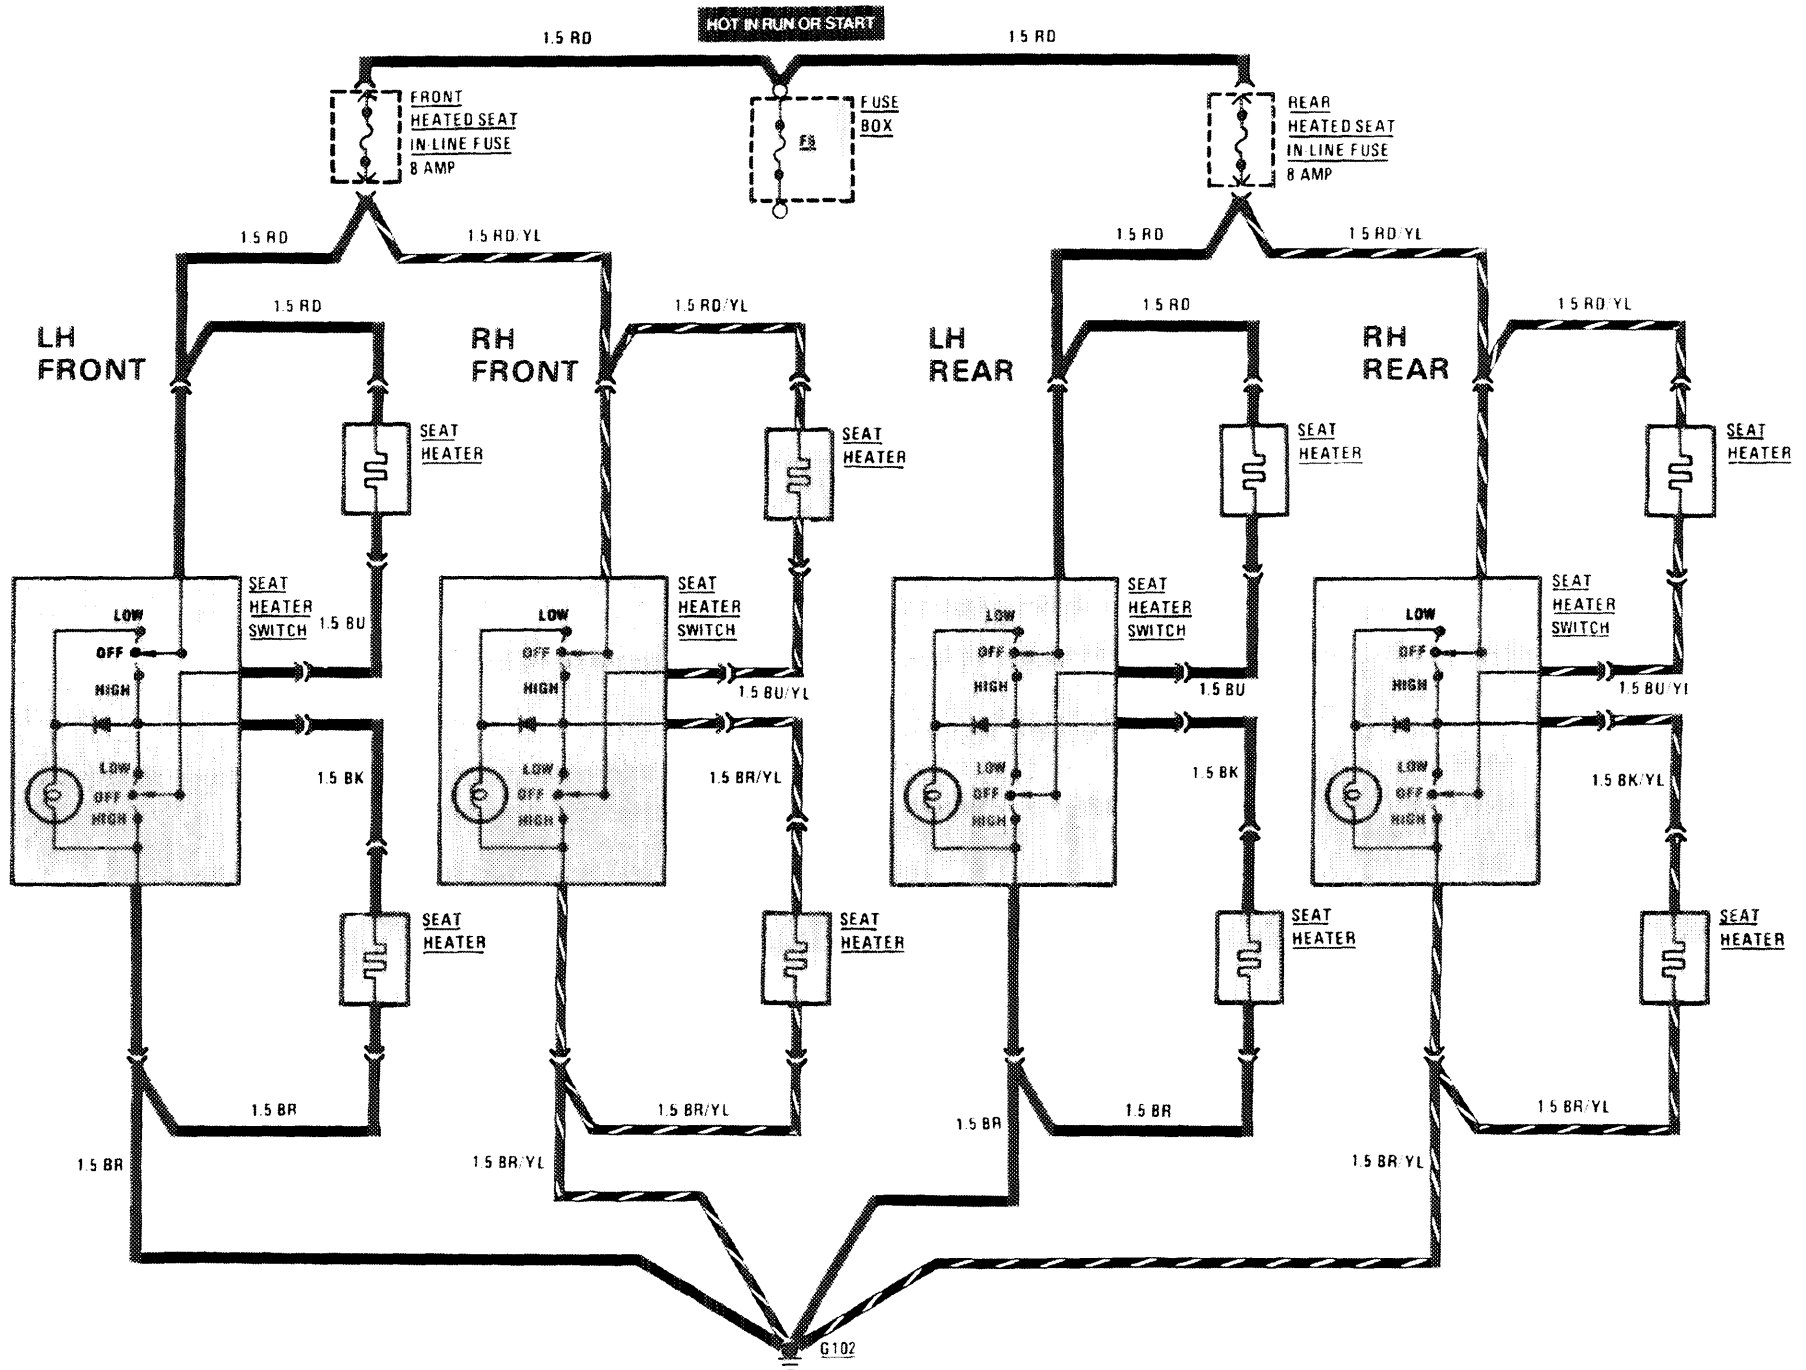

GROUND DISTRIBUTION

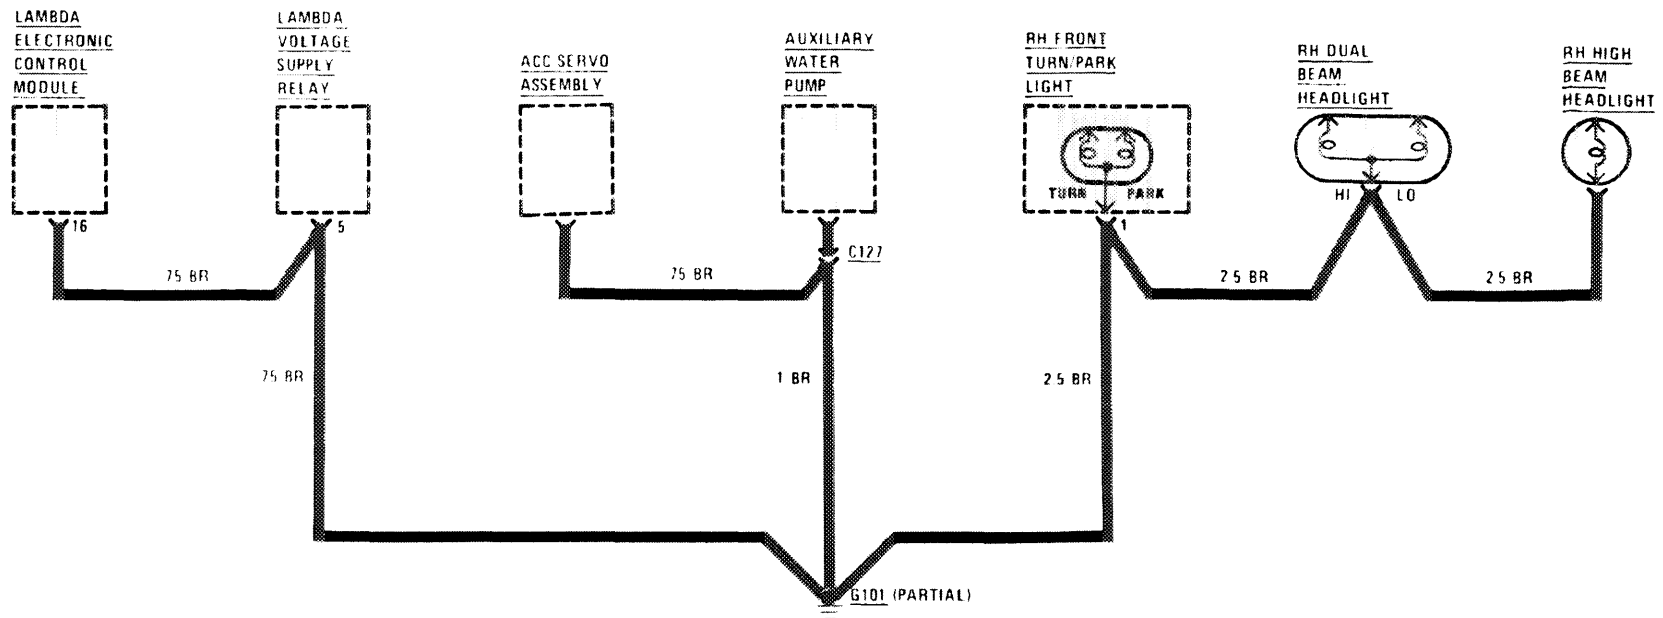



TO RIGHT OF HEADLIGHT ASSEMBLY ON FENDER

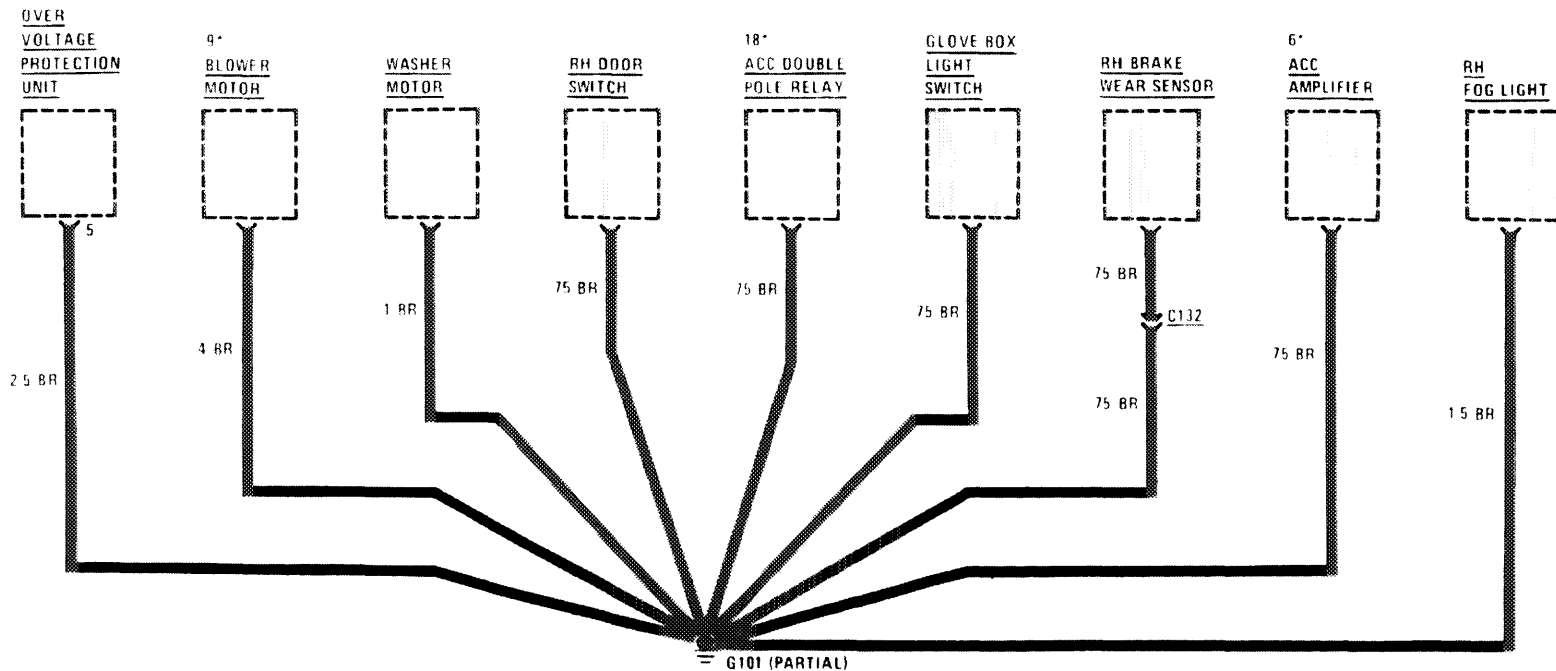

TO RIGHT OF HEADLIGHT ASSEMBLY ON FENDER

* INDICATES TRAINING NUMBER

GROUND DISTRIBUTION

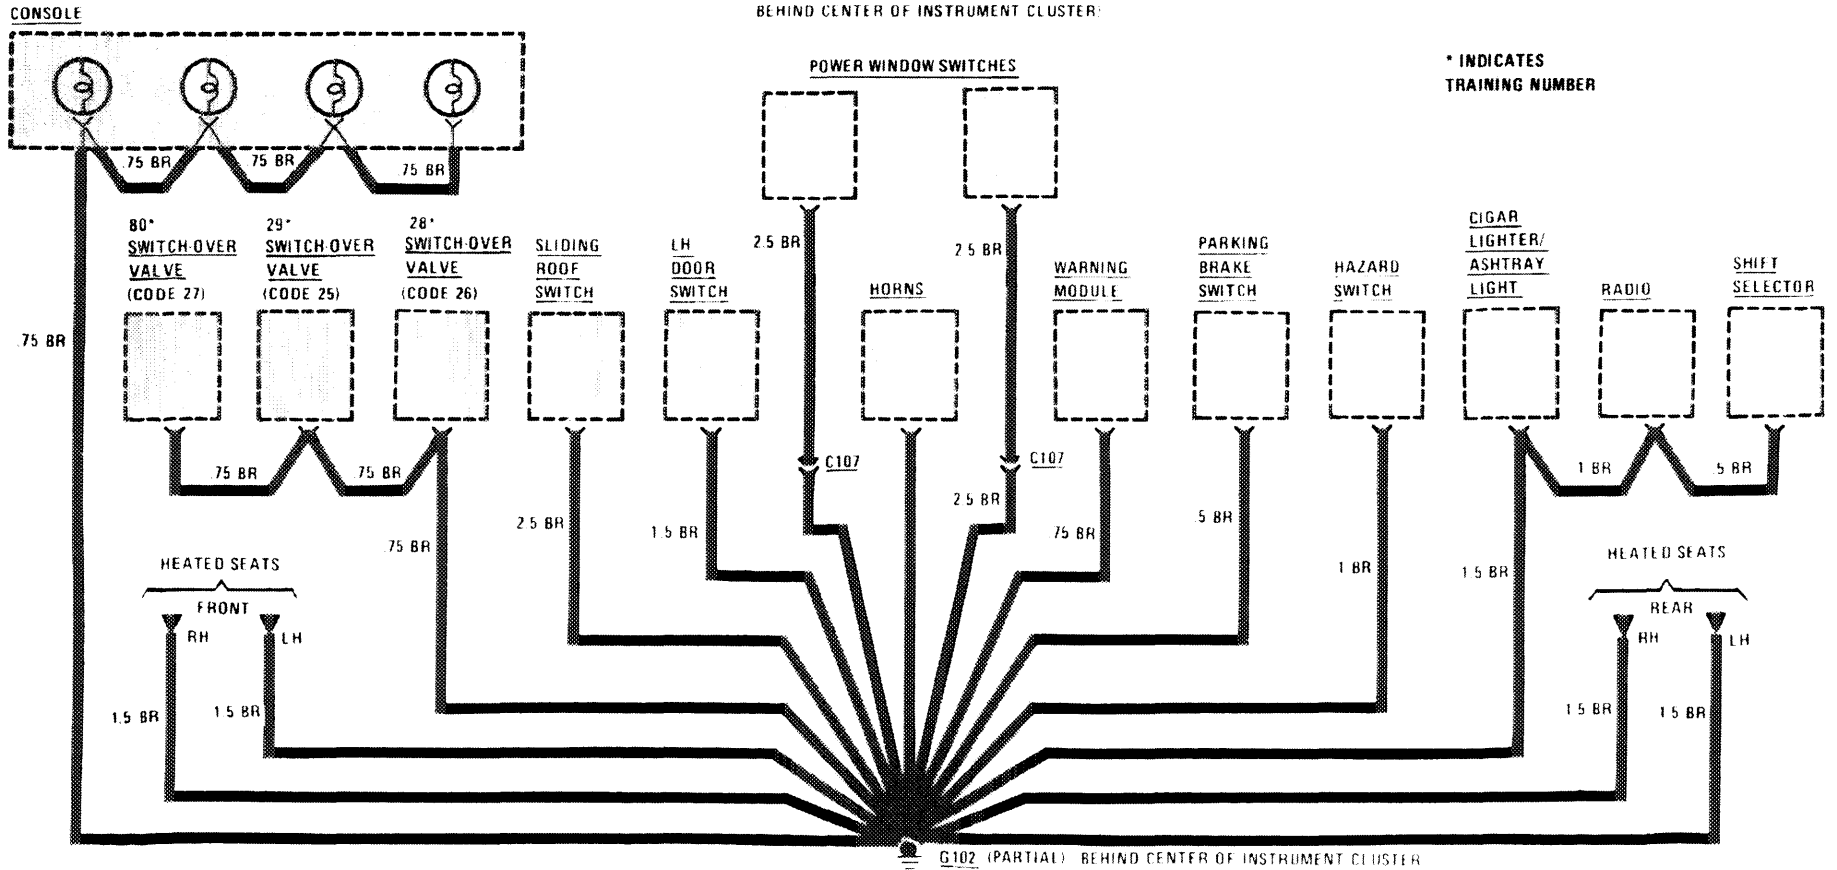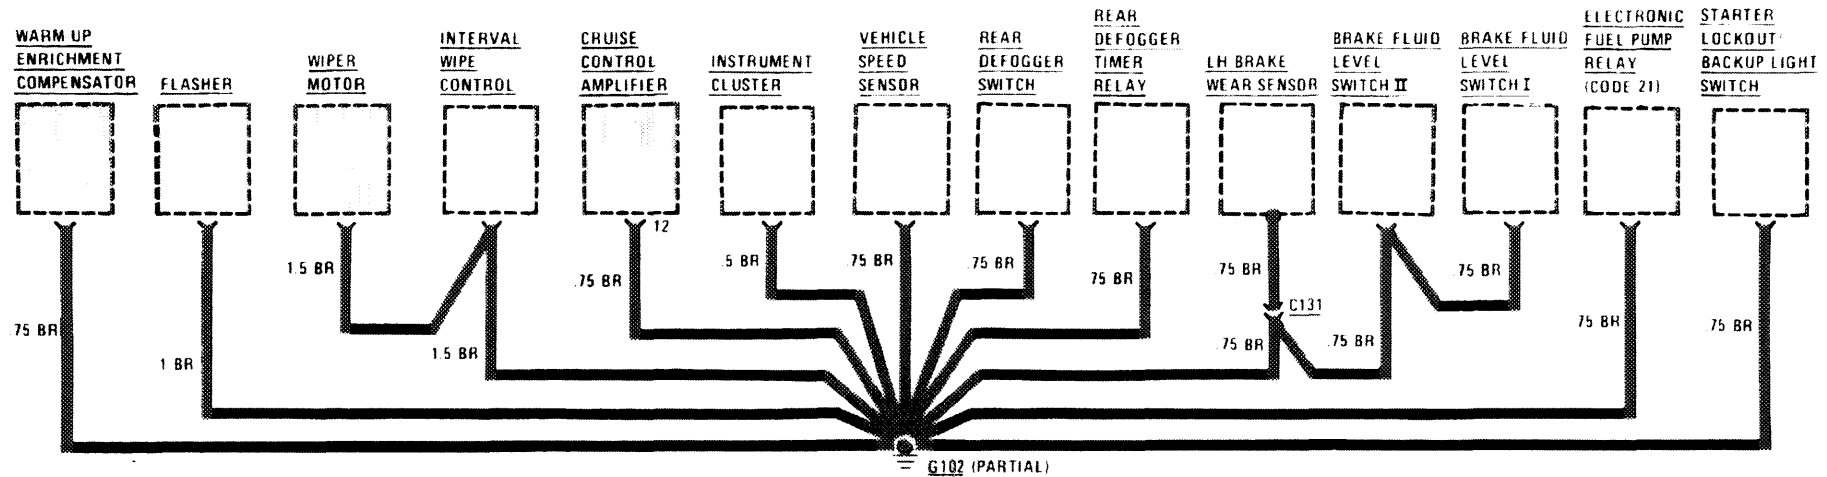

* INDICATES
TRAINING NUMBER

130
280
SE

GROUND DISTRIBUTION

