

03-330 Removal and installation of radial ball bearing and closing ring in crankshaft

Special tools

Internal puller 14.5–18.5 mm



000 589 25 33 00


Countersupport



000 589 33 33 00

Removal

1 Pull ball bearing and closing ring together out of crankshaft by means of puller.

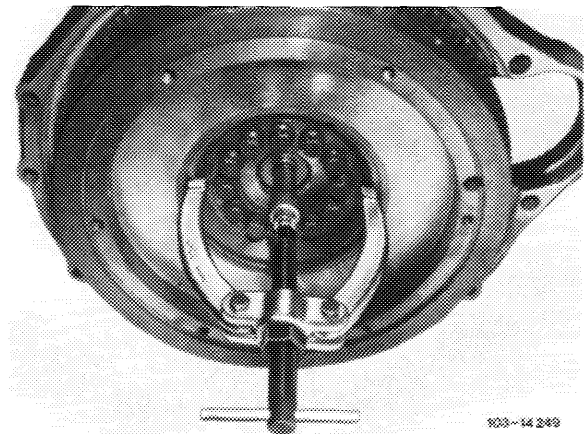

Installation

2 Provide new ball bearing (1) with high-temperature grease and knock into crankshaft by means of a suitable mandrel.

3 Knock-in closing ring (2).

