

Renewal

- 1 Remove and install mixture controller (07.3–200).
- 2 Remove and install fuel distributor (07.3–205).

