


07.4-235 Illustrated table mixture preparation

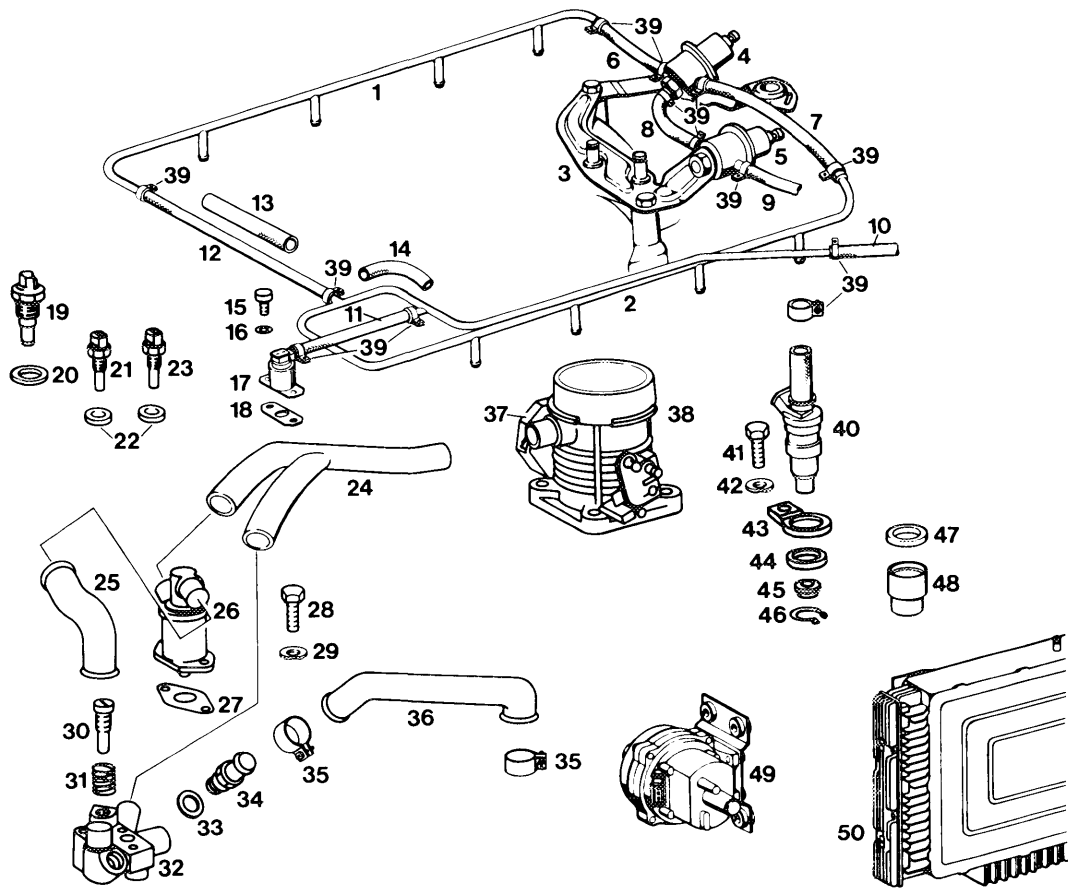

1072-8166

- | | | |
|------------------------------------|-------------------------------|--------------------------------|
| 1 Ring line right-hand engine side | 18 Gasket | 35 Hose clip |
| 2 Ring line left-hand engine side | 19 Thermo-time switch | 36 Contour hose |
| 3 Holder | 20 Sealing ring | 37 Throttle valve switch |
| 4 Pressure regulator | 21 Coolant temperature sensor | 38 Throttle valve housing |
| 5 Diaphragm damper | 22 Sealing ring | 39 Hose clip |
| 6 Fuel hose | 23 Air temperature sensor | 40 Injection valve |
| 7 Fuel hose | 24 Contour hose | 41 Screw |
| 8 Fuel hose | 25 Contour hose | 42 Corrugated washer |
| 9 Fuel hose for return line | 26 Supplementary air valve | 43 Holder |
| 10 Fuel hose for feed line | 27 Gasket | 44 Rubber ring |
| 11 Fuel hose | 28 Screw | 45 Rubber ring |
| 12 Fuel hose | 29 Corrugated washer | 46 Fuse |
| 13 Protective hose | 30 Idle speed adjusting screw | 47 Rubber ring |
| 14 Protective hose | 31 Compression spring | 48 Insulating sleeve |
| 15 Screw | 32 Idle speed air distributor | 49 Intake pipe pressure sensor |
| 16 Corrugated washer | 33 Sealing ring | 50 Control unit |
| 17 Cold starting valve | 34 Connection | |