


Removal

- 1 Loosen hex screw (arrow) and remove lock.
- 2 Disconnect connecting rod and push rod, push longitudinal regulating shaft to the rear and remove. Pay attention to compression spring, plastic bushings and balls for joint.

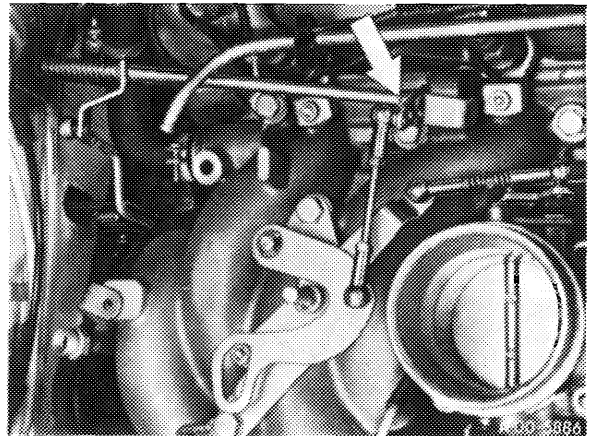

Installation

For installation proceed vice versa. Grease bearing points as well as ball sockets of regulation with Molykote-Longterm 2.

Adjust regulating linkage (07.4–443).